

HMX-R10SN
HMX-R10BN

High Definition Digital Camcorder user manual



imagine the possibilities

Thank you for purchasing this Samsung product.
To receive more complete service, please register
your product at

www.samsung.com/register

SAMSUNG


key features of your full HD camcorder

9.15 Mega pixel CMOS (1/2.33) Adopted

This camcorder's 9.15 mega pixel CMOS sensor catches your important moments and records them in fine detail. Unlike traditional CCD imagers, CMOS sensors require less power, providing efficient battery performance.

Full HD 1080 Viewing Performance

This camcorder uses advanced H.264 compression technology to realize the clearest video quality. Its full HD resolution displays your pictures clearer than normal standard(SD)-quality pictures and maintains a 16:9 aspect ratio that minimizes distortion on a flat HDTV screen.

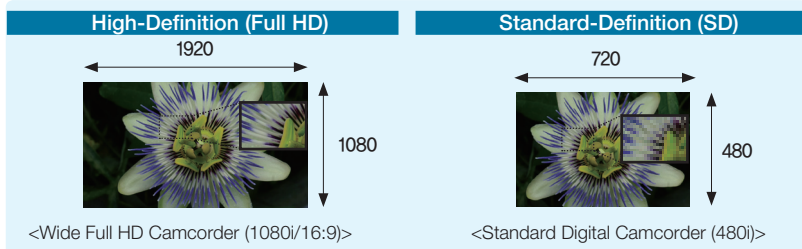

Utilizes Interlace and Progressive system

Your camcorder supports both 1080/60(interlace) and 1080/30(progressive) resolutions to display an image. The interlace system scans odd lines and even lines in the image by turns, while the progressive system scans all lines at once like processing a film image. Accordingly, you can obtain high-quality, shake-free images on a HDTV screen as if you are sitting in the cinema.

High Speed Recording

Recording up to 600 frames per second(fps), your camcorder features much faster shooting speed than standard digital camcorders. This camcorder also features the slow motion playback (up to x 1/160) that is useful for analyzing the contents of your recordings.

Dual Recording

While recording full HD videos, you can capture still images with the simple operation of a button. Capture still images and save them to the storage.

12 Mega pixel Photo Quality

Samsung's Pixel Rising technology yields high resolution still images that retain colors and resolution in extraordinary detail. The result is the 12 megapixel image quality that is equivalent to a digital camera.

Quick Standby Capability

Closing the LCD screen in the STBY mode minimizes the power consumption by switching the camcorder to the Quick On STBY mode. With this quick and efficient function, you can be ready to record quickly without having to power-on the camcorder every time.


Magic Touch

To focus on a subject, just touch the screen and shoot. Your camcorder optimizes the focus and brightness for the touched point, enabling you professional results with this simple operation.



Comfortable, Ergonomic Design

This camcorder is designed for comfort when making long recordings. With this ergonomic design, you can shoot subjects comfortably from any position.

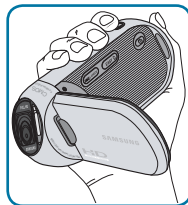

Time Lapse Recording Catches the Moment

You can record a long scene in short intervals. Record artistic, documentary videos including the passage of clouds, blooming flowers etc. Use this function to make UCC(user created contents) videos, educational programs or for other various purposes.





Direct upload of your videos to the Web!

The built-in editing Intelli-studio software installs directly from this camcorder to your PC, enabling convenient connection only with a USB cable. Intelli-studio also allows direct uploading of your contents to YouTube or Flickr. Sharing the contents with your friends is simpler than ever before.

before reading this user manual

SAFETY WARNINGS

What the icons and signs in this user manual mean;

 WARNING	Means that there is a potential risk of death or serious injury.
 CAUTION	Means that there is a potential risk of personal injury or damage to the product.
 CAUTION	To reduce the risk of fire, explosion, electric shock, or personal injury when using your camcorder, follow these basic safety precautions.
	Means hints or referential pages that may be helpful when operating the camcorder.

These warning signs are here to prevent injury to you and others. Please follow them explicitly. After reading this section, keep it in a safe place for future reference.

PRECAUTIONS

Warning!

- This camcorder should always be connected to an AC outlet with a protective grounding connection.
- Batteries shall not be exposed to excessive heat such as sunshine, fire or the like.

Caution

Danger of explosion if battery is incorrectly replaced.
Replace only with the same or equivalent type.

If this power supply is used at 240V ac, a suitable plug adapter should be used.

IMPORTANT INFORMATION ON USE

Before using this camcorder

- **This camcorder records video in H.264 (MPEG4 part10/AVC) format and in High Definition Video (HD-VIDEO) or Standard Definition Video(SD-VIDEO).**
- **Please note that this camcorder is not compatible with other digital video formats.**
- **Before recording important video, make a trial recording.**
Play back your trial recording to make sure the video and audio have been recorded properly.
- **The recorded contents cannot be compensated for:**
 - Samsung cannot compensate for any damage caused when a recording cannot be played back because of a defect in the camcorder or memory card.
Samsung cannot be responsible for your recorded video and audio.
 - Recorded contents may be lost due to a mistake when handling this camcorder or memory card, etc.
Samsung shall not be responsible for compensation for damages due to the loss of recorded contents.
- **Make a backup of important recorded data.**
Protect your important recorded data by copying the files to a PC. We also recommend you to copy it from your PC to other recording media for storage. Refer to the software installation and USB connection guide.
- **Copyrights: Please note that this camcorder is intended for individual**

use only.

Data recorded on the storage media in this camcorder using other digital/analog media or devices is protected by the copyright act and cannot be used without permission of the owner of the copyright, except for personal enjoyment. Even if you record an event such as a show, performance or exhibition for personal enjoyment, it is strongly recommended that you obtain permission beforehand.

About this user manual

Thank you for purchasing this Samsung Camcorder. Please read this user manual carefully before you use the camcorder and keep it handy for future reference. Should your camcorder fail to operate correctly, refer to Troubleshooting.

This User Manual covers HMX-R10SN, HMX-R10BN models.

- The HMX-R10SN, HMX-R10BN do not have built-in flash memory and use memory cards. Although some features of HMX-R10SN, HMX-R10BN models are different, they operate in the same way.
- Illustrations of model HMX-R10SN are used in this user manual.
- The displays in this user manual may not be exactly the same as those you see on the LCD screen.
- Designs and specifications of the camcorder and other accessories are subject to change without any notice.

before reading this user manual



The following terms are used in this manual:

- ‘Scene’ refers to the point where you press Record Start/Stop button to start recording until you press again to pause the recording.
- The terms ‘photo’ and ‘still image’ are used interchangeably with the same meaning.

Notes regarding trademarks

- All the trade names and registered trademarks mentioned in this manual or other documentation provided with your Samsung product are trademarks or registered trademarks of their respective holders.
- The SD logo is a trademark. The SDHC logo is a trademark.
- Microsoft®, Windows®, Windows Vista® and DirectX® are either registered trademarks or trademarks of the Microsoft Corporation in the United States and/or other countries.
- Intel®, Core™, and Pentium® are the registered trademarks or trademarks of the Intel Corporation in the United States and other countries.
- Macintosh, Mac OS are either registered trademarks or trademarks of Apple Inc. in the United States and/or other countries.
- YouTube is a trademark of Google Inc.
- Flickr™ is a trademark of Yahoo.
- HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.
- Adobe, the Adobe logo, and Adobe Acrobat are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries.
- All the other product names mentioned here in may be the trademark or registered trademarks of their respect companies. Furthermore, “TM” and “®” are not mentioned in each case in this manual.

important safety instructions

	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



This symbol indicates that dangerous voltage consisting a risk of electric shock is present within this unit.



This symbol indicates that there are important operating and maintenance instructions in the literature accompanying this unit.

Warning

To Reduce The Risk Of Fire Or Electric Shock, Do Not Expose This Apparatus To Rain Or Moisture.

Caution

Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

To disconnect the apparatus from the mains, the plug must be pulled out from the mains socket, therefore the mains plug shall be readily operable.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachment/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.



important safety instructions

- 15.** Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

16. VENTILATION:

Slots and openings in the cabinet are provided for ventilation to ensure reliable operation of the CAMCORDER and to protect it from overheating. These openings must not be blocked or covered. Never place your CAMCORDER on a bed, sofa, rug, or other similar surface: on or near a radiator or heat register. This CAMCORDER should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

17. POWER SOURCES:

The CAMCORDER should be operated only from the type of power source indicated on the label. If you are not sure of the type of power supply at your home, consult your appliance dealer or local power company. A CAMCORDER is intended to be operated from battery power, or other sources, refer to the operating instructions.

18. GROUNDING OR POLARIZATION:


This CAMCORDER may be equipped with either a polarized 2-wire AC line plug (a plug having one blade wider than the other) or a 3-wire grounding type plug, a plug having a third (grounding) pin. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug still fails to fit, contact your electrician to replace your outlet. Do not defeat the safety purpose of the polarized plug.

19. POWER-CORD PROTECTION:

Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords or plugs, convenient receptacles, and the point where they exit from the unit.

20. OUTDOOR ANTENNA GROUNDING:

CAMCORDER, be sure the antenna or cable system is grounded to provide some protection against voltage surges and built-up static charges, Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire and supporting structure, grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding to conductors, location of antenna-discharge unit, connection to grounding electrodes and requirements for the grounding electrode. See figure below.

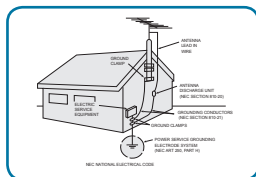

21. LIGHTNING:

For added protection of this CAMCORDER during a lightning storm or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the CAMCORDER due to lightning and powerline surges.

22. POWER LINES:

An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

23. OVERLOADING:

Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

24. OBJECTS AND LIQUIDS:

Never push objects of any kind into this CAMCORDER through openings as they may touch dangerous voltage points or short out a part that could result in a fire or electric shock. Never spill liquids of any kind onto the CAMCORDER. Should spillage occur, unplug unit and have it checked by a technician before use.

25. SERVICING:

Do not attempt to service this CAMCORDER yourself. Opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

26. DAMAGE REQUIRING SERVICE:

Unplug this CAMCORDER from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- a. When the power-supply cord or plug is damaged.
- b. If any liquid has been spilled onto, or objects have fallen into the CAMCORDER.
- c. If the CAMCORDER has been exposed to rain or water.
- d. If the CAMCORDER does not operate normally by following the operating instructions, adjust only those controls that are covered by the operating instructions. Improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the CAMCORDER to its normal operation.
- e. If the CAMCORDER has been dropped or the cabinet has been damaged.
- f. When the CAMCORDER exhibits a distinct change in performance, this indicates a need for service.

27. REPLACEMENT PARTS:

When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer and having the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

28. SAFETY CHECK:

Upon completion of any service or repairs to this CAMCORDER, ask the service technician to perform safety checks to determine that the CAMCORDER is in safe operating order.

- 29.** To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or moisture.

- 29.** To prevent damage which may result in fire or shock hazard, do not expose this appliance to rain or moisture.

- 30.** If this power supply is used at 240V ac, a suitable plug adaptor should be used.

- 31.** This product is covered by one or more of the following U.S. patents:

5,060,220 5,457,669 5,561,649 5,705,762
5,987,417 6,043,912 6,222,983 6,272,096
6,377,524 6,377,531 6,385,587 6,389,570
6,408,408 6,466,532 6,473,736 6,477,501
6,480,829 6,556,520 6,556,521
6,556,522 6,578,163 6,594,208 6,631,110
6,658,588 6,674,697 6,674,957 6,687,455
6,697,307 6,707,985 6,721,243 6,721,493
6,728,474 6,741,535 6,744,713
6,744,972 6,765,853 6,765,853 6,771,890
6,771,891 6,775,465 6,778,755 6,788,629
6,788,630 6,795,637 6,810,210 6,862,256
6,868,054 6,894,963 6,937,552

important safety instructions

USER INSTALLER CAUTION:

Your authority to operate this FCC certified equipment could be voided if you make changes or modifications not expressly approved by this party responsible for compliance to part 15 FCC rules.

NOTE:

(Hg) LAMP(S) INSIDE THIS PRODUCT CONTAIN MERCURY AND MUST BE RECYCLED OR DISPOSED OF ACCORDING TO LOCAL, STATE OR FEDERAL LAWS. For details see lamprecycle.org, eiaa.org, or call 1-800-Samsung (7267864)

CALIFORNIA USA ONLY

This Perchlorate warning applies only to primary CR (Manganese Dioxide) Lithium coin cells in the product sold or distributed **ONLY** in California USA

" Perchlorate Material - special handling may apply, See www.dtsc.ca.gov/hazardouswaste/perchlorate."

NOTE:

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help and for additional suggestions. The user may find the following booklet prepared by the Federal Communications Commission helpful: "How to Identify and Resolve Radio-TV Interference Problems." This Booklet is available from the U.S. Government Printing Office, Washington, D.C. 20402, Stock No. 004-000-00345-4.

FCC Warning

The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

This device complies with Part 15 of FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

safety information

The safety precautions illustrated below are to prevent personal injury or material damages. Heed all instructions carefully.

⚠ WARNING
Means that there is a potential risk of serious personal injury.

! CAUTION
Means that there is a potential risk of personal injury or damage to the product

⊘ Prohibited action.

⊘ Do not disassemble the product.

🔌 Unplug from the power supply.

⊘ Do not touch the product.

! This precaution must be kept.

 
⚠ WARNING




Do not overload outlets or extension cords as this may result in abnormal heat or fire.



Using the camcorder at temperatures over 60°C (140°F) may result in fire. Keeping the battery at a high temperature may cause an explosion.



 Do not allow water or metal and inflammable matter to enter the camcorder or AC power adaptor. Doing so may pose a fire hazard.



No sand or dust! Fine sand or dust entering the camcorder or AC power adaptor could cause malfunctions or defects.



No oil! Oil entering the camcorder or AC power adaptor could cause electric shock, malfunctions or defects.



Do not aim the camcorder directly into the sun. Doing so could cause eye injuries, as well as lead to malfunctioning of internal parts of the product.



Do not bend the powercord or damage the AC power adaptor by pressing on it with a heavy object. There may be a risk of fire or electric shock.

 


Do not disconnect the AC adaptor by pulling on its power-cord, as this could damage the power-cord.



Do not use the AC adaptor if it has damaged, split or broken cords or wires. Doing so may cause fire or electric shock.


safety information



Do not connect the AC adaptor unless the plug can be fully inserted with no part of the blades exposed.



 Do not dispose of battery pack in a fire as it may explode.



Never use cleaning fluid or similar chemicals. Do not spray cleaners directly on the camcorder.



 
Keep the camcorder away from water when used near the beach or pool or when it rains. There is a risk of malfunction or electric shock.



Keep the used lithium battery or memory card out of the reach of children. If the lithium battery or memory card is swallowed by children, consult physician immediately.




Do not fire the flash directly in front someone's eyes (especially infants). Doing so may cause impaired vision.



Do not plug or unplug the power cord with wet hands. There is a risk of electric shock.



 Keep the power-cord unplugged when not in use or during lightning storms. There is a risk of fire.



When cleaning the AC adaptor, unplug the power-cord. There is a risk of malfunction or electric shock.



If the camcorder makes an abnormal sound, or smell or smokes, unplug the power-cord immediately and request service from a Samsung service center. There is a risk of fire or personal injury.

 


If the camcorder malfunctions, immediately detach the AC adaptor or battery from the camcorder. There is a risk of fire or injury.




Do not attempt to disassemble, repair, or reform the camcorder or the AC adaptor to avoid a risk of fire or electric shock.


⚠ CAUTION




Do not press the surface of the LCD with force, or hit it with a sharp object. If you push the LCD surface, display unevenness may occur.

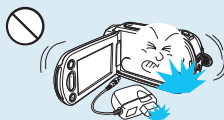

Do not drop or expose the camcorder, battery pack, AC adaptor or other accessories to severe vibrations or impact. This may cause a malfunction or injury.

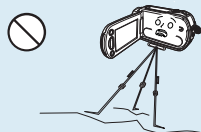


Do not use the camcorder on a tripod (not supplied) in a place where it is subject to severe vibrations or impact.

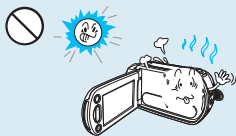


Do not use the camcorder near direct sunlight or heating equipment. This may cause a malfunction or injury.



Do not leave the camcorder in a closed vehicle for a long time, where the temperature is very high.

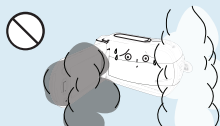

 
Do not expose the camcorder to soot or steam. Thick soot or steam could damage the camcorder case or cause a malfunction.



Do not use the camcorder near dense exhaust gas generated by gasoline or diesel engines, or corrosive gas such as hydrogen sulphide. Doing so may corrode the external or internal terminals, disabling normal operation.



 Do not expose the camcorder to insecticide. Insecticide entering the camcorder could fail the product to operate normally. Turn the camcorder off and cover it with vinyl sheet, etc. before using insecticide.




Do not expose the camcorder to sudden changes in temperature or a humid place. There is also a risk of defect or electric shock when using outdoors during lightning storms.


safety information



 Do not place the camcorder with the open LCD screen down.



Do not wipe the camcorder body with benzene or thinner. The exterior coating could peel off or the case surface could deteriorate.

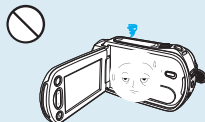

Do not leave the LCD screen open when not using the camcorder.



Do not hold the camcorder by the LCD monitor when lifting it. The LCD screen could detach and the camcorder may fall.




Do not use the camcorder near TV or radio: This could cause noise on the TV screen or to radio broadcasts.




Do not use the camcorder near strong radio waves or magnetism such as speakers and a large motor. Noise could enter video or audio that are being recorded.



Use Samsung-approved accessories only. Using products from other manufacturers may cause overheating, fire, explosion, electric shock or personal injuries caused by abnormal operation.

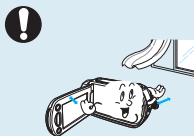

Place the camcorder on a stable surface and a place with ventilation openings.

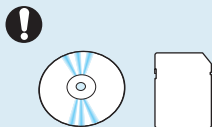

Keep important data separately. Samsung is not responsible for data loss.

contents

2	Key features of your full HD camcorder
4	Before reading this user manual
i	Important safety instructions
7	Safety information
11	Contents

PREPARATION

15

15	Quick start guide
	You can record videos or photos on a memory card!
19	What's included with your camcorder
20	Getting to know the camcorder
20	Location of controls
22	Identifying the screen displays
26	Getting started
26	Using the battery pack
28	Checking the battery state
31	Basic operation of the camcorder
31	Turning your camcorder on/off
32	Switching to the power saving mode
33	Setting the operation modes
33	Using the display([□]/i/CHECK) button
34	Using the touch panel
35	First time settings
35	Setting the time zone and date/ time for the first time
36	Selecting the language
37	Getting ready to start recording
37	Inserting and removing a memory card (not supplied)
38	Selecting a suitable memory card
41	Using the hand strap
41	Adjusting the LCD screen
42	Basic camcorder positioning

BASIC OPERATION

43

43	Basic Recording
43	Recording videos
45	Capturing photos in video record mode (dual recording)
46	Recording photos
47	Recording with ease for beginners (EASY Q mode)

contents

48	Capturing photos while playing back videos
49	Zooming
50	Basic Playback
50	Changing the playback mode
51	Playing back videos
53	Viewing photos
54	Viewing a slide show
55	Zooming during playback

ADVANCED OPERATION

56

56	Advanced Recording
56	Handling menus and quick menus
57	Menu items
60	Quick menu items
61	iSCENE
62	Resolution
63	Quality
64	Slow Motion
65	Sharpness
65	White Balance
67	ISO
68	Aperture
69	Shutter
69	EV
70	3D-NR
70	Super C.Nite
71	Back Light
71	Dynamic Range
72	Flash
73	Focus
74	Face Detection
75	Magic Touch
76	Metering
77	Anti-Shake(EIS)
78	Digital Effect
79	Fader
80	Super Macro
81	Wind Cut
81	MIC Level

ADVANCED OPERATION

56

82	Digital Zoom
83	Cont. Shot
84	Bracket Shot
84	Self Timer
85	Time Lapse REC
87	Quick view
88	Guideline
89	Advanced playback
89	Play Option
89	Highlight
90	Cont. Capture
90	File Info
91	System setting
91	Date/Time Set
92	Date/Time Display
93	Date Type
93	Time Type
94	File No.
95	Time Zone
96	LCD Control
96	LCD Enhancer
97	Auto LCD Off
97	Booting Mode
98	Quick On STBY
99	PC Software
99	Storage Info
100	Format
101	Beep Sound
101	Shutter Sound
102	Auto Power Off
102	Rec Lamp
103	USB Connect
103	TV Connect Guide
104	TV Display
104	TV Type
105	Analog TV Out
105	Default Set
106	Demo
106	Anynet+ (HDMI-CEC)

contents

EDITING VIDEO

107

107 Editing video clips

- 107 Deleting a section of a video
- 108 Dividing a video
- 109 Combining videos

110 Editing the playlist

- 110 Playlist
- 111 Creating the playlist
- 112 Arranging videos in the playlist
- 113 Deleting videos from the playlist

114 File management

- 114 Protection from accidental erasure
- 115 Deleting files

116 Printing photos

- 116 DPOF printing setting
- 117 Direct printing with a PictBridge printer

EXTERNAL CONNECTIONS

119

119 Connecting to a TV

- 119 To connect to a high definition TV
- 121 Connecting to a regular TV
- 123 Viewing on a TV screen

124 Dubbing videos

- 124 Dubbing to a vcr or DVD/HDD recorder

USING A COMPUTER

125

125 Using with a Windows computer

- 125 Checking your computer type
- 126 What you can do with a Windows computer
- 127 Using the Intelli-studio program
- 133 Using as a removable storage device

OTHER INFORMATION

136

136 Warning indicators and messages

140 Troubleshooting

148 Maintenance & additional information

- 148 Maintenance
- 149 Additional information
- 150 Using your camcorder abroad

151 Specifications

quick start guide



This quick start guide introduces the basic operation and features of your camcorder. See the reference pages for more information.

You can record videos or photos on a memory card!


You can record videos in H.264 format that is convenient to email and share with your friends and family. You can also take photos with your camcorder.

STEP1: Get ready

1. Insert a memory card. ↪ page 37
 - You can use commercially available SDHC(SD High Capacity) or SD memory cards with this camcorder.
2. Insert the battery into the battery slot.
↪ page 26

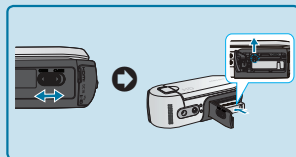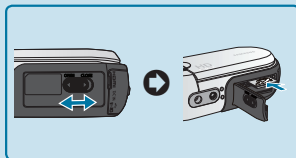

STEP2: Record with your camcorder

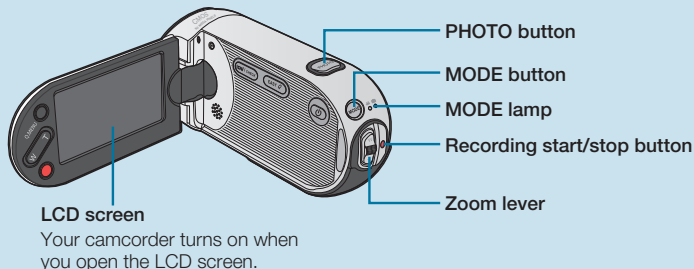


quick start guide

Recording videos with HD (high definition) image quality

Your camcorder is compatible with H.264 format “1920x1080/60i” which provides highly-detailed, beautiful images. ➔ page 62

1. Open the LCD screen to turn on the video (📹) indicator.
 - Your camcorder turns on when you open the LCD screen.
2. Press the **Recording start/stop** button.
 - To stop recording, press the **Recording start/stop** button.

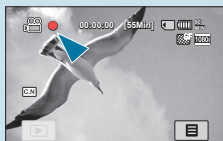

Recording photos

1. Open the LCD screen.
2. Press the **MODE** button until the (📷)(photo) indicator lights up.
3. Press **PHOTO** button lightly to adjust the focus, then press it fully (a shutter click sounds).



- Using 'Quick On STBY' by opening/closing the LCD screen. ➔ page 98 : When you close the LCD screen during standby, your camcorder goes to Quick On STBY mode (power saving mode). You can start recording quickly when you open the LCD screen.



- Your camcorder is compatible with H.264 format “1920x1080/60i” which provides highly-detailed, beautiful images. ➔ page 62
- The default setting is “[HD]1920x1080/60i(SF)”. You can also record with SD(standard definition) video quality.
- You can also take photos while recording videos. ➔ page 45

STEP3: Play back videos or photos

Viewing the LCD screen of your camcorder

Your camcorder is compatible with H.264 format "1920x1080/60i" which provides highly-detailed, beautiful images. ➔ page 62

1. Touch the Play (▶) tab on the screen in STBY mode.
2. Touch the thumbnail (📺HD / 📺SD / 📷) tab, then touch the desired image.



Viewing on a high definition TV

- You can enjoy HD (high definition) videos. ➔ page 119~120



You can also play back videos on a SD (standard definition) image quality TV.
➔ page 121

STEP4: Save recorded videos or photos

Simple and fun! Enjoy the various features of Intelli-studio on your Windows computer.

Using the Intelli-studio program built in your camcorder, you can import video/photos onto your computer, edit or share the videos/photos with your friends. For details, see page 125.



quick start guide

Importing and viewing videos/photos from the camcorder to your PC

1. Launch the Intelli-studio program by connecting the camcorder to your PC via USB cable.
2. Click **"Import folder"** to import the video or photo files from your PC to the Intelli-studio program. And you can see the files location on the Intelli-studio browser.



3. You can double-click on the file you would like to start playback.

Sharing the videos/photos onto YouTube/Flickr

Share your contents with the world, by uploading photos and videos directly to web site with one click.


Click **"Share"** → **"Add"** tab on the browser. ➔ page 130



The Intelli-studio runs automatically once the camcorder is connected to a Windows computer (when you specify **"PC Software: On"**). ➔ page 99

STEP5: Delete videos or photos

If the storage media is full, you cannot record new videos or photos. Delete videos or photos data that has been saved on a computer from the storage media. Then you can record new videos or photos on newly freed up space.

Touch the **Play**() tab → **Menu**() tab → **"Delete"** on the LCD screen.

➔ page 115

WHAT'S INCLUDED WITH YOUR CAMCORDER

Your new camcorder comes with the following accessories. If any of these items is missing from your box, call Samsung's Customer Care Center.

Checking your accessories



**Battery pack
(IA-BH125C)**
(AD82-00378A)



AC adapter
(AD82-00376A)



Power cord
(AD82-00377A)



Component/AV cable
(AD82-00374A)



USB cable
(AD82-00375A)



 
User manual CD
(AD82-00381A)



Quick start guide
(AD82-00383A)



Pouch
(AD82-00380A)



Hand strap
(AD82-00379A)



Mini HDMI cable
(Optional)
(AD39-00159A)




- The exact appearance of each item may vary by model.
- The contents may vary depending on the sales region.
- Parts and accessories are available for purchase at your local Samsung dealer. SAMSUNG is not responsible for reduced battery life time or malfunctions caused by any unauthorized use of accessories such as the AC adaptor or the batteries.
- Your camcorder includes the user manual CD and quick start guide(printed). For more detailed instructions, refer to the user manual (PDF) on the provided CD.

getting to know the camcorder

LOCATION OF CONTROLS


Front/Left/Right

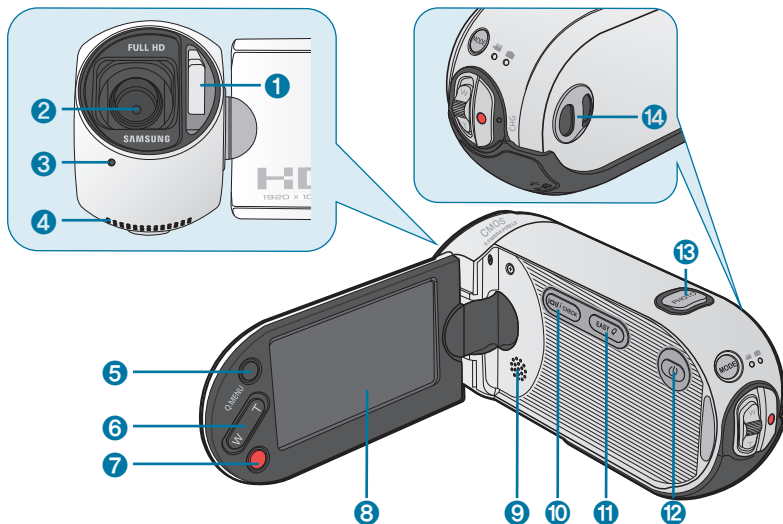




- | | |
|-------------------------------|---------------------------------|
| 1 Built-in flash | 8 TFT LCD screen (Touch screen) |
| 2 Lens | 9 Built-in speaker |
| 3 Recording indicator | 10 Display (I/O/iCHECK) button |
| 4 Internal microphone | 11 EASY Q button |
| 5 Q.MENU button | 12 Power button |
| 6 Zoom (W/T) button | 13 PHOTO button |
| 7 Recording start/stop button | 14 Hand strap hook |

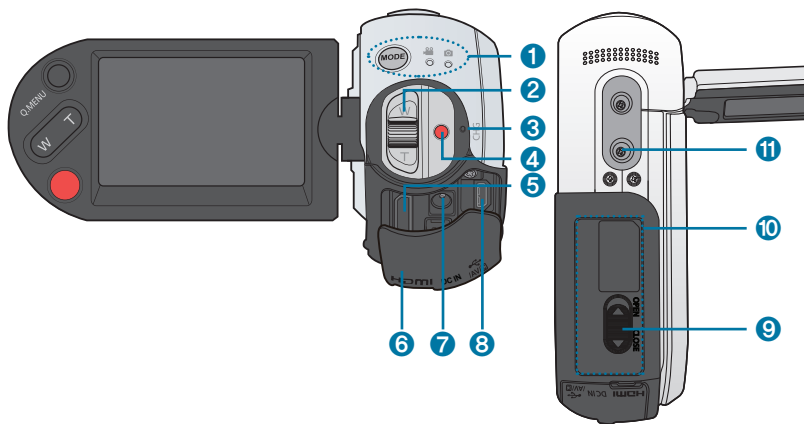

Rear/Bottom



- 1 MODE button/Mode indicator
(Video() /Photo() mode)
- 2 Zoom(W/T) lever
- 3 Charging(CHG) lamp
- 4 Recording start/Stop button
- 5 HDMI jack



- 6 Jack cover
- 7 DC IN jack
- 8  (USB, Component/AV) jack
- 9 Battery/Memory card cover switch
- 10 Battery/Memory card cover
- 11 Tripod receptacle

getting to know the camcorder


IDENTIFYING THE SCREEN DISPLAYS

 

The available functions vary depending on the selected operation mode, and different indicators appear depending on the setting values. The indicators below only appear in the video record mode.

PRECHECK!

- This On Screen Display (OSD) is shown in Video record () mode only.
- Select the Video () mode by pressing the **MODE** button. → page 33

Video record mode

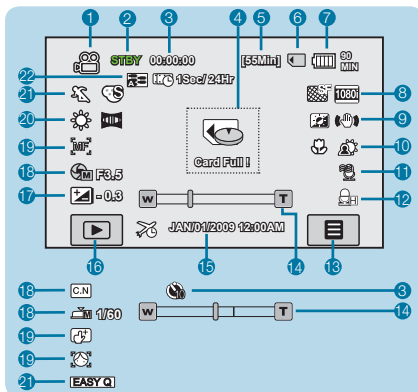


- | | |
|--|---|
| 1 Video record mode | 14 Optical zoom/Digital zoom bar |
| 2 Operating status (STBY (standby)/  (recording)) | 15 Date/Time |
| 3 Time counter(video recording time)/Self Timer * | 16 Play () tab |
| 4 Warning indicators and messages | 17 EV* |
| 5 Remaining recordable time | 18 Manual aperture*/Manual shutter*/
Super C.Nite |
| 6 Storage media (memory card) | 19 Manual Focus*/Touch Point*/
Face Detection |
| 7 Battery info.(remaining battery level/time) | 20 White balance, Fader* |
| 8 Resolution | 21 tSCENE / EASY Q, Digital effect |
| 9 LCD Enhancer, Anti-Shake(EIS) | 22 Analog TV Out (when component/AV cable is
connected), Time Lapse REC* |
| 10 Super Macro*, Back Light | |
| 11 Wind Cut | |
| 12 MIC Level | |
| 13 Menu tab | |




- Functions marked with * will not be retained when the camcorder is powered back on.
- The on-screen indicators are based on an 8GB SDHC memory card capacity.
- The above screen is illustrated for explanation purposes and may differ from the actual display.
- For warning indicators and messages, see pages 136~139
- The above illustrated items and their positions can be changed without notice for the purpose of better performance.
- The total number of recordable photos is counted based on available space on the storage media.

The available functions vary depending on the selected operation mode, and different indicators appear depending on the setting values. The indicators below only appear in the video play mode.

PRECHECK!

- This On Screen Display (OSD) is shown in Video playback () mode only.
- Select the Play () tab on the LCD screen to select the playback mode ➔ page 33

Video play mode

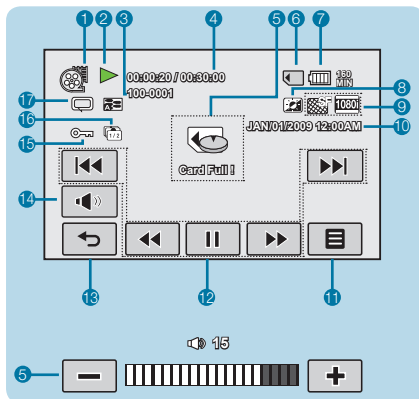

- | | |
|--|---|
| 1 Video play mode | 10 Date/Time |
| 2 Operating status (Play/Pause) | 11 Menu tab |
| 3 File name (file number) | 12 Playback control tabs (Skip/Search/
Play/Pause/Slow Playback) |
| 4 Playback time/Recorded time | 13 Return tab |
| 5 Warning indicators and messages/
Volume control | 14 Volume tab |
| 6 Storage media (memory card) | 15 Protect |
| 7 Battery info.(Remaining battery level/
time) | 16 Cont. Capture |
| 8 LCD Enhancer | 17 Play Option, Analog TV Out (when
component/AV cable is connected) |
| 9 Resolution | |



- The playback control tabs disappear a few seconds after a video playback. Touch anywhere on the screen to display them again.
- For warning indicators and messages, see pages 136~139

getting to know the camcorder


IDENTIFYING THE SCREEN DISPLAYS

The available functions vary depending on the selected operation mode, and different indicators appear depending on the setting values. The indicators below only appear in the photo record mode.

PRECHECK!

- This On Screen Display (OSD) is shown in Photo record (📷) mode only.
- Select the Photo (📷) mode by pressing the **MODE** button. ➡ page 33

Photo record mode

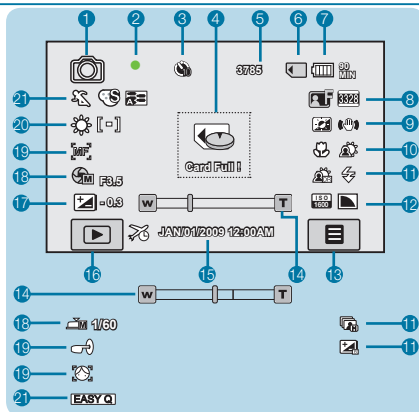

- | | |
|---|---|
| 1 Photo record mode | 12 ISO, Sharpness |
| 2 Focus indicator (half shutter) | 13 Menu tab |
| 3 Self Timer* | 14 Optical zoom/Digital zoom bar |
| 4 Warning indicators and messages | 15 Date/Time |
| 5 Image counter (total number of recordable photo images) | 16 Play tab |
| 6 Storage media (memory card) | 17 EV* |
| 7 Battery info.(remaining battery level/time) | 18 Manual aperture*/Manual shutter* |
| 8 Quality, Resolution | 19 Manual focus*/Magic Touch*/Face Detection |
| 9 LCD enhancer, Anti-Shake (EIS) | 20 White Balance, Metering |
| 10 Super Macro*, Back Light | 21 tSCENE mode/EASY Q, Digital effect, Analog TV Out (when component/AV cable is connected) |
| 11 Dynamic Range*/Cont. Shot/Bracket Shot*, Flash | |




- Functions marked with * will not be retained when the camcorder is powered back on
- For warning indicators and messages, see pages 136–139
- The total number of recordable photos is counted based on available space on the storage media.
- The maximum number of recordable photo images on the On Screen Display (OSD) is "9,999."

The available functions vary depending on the selected operation mode, and different indicators appear depending on the setting values. The indicators below only appear in the photo play mode.

PRECHECK!

- This On Screen Display (OSD) is shown in Photo playback (🖼️) mode only.
- Select the Play (🖼️) tab on the LCD screen to select the playback mode ➡ page 33

Photo play mode

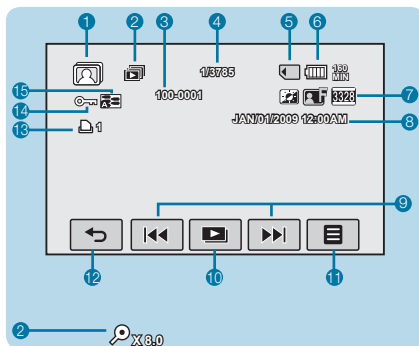


- | | |
|---|---|
| 1 Photo play mode | 8 Date/time |
| 2 Slide show/zooming control | 9 Previous image, Next image tab |
| 3 File name | 10 Slide show playback tab |
| 4 Image counter (current image/total number of recorded images) | 11 Menu tab |
| 5 Storage media (memory card) | 12 Return tab |
| 6 Battery info.
(Remaining battery level/time) | 13 Print mark |
| 7 LCD enhancer, Quality, Resolution | 14 Protect |
| | 15 Analog TV Out (when component/AV cable is connected) |

getting started

USING THE BATTERY PACK

Purchase extra battery packs to allow continuous use of your camcorder.

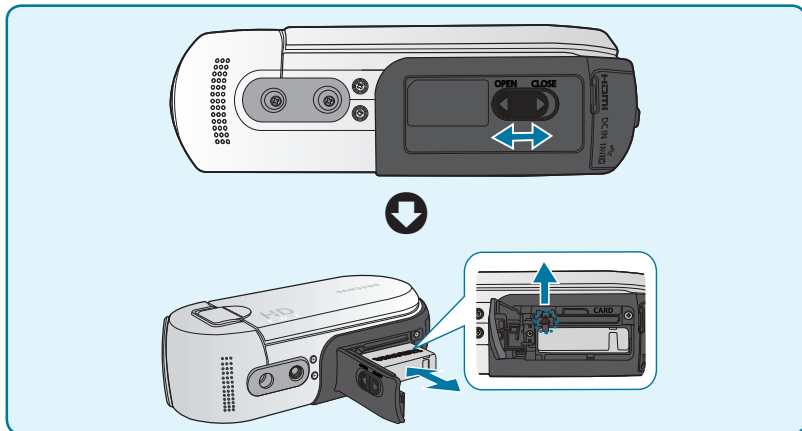

Inserting the battery pack

1. Open the battery/memory card cover by sliding the battery/memory card cover switch to the left (**OPEN**) as shown in the figure.
2. Insert the battery pack into the battery pack slot until it softly clicks.
 - Make sure that the **SAMSUNG** logo is facing up when the camcorder is placed as shown in the figure.
3. Close the battery/memory card cover and slide the battery/memory card cover switch to the right (**CLOSE**) as shown in the figure.


Ejecting the battery pack

1. Open the battery/memory card cover by sliding the battery/memory card cover switch to the left (**OPEN**) as shown in the figure.
2. Slide the battery eject lever.
 - Gently slide the battery eject lever in the direction as shown in the figure.
3. Close the battery/memory card cover and slide the battery/memory card cover switch to the right (**CLOSE**) as shown in the figure.



- Use only Samsung-approved battery packs. Do not use batteries from other manufacturers. Otherwise, there is a danger of overheating, fire or explosion.
- Samsung is not responsible for problems occurring due to using unapproved batteries.

Charging the battery pack with the AC power adaptor

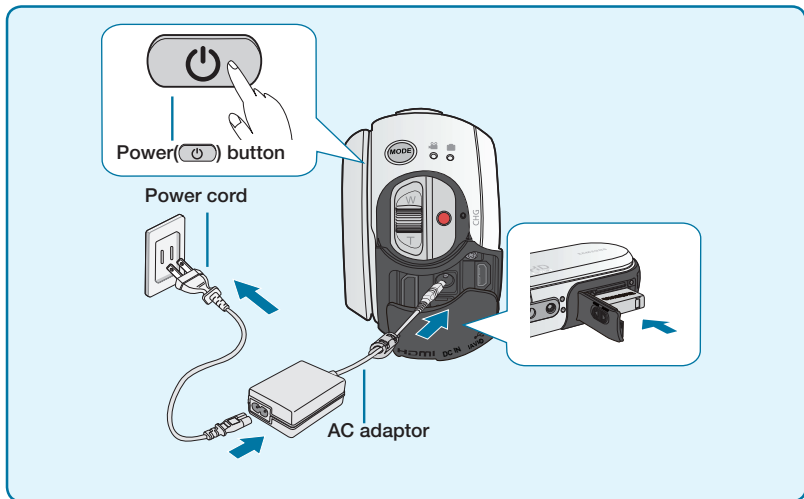

PRECHECK!

Before starting the following procedure, make sure that the battery pack is inserted in your camcorder.

1. Press the power (⏻) button to turn off the camcorder and then close the LCD screen. ➡ page 31
2. Connect the power cord to the AC Adaptor and the wall outlet.
3. Connect the AC Adaptor to the DC IN jack on the camcorder.
 - The CHG(charge) lamp lights up and charging starts. After the battery is fully charged, the charging(CHG) lamp turns green.



- The battery pack is not charged during the power saving mode, which may keep the mode indicator on or flashing. Start charging the battery after turning off the camcorder by pressing the power (⏻) button.
- Even with the power is switched off, battery pack will still discharge if the battery pack is left inserted in the camcorder.
- It is recommended you to have one or more additional battery packs to allow continuous use of your camcorder.


getting started

CHECKING THE BATTERY STATE

You can check the charging state and remaining battery capacity.



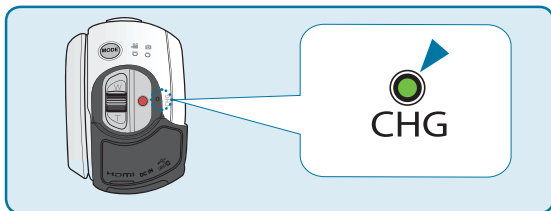

To check the charging state

The color of the CHG lamp indicates the power or charging state.



Charging (CHG) lamp

The color of the charging indicator shows the charging state.

Charging state	Charge			
	Fully Discharged	Charging	Fully Charged	Error
LED color	 (Red)	 (Orange)	 (Green)	 (Red Blink)



- Battery capacity decreases over time and through repeated use. Keep the camcorder turned off while not operating it.
- Store the battery pack separately when finished charging or when not using it for a long time. This will help extend the life of the battery.
- The Battery pack is charged over 95% after about 1 hour and 40 minutes, and the indicator color changes to green. It takes about 2 hours for the battery pack to charge 100%.

Available running time for the battery pack

Battery Type	IA-BH125C	
Charging time	Approx. 100min.	
Video Resolution	HD	SD
Continuous recording time	Approx. 90min.	Approx. 90min.
Playback time	Approx. 160min.	Approx. 160min.

(Unit: minutes.)

- Charging time: Approximate time (min.) required when you fully charge a completely exhausted battery pack.
- Recording/Playback time: Approximate time (min.) available when you fully charged the battery pack. 'HD' stands for high definition image quality, and 'SD' stands for standard image quality.

About battery packs

- The battery pack should be recharged in an environment that is between 32°F (0°C) and 104°F (40°C). However, when it is exposed to cold temperatures (below 32°F (0°C)), its usage time reduces and it may cease to function. If this happens, place the battery pack in your pocket or other warm, protected place for a short time, then re-insert it.
- Do not put the battery pack near any heat source (i.e. fire or a heater).
- Do not disassemble, apply pressure to, or heat the battery pack.
- Do not allow battery pack terminals to be short-circuited. It may cause leakage, generate heat, or cause fire.

Maintaining the battery pack

- The recording time is affected by temperature and environmental conditions.
- We recommend only using the original battery pack that is available from your Samsung retailer. When the battery reaches the end of its life, please contact your local dealer. The batteries have to be dealt with as chemical waste.
- Make sure that the battery pack is fully charged before starting to record.
- To preserve battery power, keep your camcorder turned off when you are not operating it.
- Even when the power is switched off, the battery pack will still discharge if it is left inserted on the camcorder. It is recommended that you remove the battery pack from the camcorder.
- If the battery pack is not used for a long time, fully charge the battery pack and use it up on your camcorder once per 6 months to maintain proper function. To store the battery pack, remove it from your camcorder and put it in a dry, cool place.

About the battery life

- Battery capacity decreases over time and through repeated use. If decreased usage time between charges becomes significant, it is probably time to replace it with a new one.
- Each battery's life is affected by storage, operating and environmental conditions.

getting started

About the running time

- Times measured when using the camcorder at 25°C (77°F). As the environmental temperature and conditions vary, the actual battery time may differ from the approximate times given in the table.
- The recording and playback time will be shorter depending on the conditions under which you use your camcorder. In actual recording, the battery pack may discharge 2-3 times faster than this reference, since the Record start/stop and Zoom are being operated, and playback is performed. Assume that the recordable time with a fully charged battery pack is between 1/2 and 1/3 of the time in the table, so have enough battery packs to allow for the time you are planning to record on the camcorder.
- The recording and playback time will be shorter when you use your camcorder in low temperatures.

On the battery pack

- The CHG (charging) lamp blinks during charging, or Battery Info will not be correctly displayed under the following conditions:
 - The battery pack is not inserted correctly.
 - The battery pack is damaged.
 - The battery pack is worn-out. (For the battery information only)

Using an AC power source

It is recommended that you use the AC power adaptor to power the camcorder from a household AC outlet when you perform settings on it, play back, or edit images, or use it indoors. Make the same connections as you do when charging the battery pack.

➡ page 27

On the AC Adaptor


- Use a nearby wall outlet when using the AC Adaptor. Disconnect the AC Adaptor from the wall outlet immediately if any malfunction occurs while using your camcorder.
- Do not use the AC Adaptor placed in a narrow space, such as between a wall and furniture.
- Do not short-circuit the DC plug of the AC Adaptor or battery terminals with any metallic objects. This may cause a malfunction.
- Even if your camcorder is turned off, AC power is still supplied to it while connected to the wall outlet via the AC Adaptor.

basic operation of the camcorder

TURNING YOUR CAMCORDER ON/OFF

This chapter introduces you to the basic operation procedures of this camcorder, such as turning the power on/off, switching modes, and setting on-screen indicators.

1. Open the LCD screen to turn on the camcorder.
 - Your camcorder turns on automatically when you open the LCD screen.
2. To turn off the camcorder, press the Power (⏻) button for about one second.
 - Closing the LCD screen will not turn off the camcorder.
 - Set the date and time when using your camcorder for the first time. ➡page 35

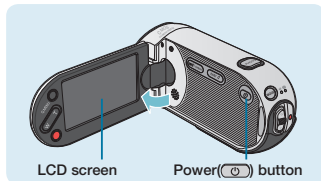

- The camcorder operates the self-diagnosis function when powered on. If a warning message appears, refer to '**warning indicators and messages**' (➡pages 136~139) and take corrective action.
- If you close the LCD screen when the power is on, the power saving mode activates.

When using this camcorder for the first time

- When you use your camcorder for the first time or reset it, the time zone screen appears for the startup display. Select your geographical location and set the date and time. ➡page 95
If you do not set the date and time, the time zone screen appears every time you turn on the camcorder.

basic operation of the camcorder

SWITCHING TO THE POWER SAVING MODE


If you need to use camcorder for the extended time, the following functions enable you to prevent unnecessary energy consumption.

In STBY mode:

- The camcorder switches to "Quick On STBY" mode when the LCD screen is closed.
→ page 98




In Playback mode (Includes the thumbnail view mode):

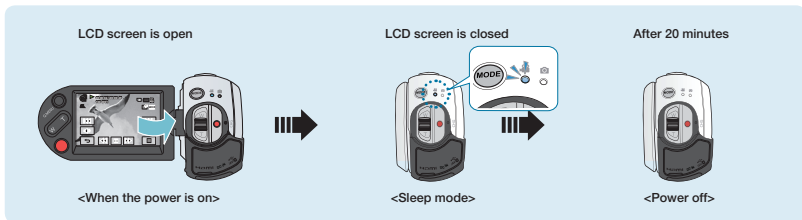
- The camcorder switches to the sleep mode when the LCD screen is closed, and then if idle for more than 20 minutes the camcorder turns off.
- However, if "Auto Power Off: 5 Min" is set, the camcorder turns off in 5 minutes.
- If you open the LCD screen or connect a cable to the camcorder during sleep mode, the sleep mode ends and returns back to the last used operation mode.






- The power saving mode does not work in the following situations:
 - When the camcorder has a cable connection. (USB, Component/AV, or HDMI)
 - While recording, playback, or the slideshow is being operated.
 - When the LCD screen is opened.
- The camcorder consumes less battery power in the power saving mode (about 50% of the power consumption in the standby mode) However, if you plan to use the camcorder for an extended time, it is recommended to turn off the camcorder by pressing the power (⏻) button when not using it.

SETTING THE OPERATION MODES

You can switch the operating mode in the following order each time you press the **MODE** button. Video mode () → Photo mode () → Video mode ().

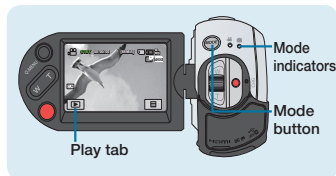- Each time the operation mode changes, the respective mode indicator lights on.
- Touching the Play () tab in the video or photo record mode switches the operation mode into the video or photo playback mode.



Mode	Icon	Functions
Video mode		Records or playback videos
Photo mode		Records or playback photos





- When you turn on the camcorder for the first time, the video mode will start up as the default.
- Booting mode can be selected by setting "**Booting Mode**" to "**Photo Mode**" or "**Previous Mode**," and the changes will be in effect the next time the camcorder is tuned on. ➤page 97

USING THE DISPLAY(/iCHECK) BUTTON

Switching the information display mode

You can switch the on-screen information display mode.
Press the Display( /iCHECK) button.

- The full and minimum display modes will alternate.

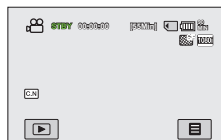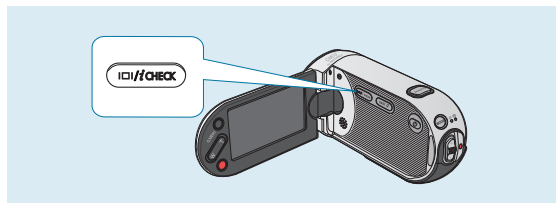


<Full display mode>





<Minimum display mode>




- Warning indicators and messages may appear depending on the recording conditions.
- Display ( /iCHECK) button** does not work in the menu or quick menu screen.

basic operation of the camcorder

Checking the remaining battery and recording capacity

- When the power is off, press and hold the Display () /iCHECK) button.
- When the power is on, press and hold the Display () /iCHECK) button for about 3 second.
- The remaining battery time and the available recording time appear for about 10 seconds according to the storage and quality setting values.

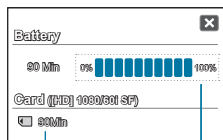

Available recording time (approx.)


Remaining battery (approx.)



- Battery information is available only when the battery pack is inserted in your camcorder.
- If the camcorder is connected by using the AC Power adaptor, and the battery is not inserted, the **"No Battery"** message appears.

USING THE TOUCH PANEL

The touch panel allows you to enjoy playback and recording with a simple touch of your finger. Place your hand on the rear side of the LCD screen to support it. Then, touch the items displayed on the screen.

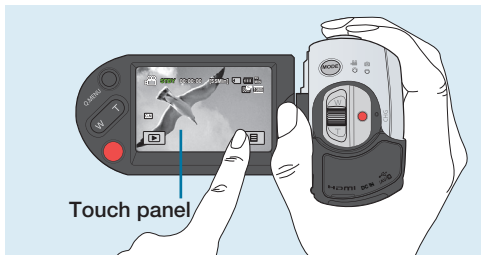

- Do not place a protective film on the LCD screen.
- If a film is applied for a long while, strong cohesion on the surface of the screen may cause a malfunction of the touch panel.






- Be careful not to accidentally press the buttons near the LCD panel while using the touch panel.
- The tabs and indicators that appear on the LCD screen depend on the current recording/playback status of your camcorder.

first time settings

SETTING THE TIME ZONE AND DATE/TIME FOR THE FIRST TIME

Set the date and time of your local area when turning on this camcorder for the first time.

1. Open the LCD screen to turn on the camcorder.
 - Your camcorder turns on automatically when you open the LCD screen.
 - The Time Zone (“**Home**”) screen appears based on Lisbon, London (Greenwich Mean Time).
 - You can also set your current time zone from the “**Settings**” menu. ➔page 95
2. Select your local area on the map by touching the left (◀) or right (▶) tab on the LCD screen, then press the (OK) tab.
 - The “**Date/Time Set**” screen appears.
3. Touch the date and time information, and change the setting values by using the up (▲) or down (▼) tabs.
4. Make sure the clock is correctly set, then touch the (OK) tab.
 - The message “**Date/Time Set**” appears.
 - If you finish the setting with (▶) tab without touching the (OK) tab, the date/time values are not applied and the <Time zone> screen appears again.

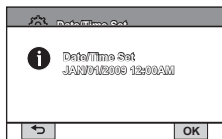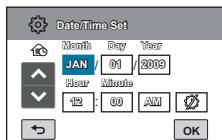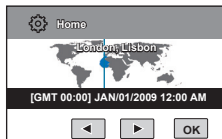

- The year can be set up to 2039, based on “**Home**” item.
- Set “**Date/Time Display**” to “**On**.” ➔page 92
- Activating the (⌚) icon forwards the time by 1 hour.

Built-in rechargeable battery

- Your camcorder includes a built-in rechargeable battery that retains the date and time settings even after the power is turned off.
- Once the battery is depleted, the previous date/time values are all reset to defaults, and you need to recharge the built-in rechargeable battery. The date/time must be set again.
- Battery capacity decreases over time and through repeated use. If you find the decreased usage time between charges becomes significant, replace your battery.







Charging the built-in rechargeable battery


- The built-in battery is always recharged while your camcorder is connected to the AC power or while the battery pack is attached.
- If the camcorder is not in use for about 2 weeks without connecting to the AC power or attaching the battery pack, the built-in battery fully discharges. If this occurs, charge the built-in battery by connecting to the supplied AC adaptor for 24 hours.

first time settings

SELECTING THE LANGUAGES

You can select the language to display the menu screen or messages. The language setting is retained when the camcorder is powered off.

1. Touch Menu () → Setting () tab.
2. Touch up () / down () tab until “Language” is displayed.
3. Touch “Language,” then touch the desired OSD language.
4. Touch the Exit () or Return () tab to complete the setting.
 - The menu screen and messages are displayed in the selected language.

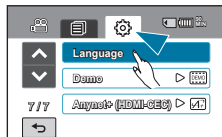

Submenu items


“English” → “한국어” → “Français” → “Deutsch” →
“Italiano” → “Español” → “Português” → “Nederlands” →
“Svenska” → “Suomi” → “Norsk” → “Dansk” →
“Polski” → “Čeština” → “Slovensky” → “Magyar” →
“Română” → “Български” → “Ελληνικά” → “Srpski” →
“Hrvatski” → “Українська” → “Русский” → “中文” →
“ไทย” → “Türkçe” → “ایرانی” → “العربية” →
“IsiZulu”



- “Language” options may be changed without prior notice.
- Selected language is retained even without the battery pack or AC power adaptor.
- The date and time format may change depending on the selected language.

getting ready to start recording

INSERTING AND REMOVING A MEMORY CARD (NOT SUPPLIED)

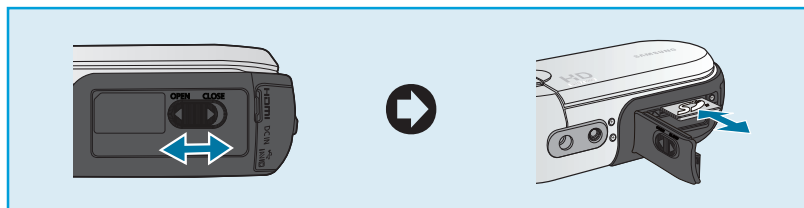

To insert a memory card

1. Open the battery/memory card cover by sliding the switch to the left (**OPEN**) as shown in the figure.
2. Insert the memory card into the card slot until it softly clicks.
 - Make sure that SD/SDHC Card logo is facing up and the camcorder is placed as shown in the figure.
3. Close the battery/memory card cover and slide the switch to the right (**CLOSE**) as shown in the figure.

To eject a memory card

1. Open the battery/memory card cover by sliding the switch to the left (**OPEN**) as shown in the figure.
2. Gently push the memory card to eject it.
3. Close the battery/memory card cover and slide the switch to the right (**CLOSE**) as shown in the figure.



- To avoid the data loss, turn off the camcorder by pressing the power (⏻) button for one second before inserting or ejecting the memory card.
- Do not format the memory card on a PC.
- Do not remove power supply (battery pack or AC adaptor) during operations such as recording, playback, formatting, deleting, and editing. Doing so may damage the storage media or data.
- Do not eject a memory card when it is in operation. Doing so may damage the memory card or data.
- Be careful not to push the memory card too hard. The memory card may suddenly pop out.




Your camcorder supports only SD(Secure Digital) and SDHC(Secure Digital High Capacity) cards. The compatibility with the camcorder may vary depending on manufacturers and types of the memory cards.

getting ready to start recording

SELECTING A SUITABLE MEMORY CARD

Compatible memory cards

- This camcorder can be used with SD (Secure Digital) and SDHC (Secure Digital High Capacity) cards.
It is recommended to use an SDHC (Secure Digital High Capacity) card.
SD cards up to 2GB are supported with this camcorder. Normal operation is not guaranteed with SD cards bigger than 2GB.
- MMC (Multi Media Card) and MMC Plus are not supported.
- Compatible memory card capacity: SD 1 ~ 2GB, SDHC 4 ~ 32GB
- Use compatible memory card brands. Others are not guaranteed to work. Check the compatibility when buying a memory card.
 - SDHC/SD cards: Panasonic, SanDisk, TOSHIBA
- To record videos, use a memory card supporting at least 2MB/s.
- SD/SDHC memory cards have a mechanical write-protection switch. Setting the switch prevents accidental erasure of files recorded on the card. To enable writing, move the switch up in the direction of the terminals. To set write protection, move the switch down.

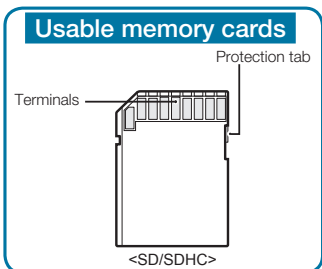

SDHC (Secure Digital High Capacity) cards

- SDHC (Secure Digital High Capacity) memory card
 - An SDHC card is a higher version (Ver.2.00) of SD card and supports capacity above 2GB.
 - Cannot be used with current SD enabled host devices.

Common cautions for memory cards

- Damaged data may not be recovered. It is recommended you make a back-up of important data separately on the hard disk of your PC.
- Turning the power off or removing a memory card during an operation such as formatting, deleting, recording, and playback may cause data loss.
- After you modify the name of a file or folder stored in the memory card using your PC, your camcorder may not recognize the modified file.

Handling a memory card

- It is recommended that you power off before inserting or removing the memory card to avoid data loss.
- It is not guaranteed that you can use a memory card formatted by other devices. Be sure to format your memory card using this camcorder.
- You have to format newly-purchased memory cards, memory cards with data that your camcorder cannot recognize or are saved by other devices. Note that formatting erases all data on the memory card.

- If you cannot use a memory card that has been used with another device, format it with your camcorder. Note that formatting erases all information on the memory card.
- A memory card has a certain life span. If you cannot record new data, you have to purchase a new memory card.
- Do not bend, drop, or cause strong impact to the card.
- Do not place foreign substances on the memory card terminals. Use a soft dry cloth to clean the terminals if required.
- Do not paste anything other than label provided with the card on the label pasting section.
- Be careful to keep the memory card out of the reach of children, who might swallow it.

Notes on use

- Samsung is not responsible for data loss due to misuse.
- We recommend using a memory card case to avoid losing data from moving and static electricity.
- After a period of use, the memory card may get warm. This is normal and is not a malfunction.

The camcorder supports SD and SDHC memory cards for data storage preference!

The data storage speed may differ, according to the manufacturer and production system.

- SLC (single level cell) system: faster write speed enabled.
- MLC (multi level cell) system: only lower write speed is supported.

For best results, we recommend using a memory card that supports faster write speed.

Using a lower write speed memory card for recording video may cause difficulties when storing.

You may even lose your video data during the recording.

In an attempt to preserve any bit of the recorded video, the camcorder forcibly stores the movie on the memory card and displays a warning:

“Low speed card. Please record a lower resolution.”

If you are unavoidably using a low speed memory card, resolution and quality of the recording may be lower than the set value.

➡ pages 62~63

The higher the resolution and quality, the more memory will be used.

getting ready to start recording

Recordable time available for video

Video quality	Storage media (Capacity)					
	1GB	2GB	4GB	8GB	16GB	32GB
[HD]1080/60i (SF)*	6min	13min	27min	55min	115min	232min
[HD]1080/60i (N)	9min	18min	38min	78min	160min	324min
[HD]1080/30p	6min	13min	27min	55min	115min	232min
[HD]720/60p	9min	18min	38min	78min	160min	324min
[SD]480/60p	18min	34min	70min	143min	293min	591min
[SD]Web & Mobile	35min	61min	124min	251min	513min	1035min


(Unit: Approximate minutes of recording)

Recordable number of photos

Photo resolution	Quality	Storage media (Capacity)					
		1GB	2GB	4GB	8GB	16GB	32GB
12M (4000x3000)	Super Fine	168	327	655	1316	2685	5407
	Fine	252	490	981	1969	4017	8088
	Normal	380	735	1471	2954	6026	9999
9M (3456x2592)	Super Fine	226	440	881	1768	3607	7262
	Fine	338	665	1311	2633	5371	9999
	Normal	507	989	1978	3972	8101	9999
6M (3328x1872)*	Super Fine	324	628	1257	2523	5147	9999
	Fine	487	942	1885	3785	7721	9999
	Normal	729	1403	2806	5634	9999	9999
5M (2592x1944)	Super Fine	402	783	1567	3146	6418	9999
	Fine	601	1160	2321	4659	9503	9999
	Normal	898	1723	3448	6922	9999	9999
3M (2048x1536)	Super Fine	638	1231	2463	4944	9999	9999
	Fine	953	1828	3657	7342	9999	9999
	Normal	1441	2742	5486	9999	9999	9999
2M (1920x1080)	Super Fine	968	1885	3771	7571	9999	9999
	Fine	1441	2742	5486	9999	9999	9999
	Normal	2136	4022	8046	9999	9999	9999
VGA (640x480)	Super Fine	6196	9999	9999	9999	9999	9999
	Fine	8852	9999	9999	9999	9999	9999
	Normal	9999	9999	9999	9999	9999	9999


(Unit: Approximate number of images)



- The figures in the table may differ depending on the actual recording conditions and subject.
- The higher the quality and resolution, the more memory is used.
- Lower resolution and quality increases the recording time, but the image quality may suffer.
- The bit rate automatically adjusts to the recording image. Accordingly, the recording time may vary.
- Memory cards bigger than 32GB may not operate normally.
- When a video file exceeds 3.8 GB, the next video file is created automatically.
- To check the remaining memory capacity, use **Display**()**/iCHECK** button. ➡ page 20
- The maximum number of recordable photos and videos is 9,999.
- The above items marked with * indicate the default setting.

USING THE HAND STRAP


Attach the strap and place your hand through the loop to prevent the camcorder from damage by being dropped.

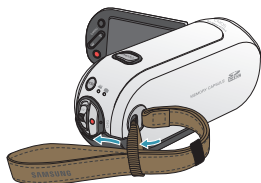

ADJUSTING THE LCD SCREEN

The wide LCD screen on your camcorder offers high quality image viewing.

1. Open the LCD screen with your finger.
 - The screen opens up to 90°.
2. Rotate the LCD screen towards the lens.
 - You can rotate it up to 180° towards the lens and up to 90° backward. To view recordings more conveniently, rotate the screen by 180° towards the lens, then fold it back to the body.

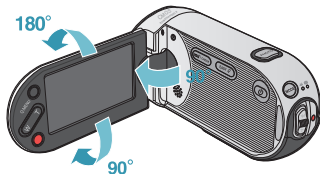

Excessive rotation may damage the connective hinge between the screen and the camcorder.



- Clean fingerprints or dust on the screen with a soft cloth.
- When the LCD screen is rotated by 180° toward the lens, the left and the right sides of the subject are shown in the opposite direction as if you are looking at the mirror. This is not a problem and does not affect the image being recorded.

getting ready to start recording



BASIC CAMCORDER POSITIONING

Use both hands while taking a video or picture to prevent the camcorder from shaking.
Try to avoid any slight movement while shooting.

Adjusting the shooting angle

Aim the camcorder as shown in the illustration.

1. Hold the camcorder with your both hands.
2. Hook up the hand strap to your hand.
3. Make sure your footing is stable and there is no danger of colliding with another person or object.
4. Aim and focus as shown in the illustration.

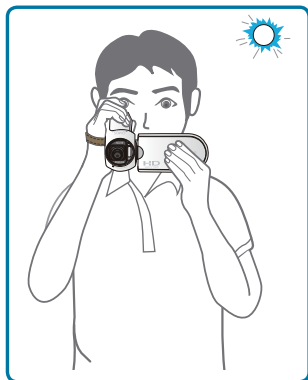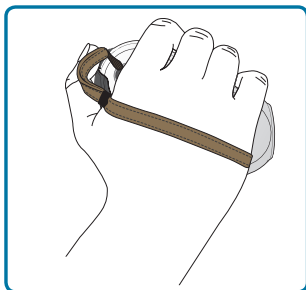

This camcorder lens angle is approx. 25° higher than the rest of the camcorder body. Make sure the camcorder lens is angled for proper shooting.



- It is recommended to keep the sun behind you while shooting.
- To avoid underexposing a backlit subject when taking a photo, please use the Flash.

basic recording

RECORDING VIDEOS

This camcorder supports both High Definition(HD) and Standard Definition(SD) image resolutions. Set your desired resolution before recording. ➡page 62

PRECHECK!

- Open the LCD screen to turn on the camcorder.
- Your camcorder turns on automatically when you open the LCD screen.
- Select the Video (📹) mode by pressing the MODE button. ➡page 33

1. Select a subject to record.

- Adjust the LCD panel to the best angle for recording.
- Use the **Zoom** lever or **Zoom** button to adjust the size of the subject. ➡pages 20~21

2. Press the **Recording start/stop** button.

- The recording (●) indicator appears, and recording starts.

3. To stop recording, press the **Recording start/stop** button again.

4. The Quick View icon appears on the screen.


Touch the Quick View (▶) icon to view the most recently recorded video.

- After the Quick View is complete, your camcorder returns to the standby mode.



Two Recording start/stop buttons to suit your preference!

- This camcorder features two **Recording start/stop** buttons. One is on the rear side of the camcorder, the other is on the LCD screen. Select the one that works best for you.

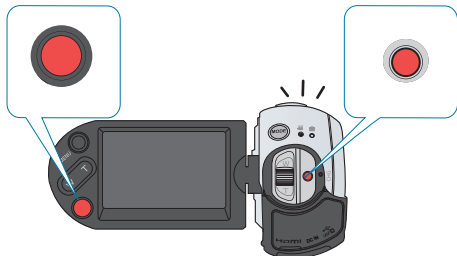

basic recording



- If power is interrupted or an error occurs during recording, the video may not be recorded/edited.
 - Samsung is not responsible for any damage occurred by a failure of normal recording or playback operation because of memory card error.
 - Note that damaged data cannot be recovered.
-



- Videos are compressed in the H.264 (MPEG-4.AVC) format.
 - Eject the battery pack when you have finished recording to prevent unnecessary battery power consumption.
 - For the on-screen information display, see pages 22~25.
 - For approximate recording time, see page 40.
 - Sound is recorded from the internal stereo microphone at the bottom of the lens. Make sure that the microphone is not blocked.
 - Before recording an important video, make sure to test the recording function by checking if there is any problem with the audio and video recording.
 - The brightness of the LCD screen can be adjusted in the menu options. Adjusting the LCD screen does not affect the image being recorded. ➡ page 96.
 - For various functions available during recording, see “Recording menu items” ➡ pages 57~58
 - Do not turn off the camcorder or remove the memory card while accessing the storage media. Doing so may damage the storage media or the data in the storage media.
 - If the power cable/battery is disconnected or recording is disabled during recording, the system is switched to the data recovery mode. While data is being recovered, no other function is enabled. After data recovery, the system will be switched to the STBY mode. When the recording time is short, the data recovery might fail.
 - The menu setting tabs shown on the LCD screen do not affect the image being recorded.
 - In the Video/Photo Recording mode, you can set the **Quick View** menu option. The Quick View icon appears when you have set the **Quick View** menu option to On.
-

CAPTURING PHOTOS IN VIDEO RECORD MODE (DUAL RECORDING)

Your camcorder can capture photos without interrupting video recording, even in STBY mode.

PRECHECK!

Select the Video (📹) mode by pressing the **MODE** button. ➡ page 33

You can record photos while recording videos.

1. Press the **Recording start/stop** button.
 - The recording (●) indicator will display, and recording will start.
2. Press the **PHOTO** button at the scene you want while recording videos.
 - When the (▶▶) indicator disappears, the photo image is recorded without a shutter sound.
 - Video keeps recording, even while photos are taken.
 - To stop recording, press the **Recording start/stop** button again.



<Dual recording during video recording>

You can also record photos in STBY mode.

1. Press the **PHOTO** button in STBY mode.
 - The photo is recorded while the (▶▶) indicator appears and the shutter sound is heard.



- You cannot capture photos in the following conditions:
 - Slow motion record mode.
 - When time lapse recording is performed.
- You cannot use the flash during dual recording.
- Resolution of the captured photos differs according to the resolution of the recorded videos:
 - Movie images recorded in HD resolution ([HD]1080/60i (SF), [HD]1080/60i(N), [HD]1080/30p): 1920x1080
 - Movie images recorded in the resolution ([HD]720/60p): 1280x720
 - Movie images recorded in SD quality ([SD]480/60p): 896x504
 - Movie images recorded in the [SD] Web&Mobile: 640x480



<Dual recording in STBY mode>

basic recording

RECORDING PHOTOS

You can take photos and store them in an SD/SDHC memory card. Set the desired resolution and quality before recording. ➡ page 62

PRECHECK!



- Open the LCD screen to turn on the camcorder.
- Your camcorder turns on automatically when you open the LCD screen.
- Select the Photo (📷) mode by pressing the MODE button. ➡ page 33

1. Select a subject to record.

- Adjust the LCD panel to the best angle for recording.
- Use the **Zoom** lever or **Zoom** button to adjust the size of the subject. ➡ page 20

2. Adjust the subject at the center of the LCD screen, and half-press the **PHOTO** button.

- Your camcorder adjusts to the ideal aperture and focus automatically (if “**Aperture**” and “**Focus**” are set to “**Auto**” ➡ pages 68, 73)
- When the subject is in focus, (●) indicator appears green. If it appears red, readjust the focus.

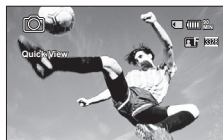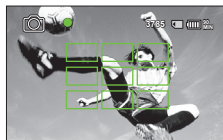

3. Fully press the **PHOTO** button.

- The shutter sound is heard. (when “**Shutter Sound: On**” is set).
- To continue recording, wait until the current photo is completely saved on the storage media.
- If the Quick View function is set to the desired time, the recorded photo image is shown for the selected time as soon as you finish taking a photo. ➡ page 87



- Recordable number of photos varies depending on the photo size and quality. ➡ page 40
- Audio is not recorded when taking photos.
- If focusing is difficult, use the manual focus function. ➡ page 73
- Do not turn off the camcorder or remove the memory card when taking photos as it may damage the storage media or data.
- For the on-screen display information, see pages 22~25.
- Adjust brightness and contrast of the LCD screen using menu items. Doing so does not affect the recorded image. ➡ page 96
- Photo files conform to the DCF (Design rule for Camera File system) standard, established by JEITA (Japan Electronics and Information Technology Industries Association.)
- Use the built-in flash in low lighting conditions.

RECORDING WITH EASE FOR BEGINNERS (EASY Q MODE)

With the EASY Q function, most of the camcorder settings are automatically adjusted. This function frees you from making detailed adjustments.

PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Press the **EASY Q** button.

- (**EASY Q**) indicator is displayed.
(when activating the EASY Q mode, Anti-shake (👉👉) indicator also appears.)

2. Press the **Recording start/stop** button or **PHOTO** button. ➡ page 20

- To record videos, press the **Recording start/stop** button. To record photos, press the **PHOTO** button.

3. To cancel EASY Q mode, press the **EASY Q** button again.



<Video record mode>



<Photo record mode>



- The EASY Q mode automatically sets the following record functions: "tSCENE," "White Balance," "Aperture," "Shutter," "EV," "Super C.Nite," "Back Light," "Focus," "Face Detection," "Anti-Shake (EIS)," "Digital Effect," "Fader," "Super Macro," "ISO," "Dynamic Range," "Flash," "Magic Touch," "Metering," "Cont. Shot," "Bracket Shot," etc. Cancel the EASY Q function if you want to add effects or settings to the images.
- **Unavailable buttons during EASY Q operation:**
Menu (📄) tab / **Q.MENU** button / etc. Most settings are automatically adjusted in EASY Q mode. To set or adjust functions on your own, release the EASY Q mode first.

basic recording

CAPTURING PHOTOS WHILE PLAYING BACK VIDEOS

You can capture photos during video playback.

PRECHECK!

Touch the Play (▶) tab on the LCD screen to select the playback mode. ➡page 33

- Recorded videos appear in a thumbnail index view.
 - Touch the up (▲)/down (▼) tab to move to the previous/next page.
- Touch the video clip you want.
 - The selected video is played.
- Press the **PHOTO** button halfway at the scene you want to capture.
 - The playback screen is paused.
- Press the **PHOTO** button fully down.
 - The captured still image is recorded in JPEG format.
- When the photo is recorded on the storage media, touch the Return (⏮) tab to view the thumbnail index. Touch the Photo (📷) tab to view the recorded photo images. ➡page 50



- Resolution of the captured photos differs according to the resolution of the recorded videos:
 - Movie images recorded in HD resolution ([HD]1080/60i (SF), [HD]1080/60i(N), [HD]1080/30p): 1920x1080
 - Movie images recorded in the resolution ([HD]720/60p): 1280x720
 - Movie images recorded in SD quality ([SD]480/60p): 896x504
 - Movie images recorded in the [SD] Web&Mobile: 640x480

Capturing photos continually while playing back videos

You can capture photos continually during video playback.

- Select the desired options including the maximum number of images that can be recorded by using the "Cont. Capture" menu. ➡page 90
- Touch the desired video clip.
- Still images are continually captured by pressing the **PHOTO** button.
 - The number of captured images varies depending on how long the **PHOTO** button is pressed.
 - Photos are continuously captured up to the storage capacity.
 - The interval of the continuous image capture varies according to the continuous capture option. ➡page 90

ZOOMING

This camcorder features 8x intelli-zoom in the Video () mode and 5x optical zoom in the Photo () mode to bring distant subjects closer.

To zoom in

Press the **T** (zoom) button on the LCD panel or slide the zoom lever towards **T** (telephoto).


- The distant subject is gradually magnified and can be recorded.



To zoom out

Press the **W** (zoom) button on the LCD panel or slide the zoom lever towards **W** (wide-angle).

- The subject moves further away.

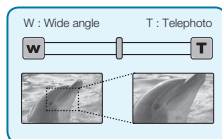

Tip

The zoom speed of this camcorder is not variable. Use the zoom lever for high speed zoom and zoom button on the LCD panel for low speed zoom.



- Using the optical zoom does not degrade the image quality and clarity.
- Use the digital zoom when you want to zoom more than the optical or intelli zoom range. ➔page 82
- Focusing may become unstable when recording with a fast zoom or zooming into a subject standing too far away. In this case, use the manual focus function. ➔page 73
- The minimum possible distance between camcorder and subject while maintaining sharp focus is about 10cm (about 3.9 inches) for wide angle and about 1m (about 39.37 inches) for telephoto. If you want to shoot the object close to the lens at a wide angle, use the Super Macro function. ➔page 80
- When using the zoom function while holding the camcorder with your hand, use “**Anti-Shake (EIS)**” for stable recording. ➔page 77
- Frequent use of the zoom function consumes more power.


basic playback

CHANGING THE PLAYBACK MODE

- You can switch the operation mode directly into the playback thumbnail display by touching the Play (▶) tab on the LCD screen. You will find the most recently created file is highlighted in the thumbnail view.
- The thumbnail display options are selected depending on the standby mode that was used for the last time, however, you can choose the video (HD or SD) or photo thumbnail view display options by touching the HD (HD), SD (SD), or photo (P) tab on the LCD screen.
- To switch back into the record mode from the thumbnail display mode, you can touch the video (V) / photo (P) tab on the LCD screen.
- In the video or photo thumbnail display mode, you can directly enter the video or photo record mode by pressing the **Recording start/stop** or **PHOTO** button.



Understanding how to change the operation modes

You can simply change the operation modes by touching the LCD screen or using the buttons as shown in the following figures:

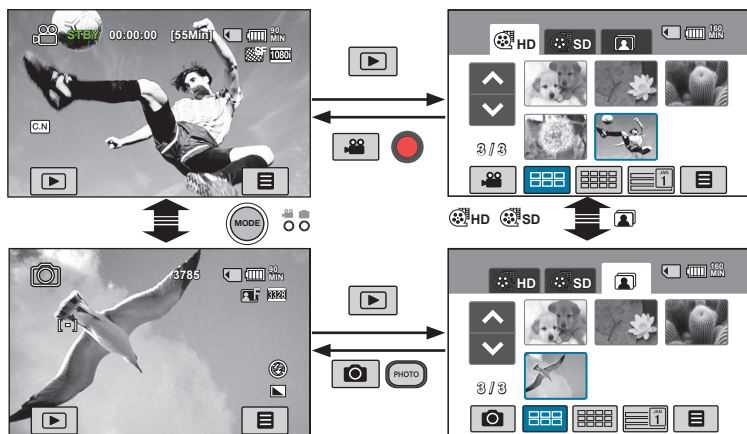

Tip

You can choose the thumbnail display options from 3x2 (3x2), 4x3 (4x3), and Date (Date).

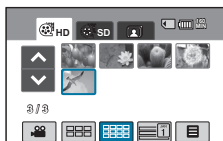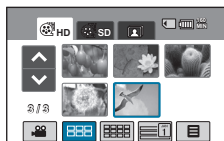

PLAYING BACK VIDEOS

You can preview recorded videos in a thumbnail index view. Find your desired video quickly, and playback directly.

PRECHECK!

Touch the Play (▶) tab on the LCD screen to select the playback mode. ➡page 33

1. Touch “HD” or “SD.”

- Video thumbnails corresponding to the selected video quality appear on the screen.
- To change the current thumbnail view, select the (🖼️), (📅), or (📺) tab on the screen.
- If you select the thumbnail display by date (📅), you can sort videos by specific date. ➡page 50
- To change the current thumbnail page, touch the up (⬆️) or down (⬇️) tab.

2. Touch the desired video clip.

- The selected video is played and playback control tabs appear briefly. They reappear when touching anywhere on the screen.
- You can set playback settings using the “Play Option” menu. ➡page 89
- To stop playback and return to the thumbnails, touch the Return (⏮️) tab.



Tip

Drag your finger from left to right to select the previous video on the LCD screen, reverse to select the next video.



- It may take some time to start playback, depending on the size and quality of the selected video.
- When the LCD screen is closed during playback, the built-in speaker automatically turns off.
- The camcorder may not play the following video files:
 - A video edited by using the different software that was not built in your camcorder, or whose file name is changed on a PC
 - A video recorded on other devices
 - A video whose file format is not supported on the camcorder
- You can use various play options during the video playback. ➡pages 89~90
- The recorded videos can be played on a TV or PC. ➡pages 119~125
- If you touch the Menu (⌂) tab or Q.MENU button during playback, play is paused and the menu screen appears.

basic playback

Various playback operations

Playback / Pause / Stop

- Playback and Pause alternates when touching the Playback (▶) / Pause (⏸) tab during playback.
- Touch the Return (⏮) tab to stop playback.

Search playback

During playback, each touch of the Reverse search (◀◀) / Forward search (▶▶) tab increases the play speed:

- RPS (Reverse Playback Search) rate: $x2 \rightarrow x4 \rightarrow x8 \rightarrow x16 \rightarrow x32 \rightarrow x2$
- FPS (Forward Playback Search) rate: $x2 \rightarrow x4 \rightarrow x8 \rightarrow x16 \rightarrow x32 \rightarrow x2$

Skip playback

Touch the Reverse skip (◀◀) / Forward skip (▶▶) tab during playback.

- Touching the Forward skip (▶▶) tab plays the next video.
- Touching the Reverse skip (◀◀) plays the beginning of the scene. If reverse skip (◀◀) is touched within 3 seconds from the start of the file, the previous video is played.

Slow playback

During a pause, touching the Forward slow (⏪) tab reduces the playback speed:


- Forward playback slow: $x1/2 \rightarrow x1/4 \rightarrow x1/8 \rightarrow x1/16$

Frame by frame playback

- During pause, touching the Frame advance (⏭) tab makes play go forward one frame at a time.

Magnifying the image size while playing back the videos:


When you playback videos recorded at "Slow Motion" or "Resolution: Web & Mobile," the image's viewing size can be adjusted by using the zoom button or the zoom lever. Operating the zoom button or the zoom lever toward the direction of T, 'telephoto' magnifies the image's viewing size.

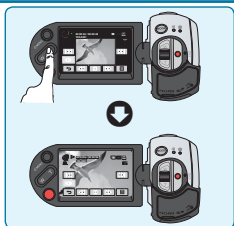

To adjust the volume

You can hear the recorded sound from the built-in speaker. The sound level is adjusted between "0~19." When the level is at "0," you cannot hear sound.

1. Touch the Volume (🔊) tab on the LCD screen.
2. Touch (⏮)/(⏭) tab to increase or decrease audio volume.
 - If you touch (⏮)/(⏭) tab for a long time, the sound level will be adjusted continuously.

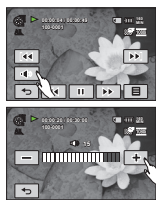

You can also control the volume levels by dragging your finger up or downward on the LCD screen.

VIEWING PHOTOS

You can view recorded photos by using various playback functions.

PRECHECK!

Touch the Play (▶) tab on the LCD screen to select the playback mode. ➡ page 33



1. Touch the Photo (📷) tab.

- The thumbnail view appears.
- To change the current thumbnail view, select (📷), (📷), or (📷) tab on the screen.
- If you select the thumbnail display by date (📅), you can sort videos by specific date. ➡ page 50
- To change the current thumbnail page, touch up (▲) or down (▼) tab.

2. Touch your desired photo to play back.

- The selected photo is displayed in full screen and playback control tabs appear briefly. They reappear when touching anywhere on the screen.
- Touch previous image (◀◀)/ next image (▶▶) tab to view the previous and next photo.
- Place and hold your finger on the previous image (◀◀)/next image (▶▶) tab to search a desired photo number quickly. When you lift off your finger, the selected photo is displayed.

3. To return to the thumbnails, touch the Return (⏮) tab.

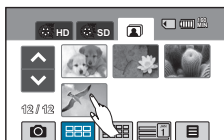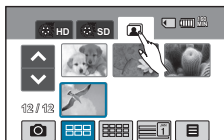


Tip

Using the touch panel by dragging:

You can also select the previous photo or the next photo by dragging your finger on the LCD screen.

- Dragging to the right: Shows the previous photo image.
- Dragging to the left: Shows the next photo image.

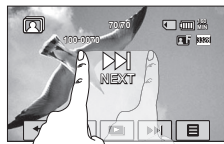

- Do not power off or eject the memory card during photo playback. Doing so may damage the recorded data.
- Your camcorder may not playback the following photo files normally;
 - A photo with its file name changed on a PC.
 - A photo recorded on other devices.
 - A photo with a file format not supported on this camcorder (does not conform to DCF standards).



Loading time may vary depending on the size and quality of the selected photo.

basic playback

VIEWING A SLIDE SHOW

You can view a photo slide show.

PRECHECK!

- This function works in Photo (📷) mode only.
- Touch the Play (▶️) tab on the LCD screen to select the playback mode. ➡ page 33

1. Touch the Photo (📷) tab.

- The thumbnail view appears.
- To change the current thumbnail page, touch up (⬆️) or down (⬇️) tab.

2. Touch the Menu (☰) tab → “Slide Show Start”

- The (▶️) indicator is displayed. The slide show starts from the current selected photo.
- All photos are play back continuously in the set slide show option (“Music,” “Interval,” “Effect,” “Play Option.”)
- You can adjust the background music’s volume level using the Volume (🔊) tab while playing back the slide show with music.
- To stop the slide show, touch the Return (⏮️) tab.
- Every time you touch the LCD screen, the play related tabs appear on the LCD screen.



Tip

To start the slide show during a playback of a single photo, touch the slide show (▶️) tab on the LCD screen, or you can touch the Menu (☰) tab → “Slide Show Start.”



Using the Slide Show Option

While playing back the slide show, you can use the “Slide Show Option” menus as follows:

- **Music** : (built-in music will play) “Off,” “Random,” “1.Mist,” “2.Muse,” “3.Fall,” “4.Dawn,” “5.Party,” “6.Drops,” “7.Trip.”
- **Interval**: “1 Sec,” “3 Sec.”
- **Effect**: “Off,” “Random,” “Effect 1,” “Effect 2,” “Effect 3,” “Effect 4.”
- **Play Option**: “Play All,” “Repeat All,” “Random.”




ZOOMING DURING PLAYBACK

You can magnify a playback image. Touch up (▲)/down (▼)/left (◀)/right (▶) to select a desired area to magnify.

PRECHECK!

- This function works only in the photo play mode.
- Touch the Play (▶) tab on the LCD screen to select the playback mode. ➡ page 33

1. Touch the Photo (📷) tab.
 - The thumbnail view appears.
 - To change the current thumbnail page, touch up (▲) or down (▼) tab.
2. Touch a desired photo to magnify.
 - The selected photo is displayed on the full screen.
3. Adjust the magnification with the **Zoom(W/T)** button or **Zoom(W/T)** lever.
 - Magnification starts from the center of the photo.
 - While the playback zoom is in use, other images cannot be selected.
4. Touch the up (▲)/down (▼)/left (◀)/right (▶) tab to view the area you want on the magnified photo.
5. To cancel, touch the Return (⏮) tab.

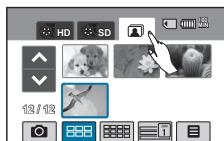

Photos recorded on other devices or those edited on a PC cannot be magnified.

advanced recording

HANDLING MENUS AND QUICK MENU



Follow the instructions below to use each of the menu items listed in this manual.

This chapter uses “Aperture,” and “Focus” functions of the video record mode as an example.



Using the MENU (M) tab



1. Open the LCD screen to turn on the camcorder.
 - If you find the LCD screen is already open when the power is turned off, press the power (ON) button to turn on the camcorder.
2. Select the Video (V) or Photo (P) mode by pressing the **MODE** button.
3. Touch the Menu (M) tab on the touch panel.
 - The menu screen appears.
 - To change the current page, touch up (▲)/down (▼) tab.
4. Touch “Aperture” (The Aperture function is used here as an example.)
 - Some functions cannot be used at the same time. In this case, a message appears and asks if you accept that the related function is disabled. Touch “Yes,” to disable the related function setting and then continue the menu setting as you desired.
5. Touch the desired option. Adjust the setting values accordingly.
 - Touch the decrease (–) or increase (+) tab to adjust the aperture as you want.
 - To exit the menu, touch the Exit (X) or Return (↵) tab.

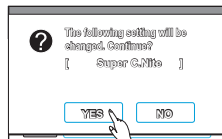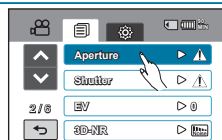

<This illustration is based on the default setting value>

Using the Q.MENU button

1. Open the LCD screen to turn on the camcorder.
 - If you find the LCD screen is already open when the power is turned off, press the power (ON) button to turn on the camcorder.
2. Select the Video (V) or Photo (P) mode by pressing the **MODE** button.
3. Press the **Q.MENU** button on your camcorder to see the available menu options. The quick menu screen appears.
4. Touch “Focus.” (The Focus function is used here as an example.)
5. Touch the desired option.
 - Adjust the setting values accordingly.
 - To exit the menu, touch the Exit (X) or Return (↵) tab.

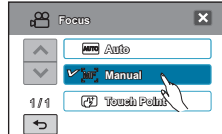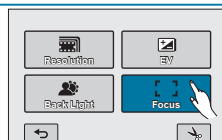


- When using the menu or Q.MENU items, some menu items can not be used at the same time, or may be grayed out.
- For more information, see the Troubleshooting pages, “140–147.”
- For the purpose of easy understanding, all the menu setting examples from this page are explained based on the simplest methods.

The menu setting methods can be different depending on the user's chosen menu options.


Customizing the Q.MENU items

You can choose what items appear when you press the Q.MENU button on the LCD screen.

1. Press the **Q.MENU** button.
The quick menu screen appears.
2. Touch the Edit (✎) tab.
3. Touch the Q.MENU item you want to delete or replace with a new one.
4. Touch the replace/add (□) or delete (□) tab to make changes.
 - If adding an item (for example, Focus), select it.
 - Press the (OK) tab to save changes.
 - Q.MENU screen has been changed according to your changes.

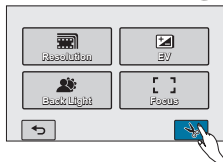

- The **Q.MENU** button can not be used in the EASY Q mode. To use the **Q.MENU** function, disable the EASY Q function.
- This function is not available while recording videos or photos.

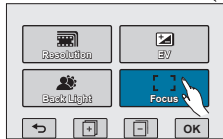

MENU ITEMS

- Accessible items in menu vary depending on the operating mode.
- For operation details, see the corresponding page.

Recording menu items

o : available, X : not available

Operation mode	Video (📹)	Photo (📷)	Default value	Page
iSCENE	●	●	Auto	61
Resolution	●	●	[HD]1080/60i(SF)/6M (3328 x 1872)	62
Quality	X	●	Fine	63
Slow Motion	●	X	Off	64
Sharpness	X	●	Normal	65
White Balance	●	●	Auto	65
ISO	X	●	Auto	67
Aperture	●	●	Auto	68
Shutter	●	●	Auto	69
EV	●	●	0	69
3D-NR	●	X	On	70
Super C.Nite	●	X	Normal	70
Back Light	●	●	Off	71
Dynamic Range	X	●	Off	71
Flash	X	●	Off	72

advanced recording

Operation mode	Video (📹)	Photo (📷)	Default value	Page
Focus	●	●	Auto	73
Face Detection	●	●	Off	74
Magic Touch	X	●	Off	75
Metering	X	●	Multi	76
Anti-Shake (EIS)	●	●	Off	77
Digital Effect	●	●	Off	78
Fader	●	X	Off	79
Super Macro	●	●	Off	80
Wind Cut	●	X	Off	81
MIC Level	●	X	Medium	81
Digital Zoom	●	●	Off	82
Cont. Shot	X	●	Off	83
Bracket Shot	X	●	Off	84
Self Timer	●	●	Off	84
Time Lapse REC	●	X	Off	85
Quick View	●	●	On (Video)/1 Sec(Photo)	87
Guideline	●	●	Off	88

o : available, X : not available

Playback menu items

Operation mode		Video(Thumbnail)	Video(Single)	Photo(Thumbnail/Single)	Default value	Page
Play Option		●	●	X	Play All	89
Highlight		●	●	X	-	89
Playlist		●	X	X	-	110
Delete		●	●	●	-	113
Protect		●	●	●	Off (Single)	114
Edit	Partial Delete	●	●	X	-	107
	Divide	●	●	X	-	108
	Combine	●	X	X	-	109
Cont. Capture		●	●	X	1Cut	90
File Info		●	●	●	-	90
Slide Show Start		X	X	●	-	54
Slide Show Option	Music	X	X	●	Random	54
	Interval	X	X	●	1Sec	54
	Effect	X	X	●	Random	54
	Play Option	X	X	●	Play All	54
Print Mark(DPOF)		X	X	●	-	116

o : available, X : not available

Setting menu items

Operation mode	Default value	Page
Storage Info	-	99
Format	-	100
File No.	Series	94
Time Zone	Home	95
Date/Time Set	-	91
Date Type	-	93
Time Type	-	93
Date/Time Display	Off	92
LCD Control		96
LCD Enhancer	Off	96
Auto LCD Off	On	97
Beep Sound	On	101
Shutter Sound	On	101
Bootling Mode	Video Mode	97
Auto Power Off	5 Min	102
Quick On STBY	5 Min	98
PC Software	On	99
USB Connect	Mass Storage	103
TV Type	16:9	104
Analog TV Out	Component Auto	105
TV Connect Guide	-	103
TV Display	On	104
REC Lamp	On	102
Default Set	-	105
Language	-	36
Demo	On	106
Anynet+(HDMI-CEC)	On	106

advanced recording

QUICK MENU ITEMS

Your camcorder provides quick menus consisting of the functions you may frequently use. Pressing the Q.MENU button will let you start making settings directly.

Recording menu items (default)

	Video (📹)	Photo (📷)	Default value	Page
Resolution	●	●	[HD]1080/60i(SF)/ 6M(3328x1872)	62
EV	●	●	0	69
Back Light	●	X	Off	71
Flash	X	●	Off	72
Focus	●	●	Auto	73

o : available, X : not available

Playback menu items (default)

	Video(Thumbnail)	Video(Single)	Photo(Thumbnail/Single)	Page
Highlight	●	●	X	89
Playlist	●	X	X	110
Slide Show Start	X	X	●	54
Delete	●	●	●	113, 115
Protect	X	●	●	114
Edit	●	●	X	107~109
Print Mark	X	X	●	116

o : available, X : not available

tSCENE

This camcorder automatically sets the shutter speed and aperture according to the subject and brightness for optimum recording.



PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → **tSCENE.**"
2. Touch a desired submenu item.
 - To change the current page, touch up (⬆️)/down (⬇️) tab.
3. To exit the menu, touch the Exit (✕) or Return (⬅️) tab.

Submenu items

- **Auto:** Use this setting for the regular recording conditions. The shutter speed and the aperture values are automatically adjusted for optimum recording.
- **Night (🌃):** Allows user to record in a dark place even with decreased lighting. However, an afterimage may appear with a moving subject. If you have difficulty with automatic focusing, adjust the focus manually.
- **Sports (⚽):** When recording rapidly moving subjects such as sports games.
- **Portrait (👤):** When recording a portrait image, use this setting to express the natural skin tone.
- **Spotlight (💡):** When recording subjects under strong light. For example, stage spotlights in theaters.
- **Beach/Show (🏖️):** When recording in a place with intense light reflection, such as the beach or ski resort.
- **Food (🍴):** When recording the food images in high saturation.
- **Candle Light (🕯️):** When recording subjects under low light conditions, such as candles at night time.

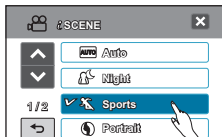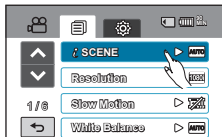

Tip

Setting the tSCENE mode by dragging on the touch panel:

- Touch and drag to the left or right side on the LCD screen. You can switch the setting values for the tSCENE mode by a simple touch on the LCD screen.



advanced recording

Resolution

You can select the resolution to be recorded on a memory card.

PRECHECK!

Select Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → **“Resolution.”**
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (➡) tab.



Resolution submenu in the Video Record mode

- **[HD]1080/60i (SF)** (📹): Records in the HD 1920x1080/60i, Super Fine format.
- **[HD]1080/60i (N)** (📹): Records in the HD 1920x1080/60i, Fine format.
- **[HD]1080/30p** (📹): Records in the HD (1920x1080 30p) format.
- **[HD]720/60p** (📹): Records in the HD (1280x720 60p) format.
- **[SD]480/60p** (📹): Records in the SD (720x480 60p) format.
- **[SD]Web & Mobile** (📹): Videos recorded in the VGA (640x480 30p) resolution at normal image quality. This setting may make a video easier to upload to a web site without downsizing via an editing program. Also, this may be the best option for viewing on mobile devices.

Resolution submenu in the Photo Record mode

12M (4000x3000)(📷)/9M (3456x2592)(📷)/6M (3328x1872)(📷)/5M (2592x1944)(📷)/
3M (2048x1536)(📷)/2M (1920x1080)(📷)/VGA (640x480)(📷)



- “60i” indicates the camcorder will record in interlaced scan mode at 60 fields per second.
- “30p” indicates the camcorder will record in progressive scan mode at 30 frames per second.
- “60p” indicates the camcorder will record in progressive scan mode at 60 frames per second.
- Recorded files are encoded with Variable Bit Rate (VBR). VBR is an encoding system that automatically adjusts the bit rate according to the recording image.
- The available video recording time differs according to the selected video resolution.


Quality

You can select the quality of photo images to be recorded.

PRECHECK!


Select the Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Quality.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

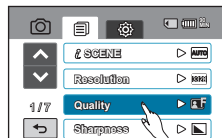

Submenu items

- **Super Fine (SF)**: Records photos at the super fine image quality.
- **Fine (F)**: Records photos at the fine image quality.
- **Normal (N)**: Records photos at the normal image quality.

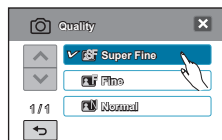

advanced recording

Slow Motion

You can record videos as a slow motion. "Slow Motion" is great for analyzing a golf swing or a videoing a bird in flight.



PRECHECK!

Select the Video () mode by pressing the **MODE** button. → page 33

1. Touch the Menu () tab → **"Slow Motion."**
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (X) or Return () tab.

Submenu items

- **Off***: Disables the function.
- **[SD]300frame/sec** () : Records 300 frames per second in "416x240" resolution.
- **[SD]600frame/sec** () : Records 600 frames per second in "192x108" resolution.

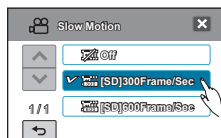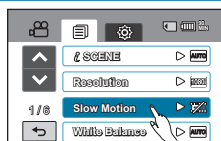

Understanding Slow Motion

ex) The number of frames used for video recording:

When the **Slow Motion** is set to **Off**: 60 frames per second



When the **Slow Motion** function is set to **[SD] 300frame/sec**: 300 frame per second



- When recording in slow motion, the recording stops after 10 seconds but when you playback the same recording it play back for the following time.
 - 300 Frame/Sec: 50 seconds
 - 600 Frame/Sec: 100 seconds
- Recording does not stop for 10 seconds even if the Recording start/stop button is pressed to stop.
- Also, audio is not recorded while recording in slow motion.
- While recording in slow motion, if you have the camcorder connected to a TV, the recording image is not displayed on the TV screen.
- You cannot capture photos in slow motion.
- Q.MENU function is not available while recording the slow motion videos.
- The image quality of **"Slow Motion"** is not as good as that of normal recording.

Sharpness

This function allows the user to obtain sharper photo images by processing the image after recording photos.


PRECHECK!

Select the Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Sharpness.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (➡) tab.

Submenu items

- **Soft** (👉): Smooths the edges of photo images.
- **Normal** (👉): The photo images appear with sharp edges and are suitable for printing.
- **Sharp** (👉): Enhances to sharpen the edges of photo images.

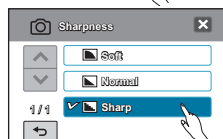

White Balance

This camcorder automatically adjusts the color of the subject. You can record in natural colors depending on the subject and lighting conditions.



PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “White Balance.”
2. Touch a desired submenu item.
 - To set the white balance manually, see page 66.
3. To exit the menu, touch the Exit (✕) or Return (➡) tab.

Submenu items




- **Auto** (👉): Controls the white balance automatically depending on the recording conditions.
- **Daylight** (☀️): Controls the white balance according to the outdoor lighting.
- **Cloudy** (☁️): When recording in the shade or cloudy weather.
- **Fluorescent** (💡): When recording under white fluorescent lights.
- **Tungsten** (💡): When recording under halogen lamps and incandescent lights.
- **Custom WB** (👉): You can manually adjust the white balance to match the light source or situation.

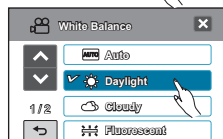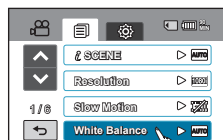

advanced recording

To set the white balance manually

1. Touch the Menu (☰) tab → “White Balance” → “Custom WB.”
 - The “(WB) Set White Balance” indicator is displayed.
2. Fill the screen with a white object, and touch OK (OK) tab.
 - The white balance setting is stored.
3. To exit the menu, touch the Exit (X) or Return (↩) tab.
 - The stored white balance setting will be applied the next time you record.

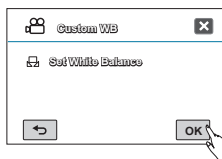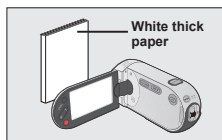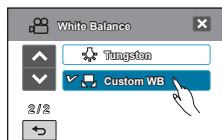

Understanding White Balance:

White balance (WB) is the process of removing unrealistic color casts, so that objects which appear white are rendered white in your photo. Proper white balance has to take into account the “color temperature” of a light source, which refers to the relative warmth or coolness of white light.



- When setting the white balance manually, the subject must be white, otherwise, your camcorder may not detect an appropriate setting value.
- The adjusted setting remains until you set the white balance again.
- During normal outdoor recording, setting to “Auto” may provide better results.
- Cancel the digital zoom function for clear and precise setting.
- Reset the white balance if light conditions change.


ISO

ISO sensitivity is a measure of how rapidly the camcorder reacts to a light source. The higher the sensitivity, the brighter the image is under the same aperture condition.

PRECHECK!

- This function works in Photo (📷) mode only.
- Select the Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab ➡ “ISO.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

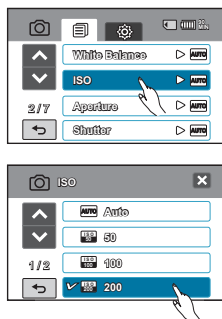

Submenu items

- **Auto:** Automatically sets the ISO to compensate for various lighting conditions (up to 3200).
- **50 (📷):** This mode is recommended for bright lighting conditions.
- **100 (📷):** This mode is recommended for most situations except when lighting is poor or when higher shutter speeds are required.
- **200 (📷):** This mode is recommended for taking photos of moving subjects. The recorded image might be noisy at the minimum level.
- **400 (📷)/800 (📷)/1600 (📷)/3200 (📷):** The image may be grainy. These settings will help brighten a subject in a dark surroundings.



Higher ISO sensitivity might produce a grainy (noisy) effect on the photo images.

advanced recording

Aperture

The camcorder adjusts the aperture automatically depending on the subject and recording conditions. You can also manually adjust the Aperture to your preference.

PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Aperture” → “Manual.”
2. Touch the decrease (−) or increase (+) tab to adjust the aperture as you want.
 - Aperture value can be set between “3.5” and “16”
3. To exit the menu, touch Exit (✕) or Return (↩) tab.

Submenu items




- **Auto:** Sets the aperture value automatically.
- **Manual (📷 FXX):** Sets the aperture value manually.

Understanding Aperture

The aperture value can be adjusted to control the amount of light reaching the image sensor.

The aperture value needs to be adjusted in the following cases:

- When shooting against the light or when the background is too bright.
- When shooting on a reflective natural background such as at the beach or when skiing.
- When the background is overly dark (for example, night scenery).

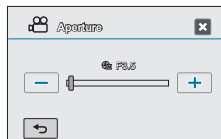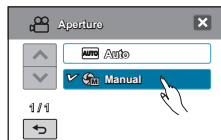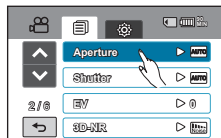

Shutter

The camcorder automatically sets the shutter speed depending on the scene's brightness. You can also manually adjust the shutter speed according to the scene conditions.



PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Shutter.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

Submenu items

- **Auto:** The camcorder automatically sets the appropriate shutter speed value.
- **Manual (📷 1/XX):** Touch decrease (−) or increase (+) tab to adjust the setting values as you want.
The setting values are as follows:
 - Video Record mode: 1/60, 1/100, 1/250, 1/500, 1/1000, 1/2000, 1/4000, or 1/10000.
 - Photo Record mode: 1, 1/2, 1/4, 1/8, 1/15, 1/30, 1/60, 1/125, 1/250, 1/500, or 1/1000.

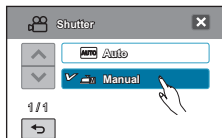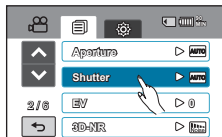

EV

Using the EV function, you can manually adjust the video and photo image brightness.



PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “EV.”
2. Touch the decrease (−) or increase (+) tab to adjust the setting values as you want.
 - EV values (📷): +2.0EV, +1.6EV, +1.3EV, +1.0EV, +0.6EV, +0.3EV, 0EV, -0.3EV, -0.6EV, -1.0EV, -1.3EV, -1.6EV, -2.0EV
3. To exit the menu, touch Exit (✕) or Return (↩) tab.

Understanding EV(Exposure Value)

Exposure value is the total amount of light allowed to fall on the photographic medium (Image sensor) during the process of taking photos or videos as well.

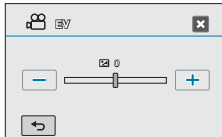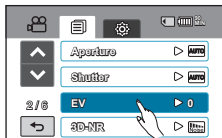

advanced recording

3D-NR

3D-NR (3-Dimension Noise Reduction) function reduces video noise and improves the quality. This is especially effective during low light shooting.

PRECHECK!

Select the Video (📹) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “3D-NR.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

Submenu items

- **Off** : Disables the function.
- **On** : Enables the 3D-NR function.



<Conventional image result when recorded with low light shooting.>



<When the 3D-NR function is applied in the same recording conditions.>

Super C.Nite

You can adjust the shutter speed when recording a slow moving object, or record a brighter image in dark places without a compromise in colors.


PRECHECK!

Select the Video (📹) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Super C.Nite.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

Submenu items

- **Off**: Disables the function.
- **Normal** (📷): Record a brighter image by extending the low shutter speed range to 1/30.
- **Super** (📷): Record a brighter image by fixing the shutter speed to 1/15 in a dark location.

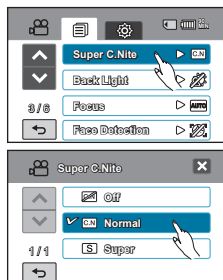

Back Light

When a subject is lit from behind, this function will compensate for lighting so that the subject is not too dark.


PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “**Back Light.**”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

Submenu items

- **Off** : Disables the function
- **On** (🔦): Backlight compensation brightens the subject quickly.

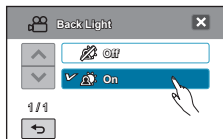

Dynamic Range

The Dynamic range function enables you to record a brighter subject in dark conditions, as well as more detailed images.



PRECHECK!

Select Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “**Dynamic Range.**”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

Submenu items

- **Off** : Disables the function.
- **On** (🔦): Expresses more shadow and highlight details for recorded images.

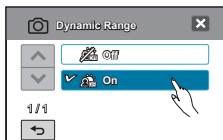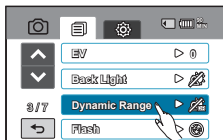

advanced recording


Flash

Using the Flash function, you can set the built-in flash to fire under low light conditions.

PRECHECK!

Select the Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → **"Flash."**
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

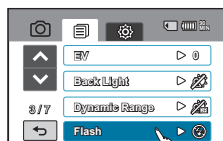

Submenu items

- **Off** (☹): Using the auto discharge function, the flash does not fire.
- **Auto** (☺): Using the auto discharge function, the flash fires under low light conditions in Auto mode.
- **Red-Eye** (👁): "Red-eye" is the phenomenon where eyes look reddish in photographs taken in dark environments with a flash. The Red-eye flash option can be used to reduce this phenomenon.
- **Fill-In** (☼): Using the Fill-In flash mode, the flash fires regardless the environmental light conditions. You can effectively use this flash mode when photographing against the light.
- **Slow Sync** (🌙): When you take a picture in low light conditions, you may find a difference in the aperture between the subject and the background.
This allows you to have the same brightness for the background and subject when using a slow shutter speed and firing the flash.



- Do not fire the flash with the flash bulb covered with your hand.
- Do not fire the flash close to people's eyes as the subjects could suffer a temporary loss of eyesight.



- The recommended distance to the subject when using the built-in flash is approximately 7 to 10 feet.
- The battery power will be consumed faster with repeated use of the flash.
- The flash function is not available with the following functions:
 - When the "Cont. Shot" is enabled
 - Recording videos
 - Capturing still images during video recording (Dual Recording).
- The red-eye reduction may not produce the desired effect due to individual differences and other conditions.

Focus

The camcorder usually focuses on a subject automatically (auto focus). When the camcorder is turned on, auto-focus will always be set. You can also manually focus a subject depending on the recording conditions.

PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → **"Focus."**
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

Submenu items

- **Auto:** In most situations, it is better to use the automatic focus feature, as it enables you to concentrate on the creative side of your recording.
- **Manual (MF):** Manual focusing may be necessary under certain conditions that make automatic focusing difficult or unreliable. Touch (M) or (MF) tab to adjust the setting values you want.
- **Touch Point (TP):** You can simply touch the subject shown on the LCD screen you would like to focus. (Video Record mode only)

Understanding the Touch Point

Using the Touch Point function, you can focus on a small section of the picture.




The Touch Point function is only available in video recording mode. However, you can also adjust the focus in the photo recording mode, see **"Magic Touch,"** ➡ page 75.

Tip

To activate the Touch Point with a long touch

You can use the Touch Point function by pressing the section for about 2 seconds on the LCD screen.

(excluding when **"Super Macro,"** **"Face Detection,"** **"Digital Zoom,"** or **"Slow Motion"** is set.)

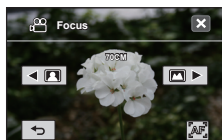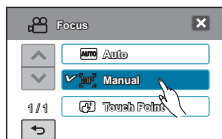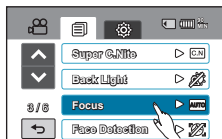

<Manual focus>



<Touch Point>



- The Auto Focus(AF) setting is useful when you operate the zoom function because you might not be able to keep accurate focus after the zoom ratio has been changed.
- In the manual focus setting menu screen, auto focus is available by using the AF (MF) tab on the screen. you can return to manual focus by touching the manual focusing tabs.
- When the Touch Point function is enabled, you can touch the AF (MF) tab on the LCD screen to set the **"Focus"** to **"Auto."**
- To disable the Touch Point function, set **"Focus"** to **"Auto."**

advanced recording

Face Detection

Your camcorder detects a subject's face and automatically adjusts the brightness and image quality to the optimized conditions. Record faces more vividly.




PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Face Detection.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↶) tab.

Submenu items

- **Off:** Disable the function.
- **On (👤):** Detects faces automatically for the optimal recording conditions.

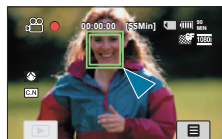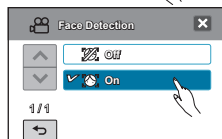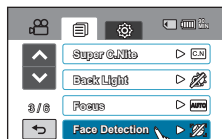


Magic Touch

Simply touch the area on the LCD screen that you want to focus on when taking a photo.

PRECHECK!

Select the Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “**Magic touch.**”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

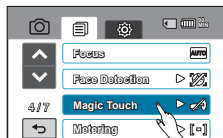

Submenu items

- **Off:** Disable the function.
- **On (☑):** You can simply touch the subject shown on the LCD screen that you would like to focus on. The brightness will also be adjusted for the optimized value.



Tip

Using the Magic Touch

Using the Magic Touch function, you can focus on a small section of the picture.

You can also activate Magic Touch by pressing the same point for about 2 seconds on the LCD screen.

To take a picture when the Magic Touch function is enabled, press the **PHOTO** button or simply touch the subject shown on the LCD screen that you would like to focus on, then hold for about 2 seconds.



When the Magic Touch function is enabled, you can touch the AF (AF) tab on the LCD screen to set the “**Focus**” to “**Auto.**”



- The following settings cannot be used with the “**Magic Touch**” function: “**Back Light**”, “**Face Detection**”, “**Focus: Manual**”, “**Digital Zoom**” or “**Metering.**”
- Even if the “**Cont.Shot**” is enabled, continuous shooting is not available by touching the LCD screen.

advanced recording

Metering

You can choose the metering standard for the brightness of your subject.



PRECHECK!

Select the Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Metering.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

Submenu items

- **Multi** (☰): Meters the multiple portions of the screen and determines the appropriate aperture.
- **Center** (☑): Measures the entire screen with an emphasis on the center and determines the aperture.
- **Spot** (●): Measures only the center of the screen and determines aperture.

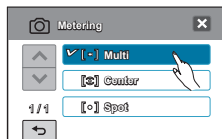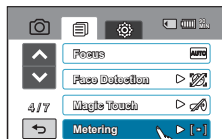

Anti-Shake(EIS)

Use the Anti-Shake (EIS: Electronic Image Stabilizer) function to compensate for unstable images caused by shaking movements when holding the camcorder.

PRECHECK!


Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Anti-Shake (EIS).”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.



Submenu items

- **Off** : Disable the function.
- **On** (👤): The Anti-Shake (EIS) function is enabled to compensate for shaking movements.

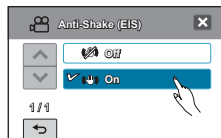

Tip

Use the Anti-Shake function in the following cases:

- When recording while walking or when recording in a moving car.
- When recording with the zoom function.
- When recording subjects of a small size.



- Gross camcorder shake may not be entirely corrected even if “**Anti-Shake: On**” is set. Firmly hold the camcorder with both hands.
- When this function is set to “**On**,” the actual movement of the subject and the movement displayed on the screen may be slightly different.
- When recording in dark lighting at high magnification while this function is set to “**On**,” after-images may stand out. In this case, we recommend using a tripod (not supplied) and turning the “**Anti-Shake**” to “**Off**.”

advanced recording

Digital Effect

Using the digital effect function gives your recording a creative look.

PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Digital Effect.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (➡) tab.

Examples of 5 digital effect options



Off
Without any digital effect, a normal, natural image is displayed during recording or playback.



Black & White (🖼️)
This mode changes the image to black and white.






Sepia (📷)
This mode gives the image a reddish brown look.



Negative (🔄)
This mode reverses the colors, creating a negative image.



Cosmetic (👤)
This mode helps adjust for facial imperfections.

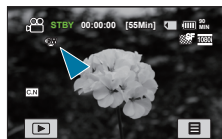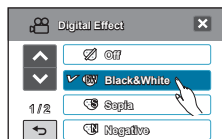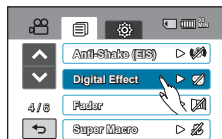


Fader

You can give your recording a professional look by using special effects such as fade in at the beginning of a sequence or fade out at the end of a sequence.

PRECHECK!


Select the Video (📹) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Fader.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

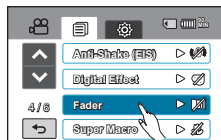

Submenu items

- **Off:** Disables the function
- **In (📹):** As soon as you start recording, it will fade in.
- **Out (📹):** When the recording is done, it will fade out.
- **In-Out (📹):** When you start or stop recording, the fader will be function accordingly.

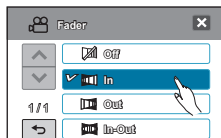

Fade in (approx. 3 seconds)



Fade out (approx. 3 seconds)



This function is disabled after being used one time.

advanced recording

Super Macro

Using the Super Macro function, you can get close up images which were created by focusing on a small portion of a large object at a wide angle. The effective focal distance in the Super Macro mode is between 1 to 10 cm. (0.39 to 3.93 inches)

PRECHECK!


Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “**Super Macro.**”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.



Submenu items

- **Off:** Disable the function.
- **On (🔍):** You can focus on a small portion of a large object at a wide angle.

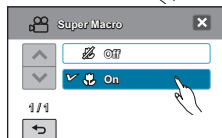

- When using the Super Tele Macro function, focusing may be difficult and can take some time.
- Avoid shadows when recording at a close distance.
- As the distance to the subject becomes closer, the focusing area narrows.
- As soon as the super macro function is enabled, you will find the zoom ratio is set to the widest level.
- If you use the zoom function when the “**Super Macro**” is set to “**On**,” the super macro function is disabled.

Wind Cut

Using the Wind Cut function, you can reduce wind noise when recording sound from the built-in microphone.

PRECHECK!

Select the Video (📹) mode by pressing the **MODE** button. ➡ page 33



1. Touch the Menu (☰) tab → “Wind Cut.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

Submenu items

- **Off:** Disables the function.
- **On (🔊):** Reduces wind noise when recording sound from the built-in microphone.



Using the Wind Cut function also removes some low-frequency sound with the wind noise.

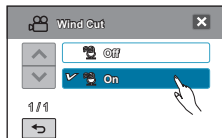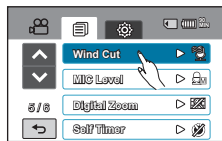

MIC Level

Using the MIC Level function, which will pick up sounds more clearly and accurately, you can adjust the audio volume levels.



PRECHECK!

Select the Video (📹) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “MIC Level.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

Submenu items

- **High (🔊):** Adjust the MIC volume at the highest level.
- **Medium:** Adjust the MIC volume at the medium level.
- **Low (🔊):** Adjust the MIC volume at the lowest level.

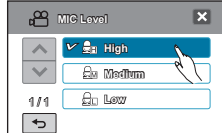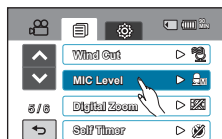

advanced recording

Digital Zoom

The digital zoom enables higher zoom magnification than the intelli or optical zoom ratio. The digital zoom function can archive the maximum 100 times bigger enlargement in video record mode (about 50 times bigger enlargement in photo record mode) by having the electronic zoom magnification.

PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33



1. Touch the Menu (☰) tab → “Digital Zoom.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⬅️) tab.

Submenu items

- **Off** : Disables the function.
- **On** : Enables higher zoom magnification.



With the digital zoom, the image is digitally processed more than the intelli or optical zoom modes. As a result, the image resolution may deteriorate

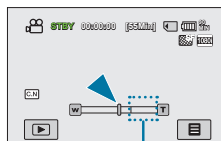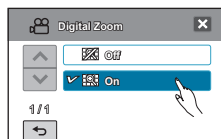

The right side of the bar shows the digital zooming zone. The zooming zone appears when you move the zoom lever.


Cont. Shot

This function allows you to capture photos in succession to give you more photo-taking opportunities when recording moving subjects.

PRECHECK!


Select the Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Cont. Shot.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

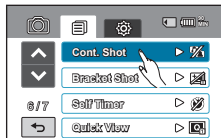

Submenu items

- **Off:** Records only one photo image.
- **Normal Speed (📷):** When you press and hold the PHOTO button, you can record photos continuously.
- **High Speed (📷):** When pressing the **PHOTO** button, you can take up to 7 images per 3 seconds.

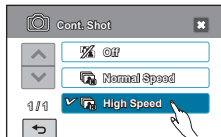

- When an error occurs (memory full, etc) during continuous shot, the recording stops and an error message is displayed.
- When the “Cont. Shot” is set to “Normal Speed,” the maximum number of continuous photo shot varies depending on the selected resolution, quality, or the recording condition.

advanced operation: recording


Bracket Shot

Using the Bracket Shot function, you can take continuous pictures with different brightness setting values.

PRECHECK!

Select the Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → **"Bracket Shot."**
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (➡) tab.

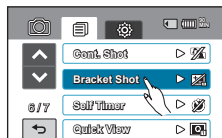

Submenu items

- **Off:** Disables the function.
- **On (📷):** Record five pictures with different brightness setting values such as +0.3EV, -0.3EV, Back Light Compensation, Dynamic Range and original.



Bracket shot may take a long time. Don't move the camcorder from the subject when operating this function.


Self Timer

When the self-timer is enabled, there is a time delay after you actually press the Record Start/Stop or PHOTO button. You can use this function when you want to take a shot of many people including yourself.

PRECHECK!


Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → **"Self Timer."**
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (➡) tab.
 - This function is disabled after used for one time.

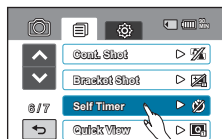

Submenu items

- **Off:** Disables the function
- **2 Sec (Photo mode only) (📷):** There is a time delay for 2 seconds when you press the Photo button.
- **10 Sec (📷):** There is a time delay for 10 seconds when you press the Record Start/Stop or Photo button.

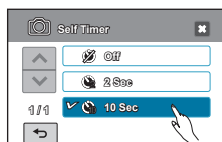

Time Lapse REC





Using the time lapse feature, your camcorder can be programmed to automatically record a number of frames over a period of time or with a certain time interval between each frame. For instance, a camcorder on a tripod (not supplied) in time lapse mode could be set up to shoot frames of a flower opening or a bird building a nest.

PRECHECK!

Select the Video (📹) mode by pressing the **MODE** button. ➡ page 33

To record in the Time Lapse REC mode, you need to set the recording interval and the total recording time from start to finish using the menu.

1. Touch the Menu (☰) tab. → **"Time Lapse REC" → "On."**
 - The menu screen appears.
2. Touch the desired items (Interval, Rec Limit, Resolution) and then touch up (▲) or down (▼) tab to set the values.
3. Touch (OK) tab to finish the setting.
4. To exit the menu, touch the Exit (✕) or Return (⏮) tab.
 - If you do not touch **OK** tab and finish settings by using the Exit (✕) or Return (⏮) tab, the Time Lapse REC function will operate at its default setting. The changed setting value you have made will not be applied.
5. After setting the Time Lapse REC mode, press the **Recording start/stop** button. Then the Time Lapse recording starts.

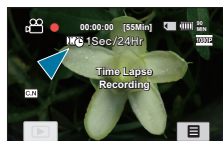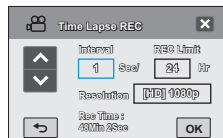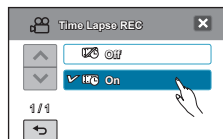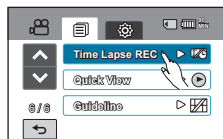


Submenu items

- **Off:** Disables the function.
- **On (📹):**
 - Interval ("Sec"): Image of the subject is captured by set interval. Images are automatically shot a frame at a time at the specified interval and stored in the storage media. 1 → 3 → 5 → 10 → 15 → 30 (Seconds)
 - REC Limit ("Hr"): Total time from start to finish of recording. 24 → 48 → 72 → ∞ (Hours)
 - Resolution: you can choose the resolution in the following settings: [HD] 1080p → [SD] 480p

advanced recording



Example of Time Lapse Recording

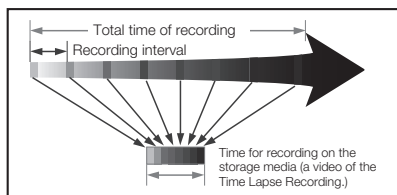

The Time Lapse Recording function records image frames at the predefined interval over the total recording time to produce a time-lapse video.

For example, the Time Lapse Recording is useful for filming in the following situations:

- Blooming flowers
- A bird building a nest
- Clouds rolling by in the sky

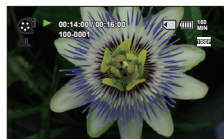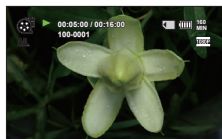

- Time Lapse Recording mode is released once recording has been finished. To start another Time Lapse Recording, repeat steps 1-5.
- 30 captured images compose a video of 1 second length. Since the minimum length of a video to be saved by your camcorder is one second, the interval defines how long the Time Lapse Recording should be taken. For example, if you set the interval to "30 Sec," Time Lapse Recording should be taken for at least 15 minutes to record a minimum video length of 1 second (30 images).
- Once the Time Lapse Recording finishes recording for its total recording time, it switches to the standby mode.
- Press the **Recording start/stop** button if you want to stop the Time Lapse Recording.
- Audio is not recorded during Time Lapse Recording.
- When a video recording fills up 3.8GB of storage memory, a new recording file is automatically started at that point.
- When the battery charge was exhausted during the Time Lapse recording, it saves recording up to that point and switches to standby mode. After a while, it displays a warning message, then turns off automatically.
- When the memory space of the storage media is insufficient during the Time Lapse Recording, it switches to the standby mode after saving the recording up to its maximum.
- We recommend using the AC power adaptor for a Time Lapse Recording.

Quick View


Using the Quick View function, you can view the most recently recorded video and photo images as soon as the recording is finished.

PRECHECK!

Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

Quick View function in the video record mode

1. Touch the Menu (☰) tab → “Quick View.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

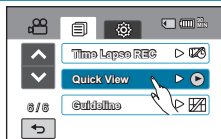

Submenu items

- **Off:** Quick View icon does not appear on the screen after you finish the recording.
- **On:** Quick View icon appears on the screen as soon as you finish the recording. Touch the Quick View icon to view the most recent video you have recorded. After the Quick Playback is completed, your camcorder switches back to the standby mode.



If you touch the delete (🗑️) tab during Quick Playback, the file is deleted.





Quick View function in the photo record mode

1. Touch the Menu (☰) tab → “Quick View.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.

Submenu items

- **Off:** Disables the function.
- **1sec:** The most recently taken photo image is shown for 1 second.
- **3sec:** The most recently taken photo image is shown for 3 seconds.
- **Hold:** The most recently taken photo image appears and does not disappear until you press the PHOTO button.

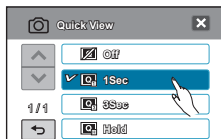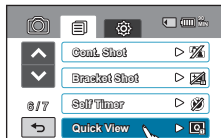

advanced recording

Guideline

This camcorder provides 3 types of guidelines to help you to set a balanced image composition on the screen.



 
PRECHECK!



Select the Video (📹) or Photo (📷) mode by pressing the **MODE** button. ➡ page 33

1. Touch the Menu (☰) tab → “Guideline.”
2. Touch a desired guideline according to the subject.
 - The selected guideline appears on the screen.
If you do not want to use this function, touch “Off.”
3. To exit the menu, touch the Exit (✕) or Return (↩) tab.



Submenu items

- **Off:** Cancels the guideline function.
- : This is the basic guideline. Use this when focusing a subject in the center.
- : Images beyond the left/right and up/down line do not disappear when edited in the 4:3, and 2.35:1 ratio, respectively.
- : Use this when recording a subject in a horizontal or vertical composition, or when shooting with the tele macro function.

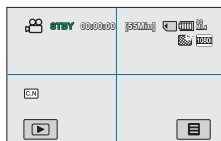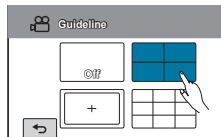

- Position the subject at a crosspoint of the guideline to balance the image composition.
- The guidelines on the screen do not appear on the images actually recorded.

advanced playback

Play Option

You can set a specific playback style according to your preference.



PRECHECK!

Touch the Play (▶) → HD (HD) or SD (SD) tab on the LCD screen. ➡ page 50

1. Touch the Menu (☰) tab → “Play Option.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (X) or Return (↩) tab.

Submenu items

- **Play All** (ALL): Plays video clips in succession starting from the selected video to the last one, then returns to the thumbnail index view.
- **Play One** (1): Plays the selected video only and returns to the thumbnail view.
- **Repeat All** (🔁): Repeats playing all the video clips until the Return (↩) tab is touched.
- **Repeat One** (🔁): Repeats playing the selected video only until the Return (↩) tab is touched.

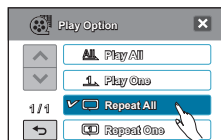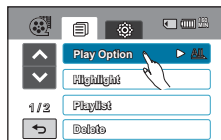

Highlight

This camcorder shows a section of the recorded video(s) at random.



PRECHECK!

Touch the Play (▶) → HD (HD) or SD (SD) tab on the LCD screen. ➡ page 50

1. Touch the Menu (☰) tab. → “Highlight.”
2. Touch a desired submenu item.
 - When the highlight view is finished, the video thumbnail view appears.
 - In the highlight play mode, you can adjust the volume by touching the screen and can also cancel the playback.
3. To exit the menu, touch the Exit (X) or Return (↩) tab.

Submenu items

- **Recent** (🕒): Shows a section of the videos that were created within the last 24 hours.
- **All** (📁): Shows a section of all video files.

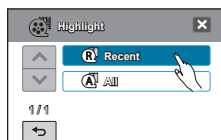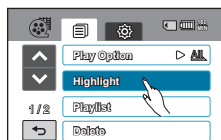

If you execute the Highlight function in the date thumbnail display, all the files in the selected date set appear on the LCD screen.

advanced playback

Cont. Capture

You can take photos (JPEG format) in succession **while playing a video**.



PRECHECK!

Touch the Play (▶) → HD (HD) or SD (SD) tab on the LCD screen. ➡ page 50

1. Touch the Menu (☰) tab → “**Cont. Capture.**”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏮) tab.
 - The Cont. Capture (📷) indicator appears on the screen during video playback. When you press the **PHOTO** button at a desired scene, still images are captured in succession in the selected intervals.
 - For details on the continuous photo capture, refer to page 48.

Submenu items

- **1Cut**: Captures only one still image.
- **2Cut/1Sec** (📷): Captures up to 2 still images per second by pressing the **PHOTO** button.
- **5Cut/1Sec** (📷): Captures up to 5 still images per second by pressing the **PHOTO** button.

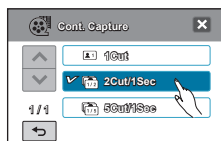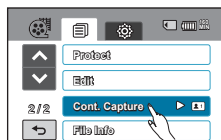

- When an error occurs (memory full, etc) during a continuous recording, the recording stops and an error message is displayed.
- While pressing down the **PHOTO** button, the video playback will pause each time an image is captured. This will make the image capture seem longer than 1 second, however, 2 or 5 images are being captured for each second of video playback.



File Info

This camcorder shows you information on the recorded images.

PRECHECK!

Touch the Play (▶) tab on the LCD screen to select the playback mode. ➡ page 33

1. Touch the Menu (☰) tab → “**File Info.**”
 - The file information of the selected file appears.
2. Select the desired file to view the file information.
 - The information of the selected file appears.
3. To exit the menu, touch the Exit (✕) or Return (⏮) tab.

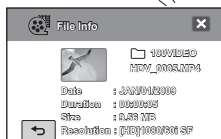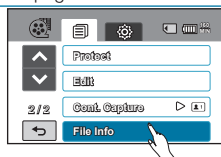


system setting

Date/Time Set

By setting the date and time, you can display the date and time of the recording during playback.

1. Touch the Menu (☰) → Setting (⚙️) tab → **"Date/Time Set"**
2. Touch the date and time information, and change the setting values by using the up (▲) or down (▼) tabs.
3. Touch (OK) tab when the date and time setting is completed.
 - The date/time values are not applied if you finish the setting with (X) or (⏮️) tab without touching the (OK) tab.

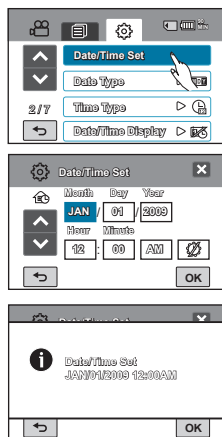

- The year can be set up to 2039, based on "Home" item.
- Set **"Date/Time Display"** display to on. ➡ page 92
- Activating the (⌚) icon forwards the time by 1 hour.

system setting




Date/Time Display

You can set the date and time to be displayed on the LCD screen according to the selected option.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Date/Time Display.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⬅️) tab.
 - The date/time is displayed on the LCD screen according to the selected option.

Submenu items

- **Off** : Current date/time information is not displayed.
- **Date** : Displays the current date.
- **Time** : Displays the current time.
- **Date & Time** : Displays the current date and time.

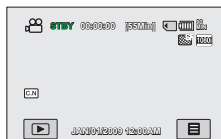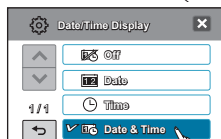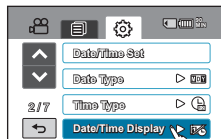

The date/time will read “JAN/01/2009 12:00 AM” in the following cases;

- When video or photo recording was made before setting the date/time in the camcorder.
- When the built-in rechargeable battery is depleted.



Date Type

You can set the display type for the date set according to the selected option.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Date Type.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏮️) tab.

Submenu items

- **2009/01/01** : The date is displayed in the year/month (two-digit)/date.
- **JAN/01/2009** : The date is displayed in the order of month/date/year.
- **01/JAN/2009** : The date is displayed in the order of date/month/year.
- **01/01/2009** : The date is displayed in the date/month (two-digit)/year.

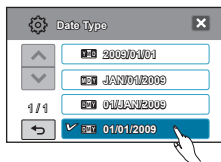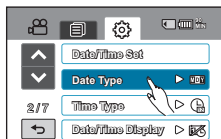


Time Type

You can set the display type for the time set according to the selected option.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Time Type.”
2. Touch the desired display option.
3. To exit the menu, touch the Exit (✕) or Return (⏮️) tab.

Submenu items

- **12Hr** : Displays the time information in 12 hour units.
- **24Hr** : Displays the time information in 24 hour units.

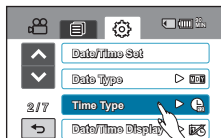

system setting



File No.

File names (numbers) are assigned to recorded images according to the selected numbering option.

1. Touch the Menu (☰) → Setting (⚙️) tab → “File No.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (↩️) tab.

Submenu items

- **Series** : Assigns file numbers in sequence even after you replace or format the memory card or delete all files. Each file is given with a unique file number that allows convenient image management on a PC.
- **Reset** : Resets the file number to 0001 after formatting or deleting all files or inserting a new memory card.

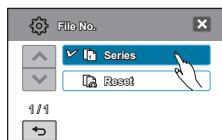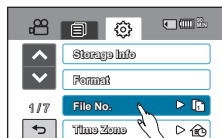

When you set “File No.” to “Series,” each file is assigned with a different number so as to avoid duplicating file names. It is convenient when you want to manage your files on a computer.





Time Zone

You can easily set the clock to the local time when using your camcorder while traveling.

1. Touch the Menu () tab → Setting () tab → “Time Zone” → “Visit.”
2. Touch the left () or the right () tab to select the visited area.
3. Touch () tab when the time zone setting is completed.
 - The time zone set value is not applied if you finish the setting with () or () tab without touching the () tab.

Submenu items

- **Home** : The clock will be used according to your setting on the Date/Time Set menu. Select it when using this camcorder for the first time or when returning the clock to your hometown date/time setting.
- **Visit** (): When you visit a different time zone, it allows you to use the local time without changing your hometown time setting. The clock will be adjusted in accordance with the time difference between the two locations.

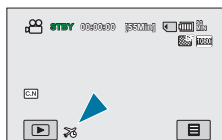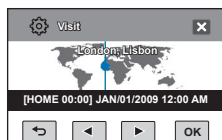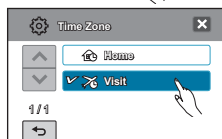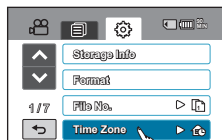

system setting



LCD Control

You can adjust the brightness and saturation of the LCD screen.

1. Touch the Menu (☰) → Setting (⚙️) tab → “LCD Control.”
2. Touch the decrease (◀️) or increase (▶️) tab to adjust the value of a desired item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

Submenu items

- **Brightness** : Adjusts the brightness of the LCD screen.
- **Color** : Adjusts the saturation of the LCD screen.

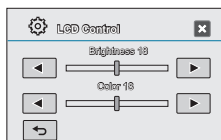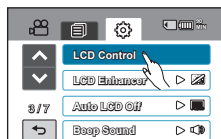

- If the surrounding is too bright, adjust the brightness of the LCD screen.
- Adjusting the LCD screen does not affect the image being recorded.
- Brighter LCD screen consumes more power.



LCD Enhancer

Contrast is enhanced for a clear and bright image. This effect also works outdoors in bright daylight.

1. Touch the Menu (☰) → Setting (⚙️) tab → “LCD Enhancer”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

Submenu items

- **Off** : Disable the function.
- **On (🔆)** : The LCD contrast is enhanced.

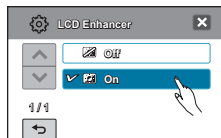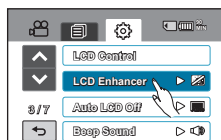

LCD enhancer function does not affect the quality of the image being recorded.



Auto LCD Off

To reduce power consumption, the brightness of the LCD screen is automatically dimmed if the camcorder is idle for more than 2 minutes.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Auto LCD Off.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

Submenu items

- **Off** : Disable the function.
- **On** : When the camcorder is idle for more than 2 minutes in Video or Photo STBY mode, or for more than 5 minutes when recording a video, the power saving mode starts by dimming the LCD screen.

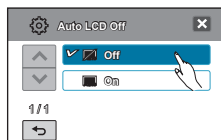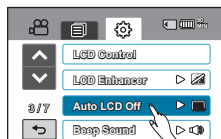

When this “Auto LCD Off” function is enabled, you can press any button on the camcorder to return LCD brightness to normal.



Bootling Mode

You can choose the bootling mode that starts up when you turn on the camcorder.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Bootling Mode.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

Submenu items

- **Video Mode** : When the power is on, the camcorder will turn on in the video standby mode.
- **Photo Mode** : When the power is on, the camcorder will turn on in the photo standby mode.
- **Previous Mode** : The camcorder will keep turning on in the last mode used.

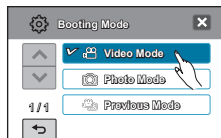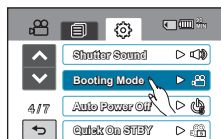


system setting

Quick On STBY


When you are going to record frequently for an extended time, use the Quick On STBY function. In standby mode, closing the LCD screen will commence the Quick On STBY mode to reduce energy consumption. Once you are ready to record again, this function enables to the camcorder to come on quickly from the power saving mode.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Quick On STBY.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab
 - In the standby mode, closing the LCD screen will soon execute the Quick On STBY mode, and then the camcorder turns off after the selected time setting.

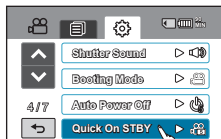

Submenu items



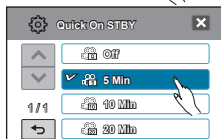

- **Off** : In the standby mode, closing the LCD screen turns off the camcorder.
- **5 Min** : In the standby mode, closing the LCD screen will soon execute the Quick On STBY mode, and then the camcorder turns off after 5 minutes.
- **10 Min** : In the standby mode, closing the LCD screen will soon execute the Quick On STBY mode, and then the camcorder turns off after 10 minutes.
- **20 Min** : In the standby mode, closing the LCD screen will soon execute the Quick On STBY mode, and then the camcorder turns off after 20 minutes.



- Turning off the camcorder after use is always recommended to reduce the energy consumption, however, you can effectively use the Quick On STBY function for the frequent shooting conditions in the specified time schedule.
- In the Quick On STBY mode, “**Auto Power Off: 5 Min**” setting is disabled.
- The mode indicator keeps blinking in the Quick On STBY mode.
- The Quick On STBY mode is not available in the following conditions:
 - When the LCD screen is open.
 - When a video cable (HDMI, Component/AV) or the USB cable is connected to the camcorder.
 - When operating the buttons on the camcorder.

PC Software

If you set PC Software to On, you can simply use the PC software by connecting the USB cable between the camcorder and your PC. You can download the stored video and photo images on the camcorder to your PC's hard disk. Editing video/photo files is also available using the PC software.



1. Touch the Menu () → Setting () tab → “PC Software.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit () or Return () tab.

Submenu items

- **Off** : Disables the function.
- **On** : The built-in editing software launches when the camcorder is connected to the PC.



- The PC Software function is not available if “**USB Connect**” is set to “**PictBridge**.”
- To Enable the PC Software function, set “**USB Connect**” to “**Mass Storage**,” in the system setting menu option.
- The PC Software is compatible with the Windows OS only.

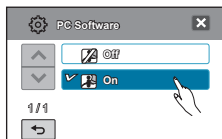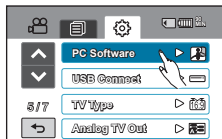







Storage Info

This function shows you the storage information of the selected storage media (memory card), such as used and available memory space, etc.

PRECHECK!

Insert the memory card in the camcorder before viewing the storage information.

1. Touch the Menu () → Setting () tab → “Storage Info.”
2. Used memory space, available memory space for use, and the recordable time depending on the selected video resolution appears.
3. To exit the menu, touch the Exit () or Return () tab.

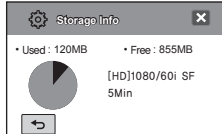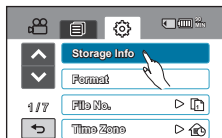

system setting

Format


Use this function if you want to delete all files completely or to correct problems on the storage media.

PRECHECK!

You can completely delete all files and options on the storage media, including protected files. This enables stable speeds and operation when accessing the recording medium.

Be aware that all files and data including protected files will be erased.

1. Touch the Menu (☰) → Setting (⚙️) tab → **“Format.”**
 - A message appears asking about formatting the memory card.
2. Touch **“Yes.”**
 - The format is executed with a message.

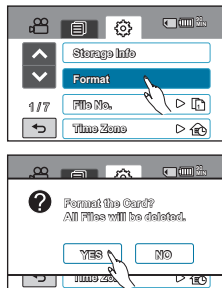

- Do not remove the recording medium or perform any other operation (such as turning off the power) during formatting. Also, be sure to use the provided AC adapter, as the recording medium may be corrupted if the battery becomes exhausted during formatting.
- If the recording medium becomes corrupted, format it again.




- **Do not format the storage media on a PC or other device.**
Make sure to format the storage media on this camcorder.
- Format the memory card in the following cases:
 - before using a new memory card
 - a memory card formatted/recorded on other devices
 - when this camcorder cannot read the memory card
- A memory card with the protection tab set to lock will not be formatted. ➡ page 38
- If there is no storage media inserted, it can not be selected. Then it will be dimmed on the menu.

Beep Sound


This setting allows operations such as touching tabs and buttons on the screen to be signaled by a beep.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Beep Sound.”
2. Touch a desired submenu item.
3. To exit, touch the Exit (✕) or Return (⏪) tab until the menu disappears.

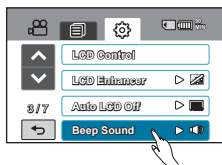

Submenu items

- **Off** : Disables the function.
- **On** : You will hear a beep sound when operating buttons or tabs such as the power button or recording start/stop button.

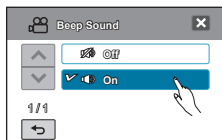


The beep sound is off when recording a video.

Shutter Sound


You can turn the shutter sound on or off when pressing the PHOTO button.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Shutter Sound.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

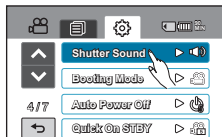

Submenu items

- **Off** : Disable the function.
- **On** : You will hear the shutter sound when operating the **PHOTO** button.

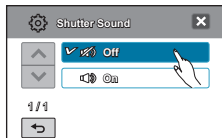


- The shutter sound is not heard in the following conditions:
 - In case of using the **PHOTO** button during video recording.

system setting

Auto Power Off


You can set your camcorder to automatically turn off if it is idle for 5 minutes without an operation. This function will prevent unnecessary power consumption.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Auto Power Off.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

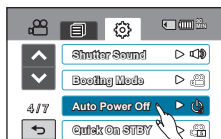

Submenu items

- **Off** : Disable the function.
- **5 Min** : The camcorder turns off if idle for 5 minutes without an operation.

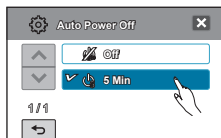

- Auto Power Off does not work in the following situations:
 - If the cable (HDMI, Component/AV, etc) is connected while recording or the playback.
 - While the Quick On STBY function is in operation.
 - While the Demo function is in operation.
 - While in recording, playing (except pause), Photo slide show.
- To operate the camcorder again, press the Power (⏻) button.

Rec Lamp


You can turn the recording indicator on or off that lights during video or photo recording.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Rec Lamp.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.
 - If you set “Rec Lamp” to “On,” you can easily distinguish whether the recording is in progress by looking at the recording indicator on your camcorder.



Submenu items

- **Off** : Disables the function.
- **On** : The recording indicator turns on while the recording is in progress.

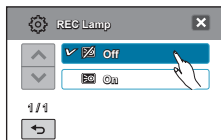



USB Connect

You can transfer data to a PC or print photos directly by establishing the USB connection.

1. Touch the Menu (☰) → Setting (⚙️) tab → “USB Connect.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

Submenu items

- **Mass Storage** : Connect to a PC to transfer videos or photos. ➡ page 127
- **PictBridge** : Connect to a PictBridge printer to print photos directly (when using the PictBridge function). ➡ page 117

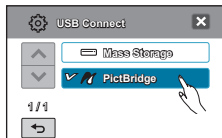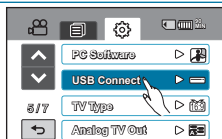


Before connecting a USB cable, check whether the current USB mode is appropriate for the function to be used.


TV Connect Guide

You can view the TV Connect Guide before you connect the camcorder to your TV set.


1. Touch the Menu (☰) tab → “TV Connect Guide.”
2. Touch a desired submenu item.
 - TV Connect Guide appears depending on the selected submenu items.
 - Refer to the TV Connect Guide when connect your camcorder with other external devices.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

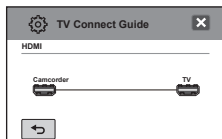


HDMI

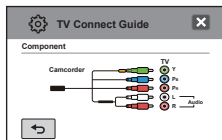

Component

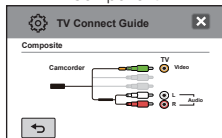

Composite

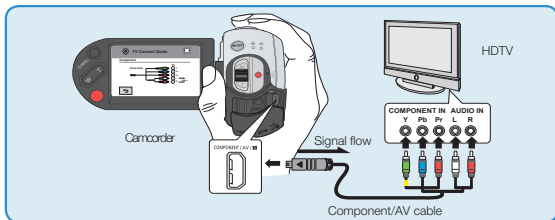

system setting


TV Display

You can enable or disable the On Screen Display (OSD) that appears on the TV screen when connecting your camcorder to a TV.

1. Touch the Menu (☰) → Setting (⚙️) tab → “TV Display.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

Submenu items

- **Off** : The OSD (On Screen Display) menus are only shown on the LCD screen.
- **On** : The OSD menus are shown on the LCD screen and the TV screen as well.

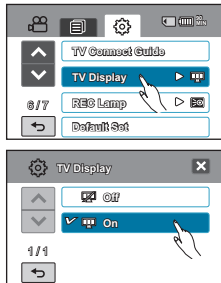

The thumbnail display, demo, and the iCHECK (I□I/iCHECK) screens are shown on the TV even if you set “TV Display” to “Off.”

TV Type

You need to convert the aspect ratio of the camcorder to match your TV.


PRECHECK!

Using the Component/AV Cable provided with your camcorder, connect the camcorder to your TV. ➡ page 119~123

1. Touch the Menu (☰) → Setting (⚙️) tab → “TV Type.”
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

Submenu items

- **16:9** : Select this to view images on a 16:9 (wide) TV.
- **4:3** : Select this to view images on a 4:3 (standard) TV.

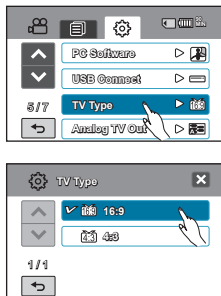

- This function works only when the camcorder is connected to a TV.
- This function is not available if “Analog TV Out: Component Auto” is set.
- TV type is automatically selected when connecting with an HDMI cable. So you don't need to use this setting when using an HDMI cable.


Analog TV Out

You can set the component or composite video output to match the TV you have connected.

PRECHECK!

- Using the Component/AV Cable provided with your camcorder, connect the camcorder to your TV. ➔page 119–123
- This HD camcorder provides the two-in-one component/AV cable that fits the purpose of the component and the AV cable. Therefore, when using the component/AV cable, you must check the right method for the TV output by setting the “Analog TV Out” menu.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Analog TV Out.”
2. Touch a desired submenu item.
 - Check the TV type, connection jack, and the resolution of the recorded video before you choose the desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏪) tab.

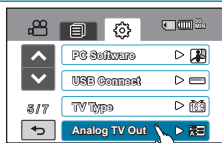

Submenu items

- **Component Auto**(☑️): The video signals are output in the same format as the recorded file. Use this setting only when connecting to an HDTV.
- **Component 480p**(480p): The recorded file is output in the 720x480P format. Use this setting only when connecting to a regular TV which supports the progressive scan at the SD(Standard Definition) level by using the component(Y/Pb/Pr, AUDIO) jacks.
- **Component 480i**(480i): The recorded file is output in the 720x480i format. Use this setting only when connecting to a regular TV which only supports the SD(Standard Definition) resolution without the progressive scan by using the component(Y/Pb/Pr, AUDIO) jacks.
- **Composite**(☑️): The composite video signals are output via the Component/AV cable (green). Use this setting only when connecting to a regular TV that has no component video jacks.




- The Analog TV Out indicator is displayed only when the camcorder is connected to a TV.
- For details on TV specification, refer to the user manual of the connected TV.
- Although the “Analog TV Out” is set to “Component 480p,” the component video signal is output as interlaced format if the resolution is set to [HD]1080/60i.


Default Set

You can restore all menu settings to the default conditions.

1. Touch the Menu (☰) → Setting (⚙️) tab → “Default Set.”
 - A message appears asking for your confirmation.
2. Touch “Yes” if you want all the settings return to the default.
 - The Time Zone screen appears after all settings return to the default.
3. Set the date and time again. ➔page 35

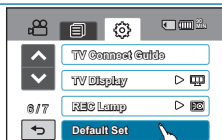

- Do not turn off the power while using this function.
- Initializing the HD camcorder settings to factory defaults does not affect recorded images.

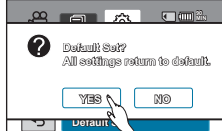

advanced operation: system setting

Demo

Demo mode automatically shows you the major functions that are included with your camcorder so that you may use them more easily.

1. Touch the Menu (☰) → Setting (⚙️) tab → **"Demo"** → **"On."**
 - If you don't want this function, touch **"Off."**
2. To exit the menu, touch the Exit (✕) or Return (⏮️) tab.
 - The Demo function starts on the LCD screen.

Submenu items



- **Off** : Disable the function.
- **On**: Enables the Demo function.

Using the Demo function

- The Demo mode is canceled in the following cases:
 - If the LCD screen is touched.
 - If any button is operated (Recording start/stop, Q.MENU, Display (I/O)/CHECK, EASY Q, MODE, PHOTO, etc.) However, the camcorder will enter the Demo mode automatically after 5 minutes in STBY mode if it is idle for 5 minutes without an operation. If you don't want the Demo function starts, set **"Demo"** to **"Off"**.



- The Demo function does not operate in the following cases:
 - If **"Auto Power Off"** is set to **"5 Min"**(uses the battery as main power), the Auto Power Off function will turn the camcorder off before Demo can run.

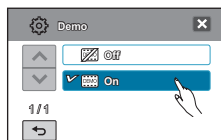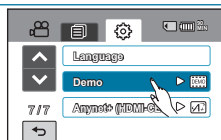

Anynet+ (HDMI-CEC)

This camcorder supports Anynet+. Anynet+ is an AV network system that enables you to control all connected Samsung AV devices with an Anynet+ supported Samsung TV remote control.



1. Touch the Menu (☰) → Setting (⚙️) tab → **"Anynet+ (HDMI-CEC)"**.
2. Touch a desired submenu item.
3. To exit the menu, touch the Exit (✕) or Return (⏮️) tab.
 - When the camcorder is connected to the Anynet+ supported TV, you can operate some functions of the camcorder using the TV's remote control.

Submenu items

- **Off**: Disable the function.
- **On**: The Anynet+ function is enabled.



- When you turn on the camcorder that is connected to an Anynet+ supporting TV with an HDMI cable, the TV (Anynet+ supported) is automatically turned on. If you do not want to use this Anynet+ function, set the **"Anynet+ (HDMI-CEC)"** to **"Off."**
- For details on the Anynet+ (HDMI-CEC) function, refer to the user manual of Samsung's Anynet+ supported TV.

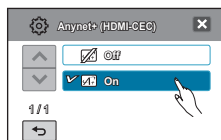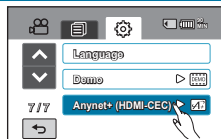

editing video clips


DELETING A SECTION OF A VIDEO

You can delete a scene partially. As this function edits the original file, make sure to back up important recordings separately.

PRECHECK!

- This function works in Video play mode only.
- Touch the Play (▶) → HD (HD) or SD (SD) tab on the LCD screen. → page 50

1. Touch the Menu (☰) tab → “Edit” → “Partial Delete.”

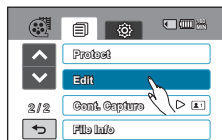


2. Touch a desired video to edit.

- The selected video is displayed in pause mode.

3. Search the start point of deletion by using playback control tabs, and touch the Selection (☑) tab at the starting point.

- Playback control tabs: ▶ | ⏸ | ◀▶ | ▶▶ | ◀◀ | ▶▶▶
- “☑” mark appears at the start point.

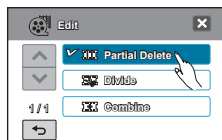

4. Touch playback control tabs to search the end point of deletion, and touch the Selection (☑) tab at the end point.


- “☑” mark appears at the end point.

5. Touch Partial Deleting (⏮) tab.

- A message appears asking for your confirmation.

6. Touch “Yes.”

- The selected part of the video is deleted.

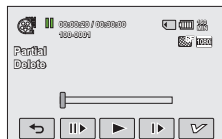

- The deleted part of the original file cannot be recovered.
- Do not eject a memory card or power off while editing a video recorded on the memory card. Doing so may damage the storage media or data.



- You can not delete files that are protected. Cancel the protect function to delete the file. → page 114
- If you want to cancel the partial delete or to edit from the beginning, touch the Return (⏮) tab.
- The Partial Delete function is not available in the following conditions:
 - If the duration of the section to delete is less than 3 seconds.
 - If the duration of the remaining section (after deleting the section) ends up being less than 3 seconds.
 - If the video file is recorded in the Time Lapse REC mode.
 - If the remaining section of the memory space is less than 4MB.
 - Videos recorded or edited by other devices.
 - Videos transferred to this camcorder by using Samsung Intelli-studio.
- When partial delete is performed, the same video in the playlist is also partially deleted.

editing video clips


DIVIDING A VIDEO


You can divide a video into two, and easily delete a section you no longer need. As this function edits the original file, make sure to back up important recordings separately.


PRECHECK!

- This function works in Video play mode only.
- Touch the Play(▶) → HD(ⓂHD) or SD(ⓂSD) tab on the LCD screen. ➡ page 50

1. Touch the Menu (☰) tab → “Edit” → “Divide.”
2. Touch a desired video to edit.
 - The selected video is displayed as paused.
3. Search the point of division by touching playback control tabs.
 - Playback control tabs: ▶/⏸/◀/▶▶/⏮/▶▶▶
4. Touch the pause (⏸) tab at the point of division, then touch the Cutting (✂) tab.
 - A message appears asking for your confirmation.
5. Touch “Yes.”
 - The selected video is divided into two video clips.
 - The second clip of the divided video is displayed as the last thumbnail.
 - After the division, you can partially delete a unnecessary section or combine with other videos.

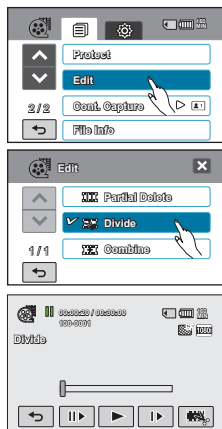

 Do not eject a memory card or power off while editing a video recorded on the memory card. Doing so may damage the storage media or data.

- 
- You can not delete files that are protected (Ⓜ) indicator is written on. Cancel the protect function first. ➡ page 114
 - The divided video may drift before or after the division point by approx. 0.5 seconds.
 - The Divide function is not available in the following conditions:
 - If the total recorded time of the video is less than 6 seconds.
 - If you trying to divide sections without leaving 3 seconds at the beginning and the end.
 - If the video file is recorded in the Time Lapse REC mode.
 - If the remaining section of the memory space is less than 8MB.
 - Videos recorded or edited by other devices.
 - Videos transferred to this camcorder by using Samsung Intelli-studio.
 - The division function does not work if available space on the storage is insufficient. Delete unnecessary videos.
 - When the video is divided into two, only the first video clip is stored in the playlist again.
 - Photos cannot be divided.

COMBINING VIDEOS

You can combine up to 5 different videos into one. As this function edits the original file, make sure to back up important recordings separately.

PRECHECK!

- This function works in Video play mode only.
- Touch the Play(▶) → HD(📹HD) or SD(📹SD) tab on the LCD screen. ➡ page 50

1. Touch the Menu (☰) tab → “Edit” → “Combine.”

2. Touch video thumbnails to be combined.




- The (📹) indicator and the order number are displayed on the selected videos. Touching the video thumbnail toggles the image between being selected (📹) or not selected.
- The (📹) indicator does not appear if there is a different resolution between selected videos files.

3. Touch OK (OK) tab.

- A message appears asking for your confirmation.

4. Touch “Yes.”

- The selected video files are combined in the chosen order and stored as one video.
- The thumbnail of the first movie image will appear in the combined movie image.

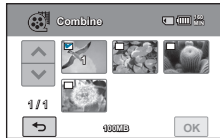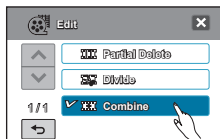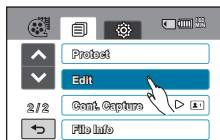

Do not eject a memory card or power off while editing a video recorded on the memory card. Doing so may damage the storage media or data.



- You can not delete files with the protect (🔒) indicator is written on. Cancel the protect function first. ➡ page 114
- The original video will not be preserved.
- Photos cannot be combined.
- **The combine function is not available in the following conditions:**
 - Videos in different resolution formats (Videos recorded at “Resolution:[HD]1080/60i” and “Resolution:[HD]720/60p”) cannot be combined.
 - The file size of the combined videos cannot exceed 3.8 GB.
 - The video file recorded in the Time Lapse REC mode cannot be edited.
 - If the remaining section of the memory space is less than 4MB, the files cannot be combined.
 - Videos recorded or edited by other devices.
 - Videos transferred to this camcorder by using Samsung Intelli-studio.

editing the playlist


PLAYLIST

What's a "Playlist?"

- You can create a playlist on the same memory card by gathering your favorite scenes from the recorded videos. Adding or deleting videos from a playlist does not affect the original video images.

Example: You have recorded a few scenes on a memory card. You want to save the original recording, but you also want to create a digest by putting your favorite scenes together. In this case, you can create a playlist by selecting your favorite scenes, leaving the original recording as it is.

Recorded Videos

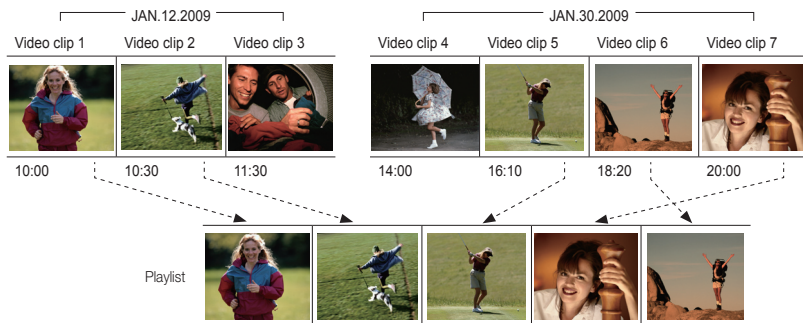

- The maximum number of playlists on the storage media: One playlist can be created per each resolution set, "HD (High definition)" and "SD (Standard Definition)."
- The maximum number of videos on the playlist: 99 videos
- If original videos are deleted, scenes on the playlist created with these videos are also deleted.




CREATING THE PLAYLIST

You can create a playlist by gathering your desired videos from the recorded video.

PRECHECK!

- This function works in Video play mode only.
- Touch the Play (▶) tab on the LCD screen to select the playback mode. ➡ page 33

1. Touch the Menu (☰) tab → **“Playlist.”**
 - The menu window appears for selecting the video resolution.
2. Touch **“HD”** or **“SD.”**
 - The thumbnail display appears according to the selected resolution.
3. Touch the Menu (☰) tab, then touch **“Add.”**
 - Video thumbnails corresponding to the selected video quality appear on the screen.
4. Touch the desired video to be added to the playlist.
 - The (☑) indicator is displayed on the selected video. Touching the video toggles the image between being selected (☑) and not selected.
5. Touch **OK** (OK) tab.
 - A message appears asking for your confirmation.
6. Touch **“Yes.”**
 - The playlist is created.
 - You can play the playlist in the same manner as you play a video.

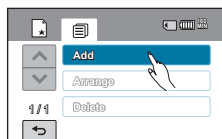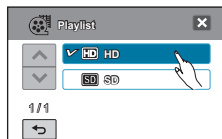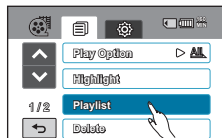

While editing the playlist, do not eject the memory card or power off the camcorder. Doing so may damage the storage media or data.



If available space on the storage is insufficient, you can not create or add a playlist. Delete unnecessary videos.

editing the playlist





ARRANGING VIDEOS IN THE PLAYLIST

You can change the order of videos on the playlist.

PRECHECK!

- This function works in Video play mode only.
- Touch the Play (▶) tab on the LCD screen to select the playback mode. ➡ page 33

1. Touch the Menu (☰) tab → **“Playlist.”**
2. Touch **“HD”** or **“SD.”**
 - Video thumbnails corresponding to the selected video quality appear on the screen.
3. Touch the Menu (☰) tab, then touch **“Arrange.”**
 - The playlist appears.
4. Touch the video you want to move.
 - The (☑) indicator and the selection bar appear on the selected video. Touching the video toggles the image between being selected (☑) and not selected.
5. Touch the previous (◀)/ next (▶) tab to move the bar to the position you want, then touch **OK (OK)** tab.
 - A message appears asking for your confirmation.
6. Touch **“Yes.”**
 - The video moves to the selected position.

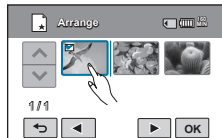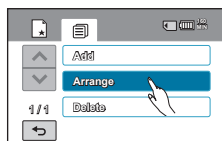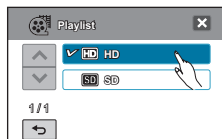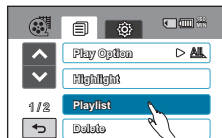

While editing the playlist, do not eject the memory card or power off the camcorder. Doing so may damage the storage media or data.




DELETING VIDEOS FROM THE PLAYLIST

You can delete undesired videos from the playlist.

PRECHECK!

- This function works in Video play mode only.
- Touch the Play (▶) tab on the LCD screen to select the playback mode. ▶ page 33

1. Touch the Menu (☰) tab → “Playlist.”
2. Touch “HD” or “SD.”
 - Video thumbnails corresponding to the selected video quality appear on the screen.
3. Touch the Menu (☰) tab, then touch “Delete.”
 - The playlist appears.
4. Touch the video you want to delete.
 - The (👉) icon and the selection bar appear on the selected video. Touching the video toggles the image between being selected (👉) and not selected (👈).
5. Touch **OK** (OK) tab.
 - A message appears asking for your confirmation.
6. Touch “Yes.”
 - The selected videos are deleted from the playlist.

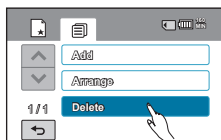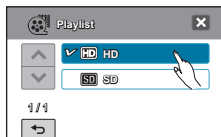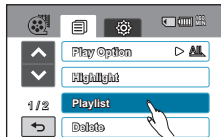

While editing the playlist, do not eject the memory card or power off the camcorder. Doing so may damage the storage media or data.

file management



PROTECTION FROM ACCIDENTAL ERASURE

You can protect important recordings from accidental erasure. The protected videos and photos are not deleted unless they are formatted or the protection is canceled.

PRECHECK!

Touch the Play (▶) tab on the LCD screen to select the playback mode. ➡ page 33

1. Touch the Play (▶) → HD (HD), SD (SD) or Photo (Photo) tab.
 - Videos or photos appear as thumbnails.
2. Touch the Menu (☰) tab → “Protect.”
3. Touch a desired submenu item.
4. The corresponding message to the selected option appears. Touch “Yes.”
 - The protection is set to on or off.
 - The (🔒) indicator appears on the protected file.

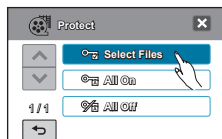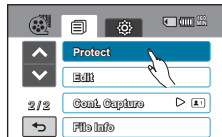

Submenu items

- “**Select Files**”: Protects individual images. Touch images to protect from erasure. The (🔒) indicator is displayed on the selected images. Touching the thumbnail image toggles the image between being selected (🔒) or not selected. Touch **OK** (OK) tab.
- “**All On**”: Protects all images.
- “**All Off**”: Releases the protected images all at once.



- You can also operate this function in the full and single image display mode.
- If the write protection tab on the memory card is set to lock, you cannot set this function. ➡ page 38

DELETING FILES

You can erase your recordings one by one, or at once.



PRECHECK!

Touch the Play (⏮) tab on the LCD screen to select the playback mode. ➡ page 33

1. Touch the Play (⏮) → HD (📺HD), SD (📺SD) or Photo (👤) tab.
 - Videos or photos appear as thumbnails.
2. Touch the Menu (☰) tab → “Delete.”
3. Touch a desired submenu item.
4. The corresponding message to the selected option appears. Touch “Yes.”
 - The selected image is deleted.

Submenu items

- **“Select Files”**: Deletes individual images.
Touch images you want to delete.
The (👤) indicator is displayed on the selected images.
Touching the thumbnail image toggles the image between being selected (👤) or not selected. Touch **OK** (OK) tab.
- **“All Files”**: Deletes all images.

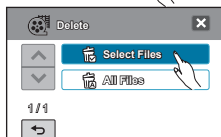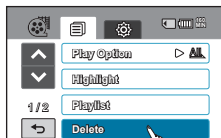

- Deleted images cannot be recovered.
- Do not eject a memory card or power off while deleting videos recorded on the memory card. Doing so may damage the storage media or data.



- To protect important images from accidental erasure, activate the image protection function in advance. ➡ page 114
- You can not delete protected files. Cancel the protect function first.
- If the write protection tab on the memory card is set to lock, you cannot delete the images. ➡ page 38
- You can also operate this function in the full and single image display mode.
- The delete function does not work if battery charge is insufficient. It is recommended to use AC power to continue power supply during the deletion. ➡ page 27

printing photos



DPOF PRINTING SETTING

On your memory card, you can write the print-out information including the number of copies to print. The saved information is used when you connect your camcorder with a DPOF-compatible printer.

PRECHECK!

- Insert the memory card in your camcorder.
- This function works in Photo play mode only.
- Touch the Play (▶) tab on the LCD screen to select the playback mode. ➡ page 33

1. Touch the Photo (📷) tab.
 - The photo thumbnails are displayed.
2. Touch the Menu (☰) tab → "Print Mark (DPOF)."
3. You can choose the following submenu options:
 - **Select Files:** Print-marks individual images. The print marks indicator is displayed on the selected images. Touching the thumbnail image toggles the image between being selected or not selected. Touch the (OK) tab.
 - **Set All:** Print-marks all images.
 - **Reset All:** Removes all the print-marks.
4. The corresponding message appears to the selected option. Touch "Yes."
 - The print mark is selected or removed.
 - The (1) indicator appears on the print-marked photos.

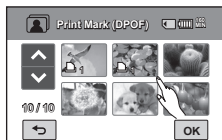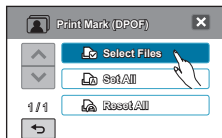

Understanding DPOF

DPOF (Digital Print Order Format) allows you to set which still images on the memory card are to be printed, together with information on the number of copies to be printed.

Tip

In single display mode, you can set the number of prints by using the decrease (−) or increase (+) tab.

- Touch the Menu (☰) tab → "Print Mark(DPOF)" → decrease (−) or increase (+) tab.
- Up to 99 copies can be set to print of each image.






- When you select the "Set All" option, the number of copies to be printed is set to 1.
- Selecting the "Set All" or "Reset All" options may take a long time depending on the number of the selected copies.

DIRECT PRINTING WITH A PICTBRIDGE PRINTER

You can print photos directly by connecting this camcorder to a PictBridge printer (sold separately) and a USB cable.

1. Touch the Menu (☰) → Setting (⚙️) tab → **"USB Connect"** → **"PictBridge."**
2. Use a USB cable to connect your camcorder to the printer.
3. Turn your printer power on.
 - The photo thumbnails appear.
4. Touch the photos to print, then touch the Print (🖨️) tab.
 - The selected photo will be printed.

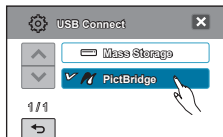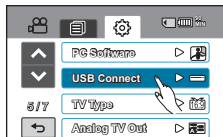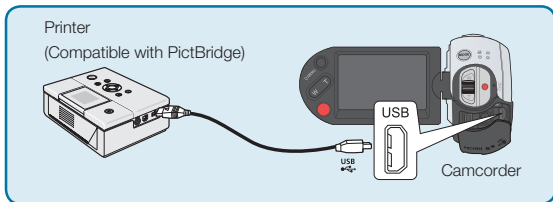

To set the number of prints

Touch the decrease (⊖)/increase (⊕) tab to set the number of copies to print.

- The number of copies is set.

To cancel the print setting

Touch the Return (⏮️) tab on the LCD screen.

To stop printing after printing starts

Touch **"Cancel"** on the screen.





- If the camcorder is connected to a printer while **"USB Connect"** is set to **"Mass Storage,"** the message **"Fail USB Connecting Change 'USB Connect'"** appears. Set the **"USB Connect"** to the **"PictBridge"** then connect the USB cable again.
- Use the supplied USB cable.

printing photos

To set the date/time imprint

1. In the printer mode, touch the Menu (☰) tab.
 - The print options appear on the screen.
2. Touch the “Date/Time.”
3. Touch a desired submenu item.
 - The selected date and time display option is set.
4. To exit the menu, touch the Exit (✕) or Return (⏮) tab.
 - The selected date and time will be printed on the photos.

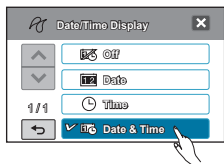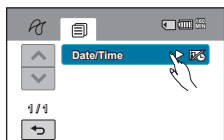

- The date/time imprint option may not be supported by all printers. Check with your printer manufacturer. The “Date/Time” menu cannot be setup if the printer does not support this option.
- PictBridge™ is a registered trademark of CIPA (Camera & Imaging Products Association), an image transfer standard developed by Canon, Fuji, HP, Olympus, Seiko Epson, and Sony.
- Use the AC power adaptor for your camcorder during PictBridge direct printing. Turning the camcorder off during printing might damage data on the storage media.
- Video images cannot be printed.
- Photos recorded on other devices cannot be printed.
- Various printing options are available depending on the printer. Refer to the printer's user manual for details.

connecting to a TV

TO CONNECT TO A HIGH DEFINITION TV

You can enjoy High Definition (HD) quality videos, recorded in “1920x1080” or “1280x720” resolution using an HDTV. The connection methods and quality of the image viewed on the TV screen differ depending on what type of TV is connected, and the connectors used. To playback high quality videos from your camcorder, check if your TV set supports the “1920x1080i” resolution.

This HD camcorder supports both HDMI and component output to deliver high-definition video transfer.

PRECHECK!

- Select the HDMI or the Component jack on your TV. For more information about the connectors and the connection methods, refer to the TV user manual.
- This HD camcorder provides a two-in-one component/AV cable that functions as an component and AV cable. Therefore, when using the component/AV cable, you must select the right method for the TV output by setting the “**Analog TV Out**” menu. ➡ page 105


Understanding the HDMI cable:

HDMI (High Definition Multimedia Interface) is a compact audio/video interface for transmitting uncompressed digital data.

What is Anynet+ function?

You can use the same remote control for devices that support the Anynet + function.

You can use the Anynet + function if the camcorder is connected with an HDMI cable to an Anynet+ supported TV. For more information, refer to the Anynet+ support TV's user manual.

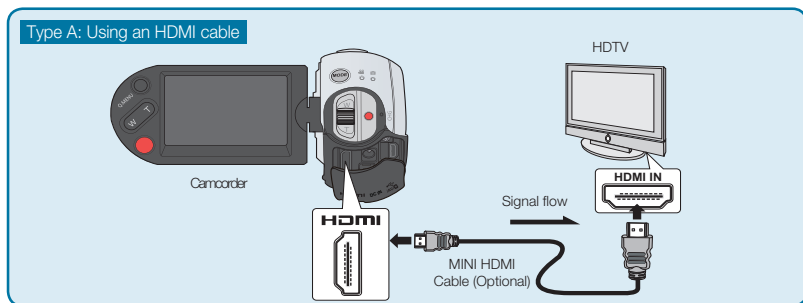


Type A: Using a MINI HDMI cable

1. Turn on the camcorder and connect a Mini HDMI cable to the HDMI jack on your TV.
 - When connecting via HDMI, the connected device may not be recognized if the camcorder is turned off.
2. Turn on your TV and set the TV's input selector to the Input your camcorder is connected to. Refer to the TV's instruction manual to see how to select the TV input.

connecting to a TV

Type B: Using a Component/AV cable

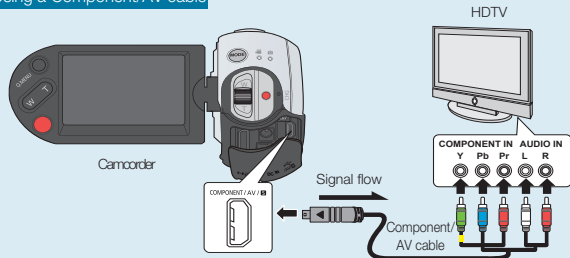

Type B: Using a Component/AV cable

1. Connect the provided component/AV cable to the Component jack, “**Y-Pb-Pr (Video)** and **L-R (Audio)**” on your TV
 - After the connection is complete, set “**Analog TV Out**” to “**Component.**”
↪ page 105
2. Turn on your TV and set the TV’s input selector to the Input your camcorder is connected to. Refer to the TV’s instruction manual to see how to select the TV input.



If the **Pr**, **Pb**, or **Y** jack is not connected correctly, the TV screen may appear red or blue.



- When connecting to TV using the component/AV cable, match the colors between the cables and the corresponding jacks.
- Videos recorded using the HD camcorder will playback on an HDTV in the original resolution you set in the camcorder. Videos recorded in SD quality cannot playback on an HDTV in the HD quality. For example, videos recorded in HD quality (resolution of “[HD]1080/60i,” “[HD]1080/30p” or “[HD]720/60p”) playback in HD quality while the videos recorded in SD quality (resolution of “[SD]480/60p” or “[SD]Web & Mobile”) playback in the SD quality.
- This camcorder is provided with the “**TV Connect Guide**” menu function. If you try to connect the camcorder to a TV (without using the user manual), use the “**TV Connect Guide**” menu function. ↪ page 103
- You must use the provided component/AV cable. Do not use cables from other manufacturers
- Only a C to A type Mini HDMI cable can be used with this camcorder.
- The HDMI jack on the camcorder is provided for the output usage only.
- If the Anynet+ supported TV is connected with the camcorder, turning on the camcorder may turn the TV’s TV power on. (Anynet+ function) If you don’t want this function, set “**Anynet+ (HDMI-CEC)**” to “**Off.**” ↪ page 106
- Use only the HDMI 1.3 cable when connecting to the HDMI jack of this camcorder. If the camcorder is connected with other HDMI cables, the screen display may not work.

CONNECTING TO A REGULAR TV


You can enjoy images recorded with your HD camcorder on a regular TV that supports standard definition. **Images recorded with SD (standard definition) image quality (i.e. resolution of “[HD]1080/60i,” “[HD]1080/30p,” or “[HD]720/60p”) are played back with SD (standard definition) image quality.**

The connection methods and quality of the image viewed on the TV screen differ depending on what type of TV is connected, and the connectors used. This HD camcorder supports both component and composite output for standard definition video transfer.

PRECHECK!

- Check your TV connection jack and select the connection method depending on the component or the composite jack. For more information about the connection jack and the method, refer to the TV user manual.
- **This HD camcorder provides a two-in-one component/AV cable that functions as an component and AV cable. Therefore, when using the component/AV cable, you must select the right method for the camcorder's output by setting the “Analog TV Out” menu.** ➔page 109

Type A: Connecting a Component/AV cable for the component output.

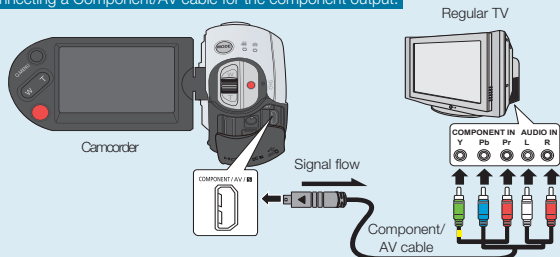


Type A: Connecting a Component/AV cable for the component output

1. Connect the provided component/AV cable to the component jack, “**Y-Pb-Pr (Video)** and **L-R (Audio)**” on your TV.
 - After the connection is complete, set “**Analog TV Out**” to “**Component.**”
➔page 105
2. Turn on your TV and set the TV's input selector to the Input your camcorder is connected to. Refer to the TV's instruction manual to see how to select the TV input.

connecting to a TV

Type B: Connecting a Component/AV cable for the composite output.

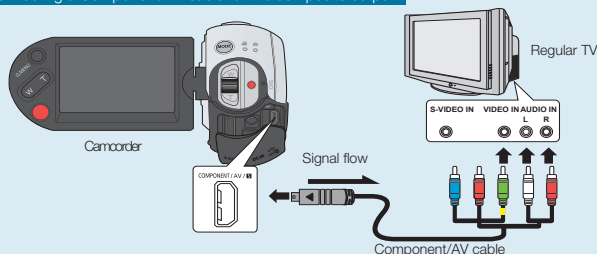

Type B: Connecting a Component/AV cable for the composite output

1. Connect the provided component/AV cable to the Composite jack, “**Video and L-R** (Audio)” on TV. Use the Green plug with the yellow label to connect to the Video input on your TV.
 - After the connection is complete, check the desired TV out method by setting “**Analog TV Out**” to “**Composite.**” → page 105
2. Turn on your TV and set the TV’s input selector to the Input your camcorder is connected to.
 - This is often referred to as “line.”
 - Refer to the TV’s instruction manual to see how to select the TV input.



If the **Pr**, **Pb**, or **Y** jack is connected incorrectly, the TV screen may appear red or blue.



- Check the connection status between the HD camcorder and TV, the TV screen may not deliver the right video information if connected incorrectly.
- When the camcorder is connected to a TV with more than one cable, the output signal is followed in the order of priority:
HDMI → Component/AV output.
- Do not use excessive force when connecting the cables.
- For more information about the TV connection jack and the connecting method, refer to the TV user manual.
- Following method **Type B** above, the Green plug may not match the Video input on your TV due to the VIDEO input being labeled differently. Sometimes the TV set has a “**Y**” input jack instead of “**VIDEO.**”

VIEWING ON A TV SCREEN

You can enjoy the enjoy widescreen videos on a HDTV (or a regular TV) after recording videos using the HD camcorder.

1. You see video from the camcorder on your TV if the connection status is set correctly. ➡page 119-122
 - The TV jacks are connected with the right cables?
 - If the component/AV cable is used, "Analog TV Out" is set correctly?
 - Input source list is correctly set to view the playback from the camcorder?
2. Select the playback mode on your camcorder and start to playback videos.



- Adjust the volume to a moderate level. If the volume is too high, the video information may include noise.
- If the **"TV Display"** is set **"Off,"** the TV screen does not include the OSD (On Screen Display) menus. ➡page 104
- You will only hear audio from the camcorder on your TV in Video playback mode.

Playback on a TV

- Images recorded on this camcorder are variously viewed depending on the aspect ratio of the connected TV and TV type setting on this camcorder. Set the appropriate screen ratio according to your TV.

Recording ratio	TV Type setting	Wide (16:9) TV	4:3 TV
Images recorded in a 16:9 ratio <ul style="list-style-type: none"> • Video Image • Photo capture images • Photo Image 	16:9		
	4:3		
Images recorded in 4:3 ratio <ul style="list-style-type: none"> • Video Image • Photo images • Photo capture images 	16:9		
	4:3		
Images in the Slow Motion mode	16:9		
	4:3		

- Refer to page 104 for **"TV Type"** setting.


dubbing videos

DUBBING TO A VCR OR DVD/HDD RECORDER

You can dub images played back on your camcorder to other recording devices, such as VCRs or DVD/HDD recorders. Be sure to connect your camcorder to the wall outlet using the supplied AC power adaptor for this function.

PRECHECK!

Since dubbing is performed via analog data transfer (composite connection), use the supplied component/AV cable.

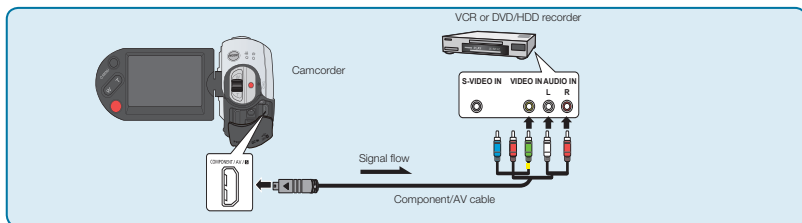

1. Turn on your camcorder, and touch the play (⏮) tab.
 - Set “TV Type” according to the display device ➡ page 104
 - Touch the Menu (⏮) → Setting (⚙) tab → “Analog TV Out” → “Composite.” ➡ page 105
2. Insert the recording media in the recording device.
 - If your recording device has an input selector, set it to the input mode.
3. Connect your camcorder to the recording device (VCR or DVD/HDD recorder) with the supplied component/AV cable (composite connection).
 - Connect your camcorder to the input jacks of the recording device.
4. Start the playback on your camcorder, and record it on the recording device.
 - Refer to the instruction manuals supplied with your recording device for details.
5. When dubbing is finished, stop the recording device, and then your camcorder.
 - Refer to the instruction manuals supplied with your recording device for details.



- **Videos recorded on this camcorder can be dubbed by connecting with the supplied component/AV cable. All the recorded videos will be dubbed with SD (standard definition) image quality, regardless of the recording resolution (HD/SD).**
- You cannot dub to a recorder with an HDMI cable.
- To copy a video recorded with HD (high definition) image quality, use the built-in software of your camcorder, and copy the images to your computer.
- Since dubbing is performed via analog data transfer, the image quality may deteriorate.
- To hide the screen indicators (such as a counter, etc.) on the screen of the monitor device connected, set “TV Display: Off.” ➡ page 104
- To record the date/time, display it on the screen. ➡ page 92
- When you are connecting your camcorder to a monaural device, connect the green plug of the component/AV cable to the video input jack, and the red (right channel) or the white (left channel) plug to the audio input jack on the device.



using with a Windows computer


CHECKING YOUR COMPUTER TYPE

This chapter explains how to connect the camcorder to a computer using the USB cable. Read this chapter carefully and be free from your burden of handling two devices at the same time.

Check your computer type before using!!!

To view your recordings on a computer, you need to check your computer type first. Then, take the steps below according to your computer type.

If you are using a Windows PC		If you are using a Macintosh
<p>Connect your camcorder to the computer using the USB cable.</p> <ul style="list-style-type: none">• The built-in editing software, Intelli-studio runs on the PC automatically once the camcorder is connected to Windows computer. (When you specify "PC Software: On"). ➡ page 99		<ul style="list-style-type: none">• The built-in software on your camcorder, 'Intelli-studio' is not Macintosh compliant.
<p>Play back or edit your recordings on the computer using the built-in Intelli-studio application.</p> <p>➡ page 131</p> <p>You can also upload your recordings to YouTube or other web sites using the Intelli-studio.</p> <p>➡ page 130</p>		

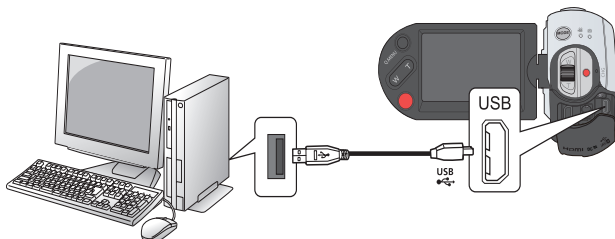

using with a Windows computer

WHAT YOU CAN DO WITH A WINDOWS COMPUTER

You can enjoy the following operations by connecting your camcorder to your Windows computer by using the USB cable.

Main Functions

- By using the built-in Intelli-studio editing software on your camcorder, you can enjoy the following operations.
 - Playing back recorded videos or photos. ➡page 129
 - Editing recorded videos or photos. ➡page 129
 - Uploading the recorded videos and photos to YouTube or Flickr, etc. ➡page 130
- You can transfer or copy the files (videos and photos) saved on the storage media into your computer. (the mass storage function) ➡page 133

System Requirements

The following requirements must be satisfied to use built-in editing software (Intelli-studio):

Items	Requirement
OS	Microsoft Windows XP, or Vista
CPU	Intel® Core 2 Duo® 1.66 GHz or higher is recommended AMD Athlon™ X2 Dual-Core 1.6 GHz or higher is recommended
RAM	512 MB (1 GB and above recommended)
Video Card	nVIDIA Geforce 7600GT or higher Ati X1600 series or higher
Display	1024 x 768, 16-bit color or higher (1280 x 1024, 32-bit color recommended)
USB	USB 2.0
Direct X	DirectX 9.0c or higher



- System requirements mentioned above are recommendations. Even on a system that satisfies the requirements, operations may not be ensured depending on the system.
- On a slower computer than recommended, video playback may skip frames or operate unexpectedly.
- When the version of DirectX on your computer is lower than 9.0c, install the program with the version of 9.0c or higher.


USING THE Intelli-studio PROGRAM

Using the Intelli-studio program built-in your camcorder, you can transfer video/photo files onto your PC and edit them on your computer. Intelli-studio offers the most convenient way for you to manage the video/photo files by using the simple USB cable connection between the camcorder and your PC.

Starting the Intelli-studio program

Step 1. Connecting the USB cable

1. Set the **“USB Connect: Mass Storage”** and **“PC Software: On.”**
 - You will find the default menu settings are set as the above.
2. Connect the camcorder and the PC with the USB cable.
 - A new file saving screen appears with the Intelli-studio main window.
 - According to your computer type, the corresponding removable disk window appears.
3. Click **“Yes,”** the uploading procedure will start. Click **“Yes”** to confirm.
 - If you do not want to save a new file, select **“No.”**

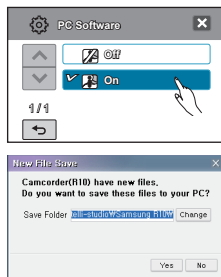

To disconnect the USB cable

After completing the data transfer, make sure to disconnect the cable in the following way:

1. Click the **“Safely Remove Hardware icon”** icon on the taskbar.
2. Select **“USB Mass Storage Device,”** and then click **“Stop.”**
3. If the **“Stop a Hardware device”** window appears, click **“OK.”**
4. Disconnect the USB cable from the camcorder and PC.




- Use the provided USB cable. (Supplied by Samsung)
- Don't apply excessive force when inserting or extracting the USB cable into/from a USB jack.
- Insert a USB after checking the direction of its insertion is correct.
- We recommend using the AC power adaptor as the power supply instead of the battery pack.
- When the USB cable is connected, turning the camcorder on or off may cause the PC to malfunction.
- If you disconnect the USB cable from the PC or the camcorder while transferring, the data transmission will stop and the data may be damaged.
- If you connect the USB cable to a PC via a USB HUB or simultaneously connect the USB cable along with other USB devices, the camcorder may not work properly. If this occurs, remove all USB devices from the PC and reconnect the camcorder.
- According to your computer type, the Intelli-studio program may not automatically run. In this case, open the desired CD-ROM drive that has the Intelli-studio program in My Computer and run iStudio.exe.
- When a USB cable is connected, if you have EmoDio (Samsung's MP3 player software) installed on your computer, the EmoDio software may load first.

using with a Windows computer

Step 2. About the Intelli-studio main window


- When the Intelli-studio starts up, thumbnails of videos and photos are display in the main window.

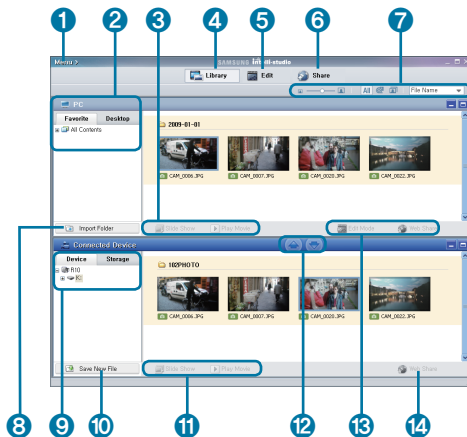

- 1 Menu items
- 2 Selects the Desktop or Favorite on the PC.
- 3 Slide show of the photo files from the PC.
Playback of the video files from the PC.
- 4 Switches to Library of the PC and connected camcorder.
- 5 Switches to Edit mode.
- 6 Switches to Share mode.
- 7 Displays videos or photos as full screen.
Displays photos as thumbnails.
Displays videos as thumbnails.
Sorts the files.
- 8 Imports folders from PC.
- 9 Selects the connected camcorder or storage.
- 10 Saves new files to PC.
- 11 Slide show of the photo files from the connected camcorder.
Playback of the video files from the connected camcorder.
- 12 Saves the selected file to PC.
Saves the selected file to connected camcorder.
- 13 Moves the file selected in the PC to the Edit mode.
Moves the file(s) selected in the PC to the Share mode.
- 14 Moves the file(s) selected in the connected camcorder to the Share mode.

Step 3. Playing back the videos (or photos)


- You can play back the recordings conveniently using the Intelli-studio application.
1. Run the Intelli-studio program.
→ page 127
 2. Click the desired folder to display your recordings.
 - Video (or photo) thumbnails appear on the screen, according to the selected source.
 3. Select the video (or photo) that you want to play, and then double click to play back.
 - Playback starts and playback controls appear.

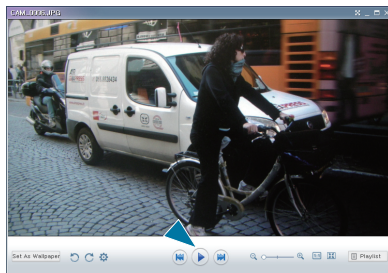

Step 4. Editing the videos (or photos)

With Intelli-studio, you can edit the videos or photos in various ways.

- Select the video (or photo) that you want to edit, and then click the “**EDIT**” icon.


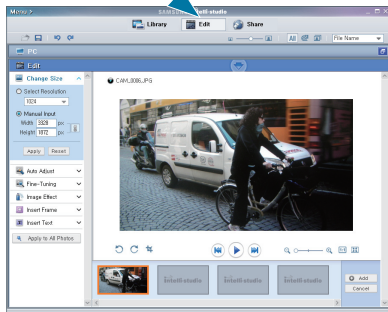


using with a Windows computer

Step 5. Sharing the video/photo images online

Share your contents with the world, by uploading photos and videos directly to a web site with one click.

1. Click **“SHARE”** on the browser.
2. Move the video or photo (drag and drop) to the sharing window for upload.
 - The selected file appears on the sharing window.
3. Click the website you would like to upload files to.
 - You can choose “YouTube,” “Flickr,” or the specified website you want to set for your uploading management.
4. Click **“Upload to Share Site”** to start uploading.
 - A pop up window appears asking your ID and the password.
5. Enter your ID and the password to access.
 - Access to the web site contents can be limited depending on your web access environment.

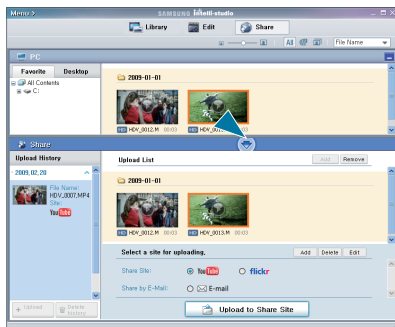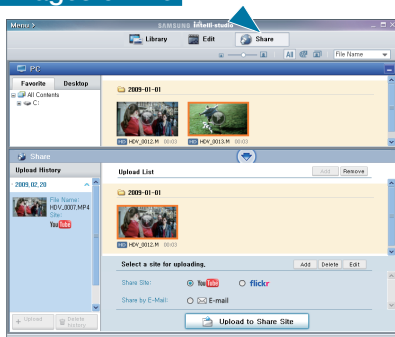


For more information about Intelli-studio use, see the Help Guide by clicking **“Menu”** → **“Help.”**

Other functions with the Intelli-studio

Importing and viewing the video/photo images from your PC

1. Launch the Intelli-studio program by double-clicking the program icon on the desktop screen or connect the camcorder to your PC.
2. Click **"Import Folder"** to import the video or photo files from your PC.

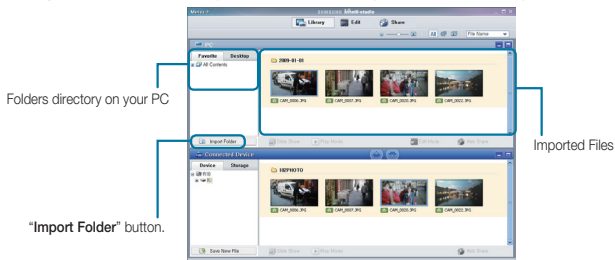

3. The selected video or photo files are imported from your PC, and you can see the files location on the Intelli-studio browser.
4. You can double-click on the file you would like to start playback.




The following is the file format supportable in Intelli-studio:

- Video formats: MP4 (Video: H.264, Audio: AAC), WMV (WMV 7/8/9)
- Photo formats: JPG, GIF, BMP, PNG, TIFF


Exporting the videos/photos to your camcorder.

1. Select the desired files to export.
2. Click  icon to export files to your camcorder.

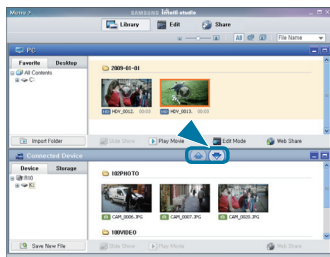

using with a Windows computer

3. The following pop up window appears.
4. Click **"OK"** to export files. The files are saved to your camcorder.

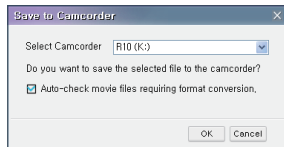





While transferring any file, do not disconnect the USB cable. It may cause damage to the camcorder or computer.



- When storing a video through Intelli-studio, it is automatically stored into an MP4 file that can be played back. However, the only video file format supportable in Intelli-studio can be converted and stored in the camcorder.
- According to the resolution and type of the video, the storing time may differ.
- Photos cannot be stored on the camcorder through Intelli-studio.

Installing Intelli-studio application on the Windows computer

- When the Intelli-studio application is installed on a Windows computer, it will run faster after connecting the camcorder to your computer. Moreover, the application can be updated automatically and run directly in the Windows computer.
- The Intelli-studio application can be installed on a Windows computer as follows: Click the **"Menu" → "Install Intelli-studio on PC."** on the Intelli-studio screen.

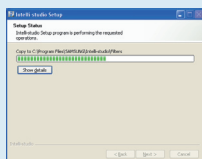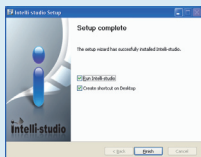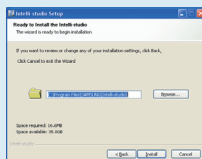
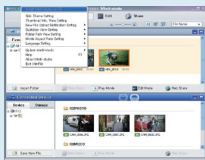


USING AS A REMOVABLE STORAGE DEVICE

You can transfer or copy recorded data to a Windows computer by connecting the USB cable to the camcorder.

Step 1. Viewing the contents of storage media

1. Check out the **“USB Connect: Mass Storage”** setting. ➡ page 103
2. Check out the **“PC Software: Off”** setting
➡ page 99
3. Check out the storage media.
(If you want to record on a memory card, insert the memory card.)
4. Connect the camcorder to the PC with the USB cable.
➡ page 127
 - The “Removable Disk” or “Samsung” window appears on the PC’s screen after a moment.
 - The removable disk appears when connecting a USB.
 - Select “Open folders to view files using Windows Explorer” and click “OK.”
5. The folders in the storage media appear.
 - Different file types are stored in different folders.

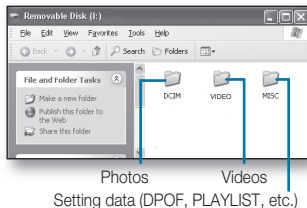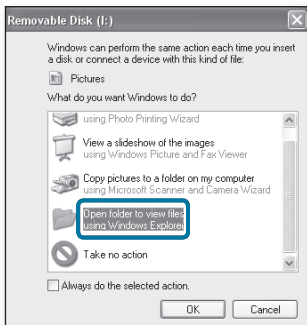

- If the “Removable Disk” window does not appear, confirm the connection (➡ page 133) or perform steps 1 and 2 again.
- When the removable disk does not appear automatically, open the removable disk folder of My Computer.
- If the connected camcorder’s disk drive does not open or the context menu that appears when right clicking your Mouse (open or browse) appears broken, your computer is suspected to be infected by Autorun virus. It is recommended to update the anti-virus software for its latest version.

using with a Windows computer

Structure of folders and files on the storage media


- The folder and file structure for storage media is as follows:
- The file naming follows DCF (Design rule for Camera File System).

Video file (H.264)

- The HD-quality videos have HDV_####.MP4 format.
- The SD-quality videos have SDV_####.MP4 format.
- The HD and SD quality videos will be named as HDE_####.MP4 and SDE_####.MP4 respectively when you edit videos using the PC software.
- The file number automatically increases when a new video file is created.
- Up to 999 files are created in one folder, and new folder is created when the files exceed more than '999.'

Photo file

- As in video files, the file number automatically increases when a new photo file is created.
- A new folder stores files from CAM_0001.JPG.
- The folder name increases in the order of 100PHOTO → 101PHOTO, etc.
- Up to 999 files are created in one folder, and new folder is created when the files exceed more than '999.'

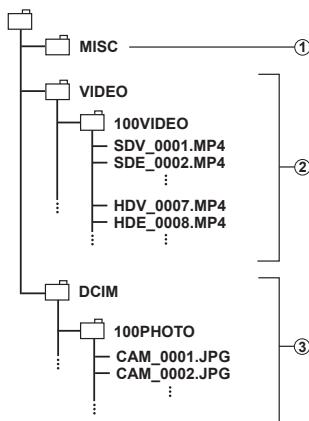

File format

Video files

- Video files are compressed in H.264 format. The file extension is ".MP4."
- Refer to page 62 for the video resolution.

Photo files



- Photo images are compressed in JPEG (Joint Photographic Experts Group) format. The file extension is ".JPG."
- Refer to page 62 for the photo resolution.



- When the 999th file is created in the 999th folder (i.e. HDV_999.MP4 is created in the 999 VIDEO folder), a new folder cannot be created anymore. Set "File No." to "Reset" at this time.
- This camcorder may not recognize modified files. Don't arbitrarily change or remove the folder or file name. It may not be playable.

Step 2. Transferring files from the camcorder to your Windows computer

1. Execute the procedure in “Viewing the contents of storage media.” ➔ page 133
 - The folders in the storage media appear.
2. Create a new folder, enter the folder name, then Double click it.
3. Select the folder to copy, then drag and drop it into the destination folder.
 - The folder is copied from the storage media to the PC.

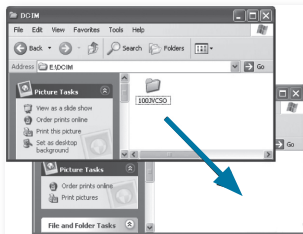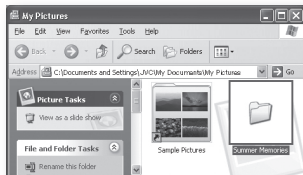

When using a removable disk, all types of files in the computer can be transferred to your camcorder. Note that only the video and photo that have been recorded by your camcorder can be played back. If the files are arbitrarily modified or edited, they cannot be played back.

warning indicators and messages




WARNING INDICATORS AND MESSAGES

Problems may occur because of the following reasons. Check the information and take corrective action.





Battery pack

Message	Icon	Informs that...	Action
Low Battery	-	The battery pack is almost discharged.	<ul style="list-style-type: none">• Replace with a charged battery or connect the AC power adaptor.
Low Battery Connect AC adaptor and try again	-	A function is inoperable due to the exhausted battery.	<ul style="list-style-type: none">• Replace with a charged battery or connect the AC power adaptor.
Check the authenticity of this battery	-	The battery pack can not pass authenticity check.	<ul style="list-style-type: none">• Check whether the battery is authentic and change to new one.• It is recommended that only genuine Samsung batteries are used in this camcorder.

Storage media

Message	Icon	Informs that ...	Action
Insert card		There is no memory card inserted in the memory card slot.	<ul style="list-style-type: none">• Insert a memory card.
Card Full!		There is not enough space to record on memory card.	<ul style="list-style-type: none">• Delete unnecessary files on the memory card.• Back-up files to PC or another storage media and delete files.• Change memory card to another one has enough free space.
Card Locked		The write protection tab on an SD or SDHC card has been set to lock.	<ul style="list-style-type: none">• Release write protection tab.
Unknown		The memory card cannot be recognized in cases of Card Error, Not Formatted or Not Supported Card.	<ul style="list-style-type: none">• Insert the proper memory card that has a supported file format.

WARNING INDICATORS AND MESSAGES

Message	Icon	Informs that ...	Action
Card Error		The memory card has some problem and can not be recognized.	<ul style="list-style-type: none"> • Change memory card with another one.
Not Formatted		The memory card is not formatted.	<ul style="list-style-type: none"> • Format the memory card using the menu.
Not Supported Format		The memory card may have been formatted by another device and may still have existing images on it.	<ul style="list-style-type: none"> • The image format is not supported. Check the supported file format. • Format the memory card using menu item.
Not Supported Card		The memory card is not supported in this camcorder.	<ul style="list-style-type: none"> • Change the memory card with the one recommended.
Low Speed Card. Please record a lower resolution	-	The memory card does not have enough performance to record.	<ul style="list-style-type: none"> • Record video at a lower quality. • Change memory card with a one.

Recording

Message	Icon	Informs that ...	Action
Write Error To recover file, please restart.	-	Some problem occurred while writing data to storage media.	<ul style="list-style-type: none"> • Turn the camcorder's power off and on for data recovery. • If a file is not recovered, format storage media using menus after back-up important files to PC or another storage media.
Release the EASY Q.	-	You can not operate some functions manually when EASY Q is activated.	<ul style="list-style-type: none"> • Release EASY Q function.
Recovering Data... Don't power off and keep card inside.	-	The file was not created normally.	<ul style="list-style-type: none"> • Wait until data recovery is finished. • Never turn off the power or eject memory card during recording.
The number of video files is full. Cannot record video.	-	The number of video files that can be stored is 9,999.	<ul style="list-style-type: none"> • Delete unnecessary files on the memory card. • Back up files to your PC or another storage media and delete files. • Change with another card which has enough free space.

Message	Icon	Informs that ...	Action
The number of photo files is full. Cannot take a photo.	-	The number of photo files that can be stored is 9,999.	<ul style="list-style-type: none"> • Delete unnecessary files on the memory card. • Back up files to your PC or another storage media and delete files. • Change with another card which has enough free space.
File number is full. Cannot record video. Set File No. Reset and format the Card.	-	Folder and file number have reached maximum number and you can not record	<ul style="list-style-type: none"> • Set "File No." to "Reset." and format the card.
File number is full. Cannot take a photo. Set File No. Reset and format the Card	-	Folder and file number have reached maximum number and you can not record.	<ul style="list-style-type: none"> • Set "File No." to "Reset." and format the card.

Playback

Message	Icon	Informs that ...	Action
Total file size is over 3.8GB.	-	Total file size that can be combined is limited to 3.8GB.	<ul style="list-style-type: none"> • Combined files must be less than 3.8GB.
Select 5 files for combine.	-	You can not combine more than 5 different videos into one.	<ul style="list-style-type: none"> • It is possible to combine up to 5 different videos into one.
Different format	-	The files you want to combine have different resolutions.	<ul style="list-style-type: none"> • It is not possible to combine the files that have different resolutions.
Read Error	-	Some problems occurred when reading data from the storage media.	<ul style="list-style-type: none"> • Format the storage media using menus after back up important files to a PC or another storage device.
Corrupted file	-	This file can not be read.	<ul style="list-style-type: none"> • Format the storage media using menus after back up important files to a PC or another storage device.
Not enough free space in Card	-	File editing functions can not be performed because there is not enough free space in the memory card.	<ul style="list-style-type: none"> • Delete unnecessary files on the storage media. • Back up files to a PC or another storage media and delete files.
Cannot edit the time lapse recorded file.	-	The file that is recorded as the Time Lapse REC can not be edited.	<ul style="list-style-type: none"> • It is impossible to edit the file being recorded as the Time Lapse REC.

WARNING INDICATORS AND MESSAGES

USB

Message	Icon	Informs that...	Action
Fail Printer Connecting Change 'USB Connect'	-	A problem occurred when connecting the camcorder via USB to a printer.	<ul style="list-style-type: none">• Check the USB cable.• Try the connection procedure again.• Switch "USB connect" function to "PictBridge."
Fail USB Connecting Change 'USB Connect'	-	A problem occurred when connecting the camcorder via USB to a PC.	<ul style="list-style-type: none">• Check the USB cable.• Try the connection procedure again.• Switch "USB connect" function to "Mass Storage."
Ink Error	-	There is a problem with the ink cartridge.	<ul style="list-style-type: none">• Check the ink cartridge.• Put a new ink cartridge in the printer.
Paper Error	-	There is a problem with the paper.	<ul style="list-style-type: none">• Check the paper in the printer. If there is no paper, insert the paper.
File Error	-	There is a problem with the file.	<ul style="list-style-type: none">• Your camcorder does not support this file format.• Try another file recorded on your camcorder.
Printer Error	-	There is a problem with the printer.	<ul style="list-style-type: none">• Turn the printer's power off and on.• Contact the printer manufacturer's service center.
Print Error	-	A problem occurred during printing.	<ul style="list-style-type: none">• Do not remove power source or eject memory card during printing.



When there is dew condensation, put the camcorder aside for a while before using

- What is dew condensation?
Dew condensation happens when a camcorder is moved to a place where there is a significant temperature difference from the previous place. The Dew condenses on the external or internal parts of the camcorder, and on the reflection lens. When this happens, it may cause a malfunction or damage to the camcorder when using the device with the power on while there is dew condensation.
- What can I do?
Turn the power off and detach the battery pack, and leave it in a dry area for 1~2 hours before using it.
- When does the dew condensation occur?
When the device is relocated to a place with a higher temperature than the previous location, or when using it in a hot area suddenly, it will cause condensation.
 - When recording outside in cold weather during the winter and then using it in indoors.
 - When recording outside in hot weather after being indoors or inside a car where the A/C was running.

TROUBLESHOOTING

Before contacting a Samsung authorized service center, perform the following simple checks. They may save your time and expense of an unnecessary call.

Power


Symptom	Explanation/Solution
The camcorder does not turn on.	<ul style="list-style-type: none">• The battery pack may not be installed on your camcorder. Insert a battery pack to the camcorder.• The inserted battery pack may be discharged. Charge the battery pack or replace it with a charged one.• If you use the AC power adaptor, make sure it is properly connected to a wall outlet.
The power turns off automatically.	<ul style="list-style-type: none">• Is "Auto Power Off" set to "5 min"? If no button is pressed for about 5 minutes, the camcorder is automatically turned off ("Auto Power Off"). To disable this option, change the setting of "Auto Power Off" to "Off." ➔ page102• The battery pack is almost exhausted. Charge the battery pack or replace it with a charged one.
Power cannot be turned off.	<ul style="list-style-type: none">• Remove the battery pack or unplug AC power adaptor, and connect the power supply to the camcorder again before turning it on.
The battery pack is quickly discharged.	<ul style="list-style-type: none">• The temperature is too low.• The battery pack is not fully charged. Charge the battery pack again.• The battery pack reached its lifespan and cannot be recharged. Use another battery pack.

TROUBLESHOOTING

Display

Symptom	Explanation/Solution
The TV screen or LCD display has distorted images or has stripes at the top/ bottom or on the left/right.	<ul style="list-style-type: none">It can occur when recording or viewing a 16:9-ratio image on a 4:3-ratio TV, or vice versa. For more details, see the display specification. ↪page 104
Unknown image appears on the LCD screen.	<ul style="list-style-type: none">The camcorder is in Demo mode. If you do not want to see Demo image, change the setting “Demo” to “Off.” ↪page 106
Unknown indicator appears on the screen.	<ul style="list-style-type: none">A warning indicator or message appears on the screen. ↪pages 136~139
The afterimage remains on the LCD screen.	<ul style="list-style-type: none">This occurs if you disconnect the AC power adaptor or remove the battery pack before turning the power off.
The image on the LCD screen looks dark.	<ul style="list-style-type: none">Ambient light too bright. Adjust the brightness and angle of LCD.Use LCD enhancer function.

Recording

Symptom	Explanation/Solution
Pressing the Recording start/stop button does not start recording.	<ul style="list-style-type: none">Press the MODE button to set Video (). ↪page 21There is not enough free space to record on the storage media.Check if memory card is not inserted or write-protect tab is set to lock.
The actual recording time is less than the estimated recording time.	<ul style="list-style-type: none">The estimated recording time may vary depending on content and features used.When you record an object that moves fast, the actual recording time may be shortened.

Symptom	Explanation/Solution
The recording stops automatically.	<ul style="list-style-type: none"> There is no more free space for recording on the storage media. Back up important files on your PC and format the storage media or delete the unnecessary files. If you make recordings or delete files frequently, the performance of the storage media will be deteriorated. In this case, format the storage media again. If you use the memory card with low writing speed, the camcorder automatically stops recording the videos and the corresponding message appears on the LCD screen.
When recording a subject illuminated by bright light, a vertical line appears.	<ul style="list-style-type: none"> This is not a malfunction.
When the screen is exposed to direct sunlight during recording, the screen becomes red or black for an instant.	<ul style="list-style-type: none"> This is not a malfunction.
During recording, the date/time does not display.	<ul style="list-style-type: none"> "Date/Time Display" is set to "Off." Set the "Date/Time Display" to On. ➡page 92
You cannot record a photo image.	<ul style="list-style-type: none"> Set your camcorder to Photo mode. ➡page 46 Release the lock on the write-protection tab of the memory card if any. The storage media is full. Use a new memory card or format the storage media. ➡page 100 Or remove unnecessary images. ➡page 115
The shutter sound is not heard when you record a photo image.	<ul style="list-style-type: none"> Set "Shutter Sound" to "On."
The beep sound is not heard.	<ul style="list-style-type: none"> Set "Beep Sound" to "On." Beep sound is temporally off while recording videos.

TROUBLESHOOTING

Symptom	Explanation/Solution
There is a time difference between the point where you press Recording start/stop button and the point where the recorded video starts/stops.	<ul style="list-style-type: none"> On your camcorder, there may be a slight time delay between the point when you press Recording start/stop button and the actual point where the recorded video starts/stops. This is not an error.
The aspect ratio (16:9/4:3) of a video cannot be changed.	<ul style="list-style-type: none"> The aspect ratio of a video at 16:9 cannot be changed to 4:3.
Horizontal stripes appear on the images.	<ul style="list-style-type: none"> This occurs when recording images under a fluorescent lamp, sodium lamp, or mercury lamp. This is not a malfunction.

Storage Media

Symptom	Explanation/Solution
Memory card functions are not operable.	<ul style="list-style-type: none"> Insert a memory card into your camcorder properly. ↳ page 37 If you use a memory card formatted on a computer, format it again directly on your camcorder. ↳ page 100
Image cannot be moved or deleted.	<ul style="list-style-type: none"> Release the lock on the write-protect tab of the memory card (SDHC/SD memory card), if any. ↳ page 39 You cannot move or delete the protected images. Release the protection of the image on the device. ↳ page 39
You cannot format the memory card.	<ul style="list-style-type: none"> Release the lock on the write-protect tab of the memory card (SDHC/SD memory card), if any. ↳ page 39 The memory card is not supported on your camcorder or card has some problems.
The data file name is not indicated correctly.	<ul style="list-style-type: none"> The file may be corrupted. The file format is not supported by your camcorder. Only the file name is displayed if the directory structure complies with the international standard.

Adjusting the image during recording

Symptom	Explanation/Solution
Focus does not adjust automatically.	<ul style="list-style-type: none"> • Set "Focus" to "Auto." ➡ page 73 • The recording conditions are not suitable for auto focus. Adjust the focus manually. ➡ page 73 • The lens is dusty on the surface. Clear the lens and check the focus. • Recording is being made in a dark location. Use a light to brighten the area.
The image appears too bright or flickering, or changes in color.	<ul style="list-style-type: none"> • This may occur when you make a recording under a fluorescent sodium or or mercury lamp. Cancel "!SCENE" to avoid or minimize this phenomenon. ➡ page 61
Image's color balance is not natural.	<ul style="list-style-type: none"> • White balance adjustment is required. Adjust to the proper "White Balance." ➡ page 65
The subject passing by the frame appears very quickly.	<ul style="list-style-type: none"> • This is called the focal plane phenomenon. This is not a malfunction. Because of the way the image device (CMOS sensor) reads out video signals, the subject passing by the frame rapidly may appear to bend, depending on the recording condition.

Playback on your camcorder

Symptom	Explanation/Solution
Playback (Play/Pause) function does not work.	<ul style="list-style-type: none"> • Image files recorded using another device may not be played on your camcorder. • Check out the memory card compatibility. ➡ page 38
Photo images stored on a storage media are not displayed in the actual size.	<ul style="list-style-type: none"> • Photo images recorded on other device may not appear in the actual size. This is not an error.
Playback is interrupted unexpectedly.	<ul style="list-style-type: none"> • Check if the AC power adaptor or battery back is properly connected and secure.

TROUBLESHOOTING

Playback on other devices (TV, etc)

Symptom	Explanation/Solution
You cannot view the image or hear the sound from the connected device.	<ul style="list-style-type: none">• Connect the audio of the Component/AV cable to your camcorder or connected device (TV, HD recorder, etc). (Red color- right, White color- left)• The connection cable (Component/AV cable) is not connected properly. Make sure that the connection cable is connected to the proper jack. ➡ pages 119~123• When you are using the Component/AV cable, make sure the red and white plugs of your Component/AV cable are connected. ➡ pages 119~123• This camcorder does not support the audio output signal when the camcorder is connected with TV in the video or photo record mode. The audio output signal is supported as long as the camcorder is connected in the video playback mode. This is not an error.
The image appears distorted on a TV.	<ul style="list-style-type: none">• This happens when TV type of the camcorder is different from the TV. Set the TV type to match the aspect ratio of your TV. ➡ page 104
You cannot view the image or hear the sound from a TV connected using the HDMI cable.	<ul style="list-style-type: none">• Images will not be output from the HDMI jack if the material is copyright protected.

Connecting/Dubbing with other devices (Recorder, PC, Printer, etc)

Symptom	Explanation/Solution
You cannot dub correctly using the HDMI cable.	<ul style="list-style-type: none">• You cannot dub images using the HDMI cable.
You cannot dub correctly using the Component/AV cable.	<ul style="list-style-type: none">• The Component/AV cable is not connected properly. Make sure that the Component/AV cable is connected to the proper jack, i.e. to the input jack of the device used for dubbing images from your camcorder. ➡ page 124
Printouts cannot be made using a PictBridge printer.	<ul style="list-style-type: none">• Your printer may not print images edited on a computer or recorded using other device. This is not an error.

Connecting to a computer

Symptom	Explanation/Solution
The computer does not recognize your camcorder.	<ul style="list-style-type: none"> Disconnect the USB cable from the computer and camcorder, restart the computer, then connect it again correctly.
Cannot play a video file properly on a PC.	<ul style="list-style-type: none"> A video codec is needed to play the file recorded on your camcorder. Install the software provided with your camcorder. ➡ pages 132 Make sure you insert the connector in the correct direction, and connect the USB cable to the USB jack on your camcorder firmly. Disconnect the cable from the computer and camcorder, restart the computer. Connect it again properly. To play back an HD video file, a computer with better specification is required. Check a computer with recommended specification. ➡ page 151
Intelli-studio does not function properly.	<ul style="list-style-type: none"> Exit the Intelli-studio application, and restart the Windows computer.
Intelli-studio is not performed.	<ul style="list-style-type: none"> Set PC Software to On in the Settings menu or install Intelli-studio in the computer. ➡ pages 125~135
The image or sound on your camcorder is not played on your computer properly.	<ul style="list-style-type: none"> Video playback or sound may stop temporarily depending on your computer. The video or sound copied to your computer is not affected. If your camcorder is connected to a computer that does not support Hi-speed USB (USB2.0), the image or sound may not be played correctly. The image and sound copied to your computer are not affected.
The playback screen is paused or distorted.	<ul style="list-style-type: none"> Check the system requirements to play a video. Exit other all applications running on the current computer. If a recorded video is played on your camcorder connected to a computer, the image may not play smoothly, depending on the transfer speed. Please copy the file to your PC, and then play it back.

TROUBLESHOOTING

Overall operations

Symptom	Explanation/Solution
The date and time are incorrect.	<ul style="list-style-type: none">Has the camcorder been left unused for a long period of time? The backup built-in rechargeable battery may be discharged. ➡ page 35

Menu items that cannot be used at the same time

Symptom	Cannot use	Because of the following settings
Menu items are grayed out	Super C.Nite, 3D-NR	"Slow Motion."
	Shutter	"Cont. Shot:High Speed"

- You cannot select grayed items in the current recording/playback mode.
- There are some functions you cannot activate simultaneously.
The list shown above shows examples of unworkable combinations of functions and menu items.
- Menu and quick menu cannot be used in EASY Q mode.
- The following functions cannot be used during video recording:
"Resolution," "Slow Motion," "Fader: In/In-Out," "MIC Level," "Digital Zoom,"
"Self Timer," "Time Lapse REC," "Wind Cut," "White Balance: Custom WB," "3D-NR,"
"Aperture."
- Some functions cannot be used at the same time. In this case, a message appears and asks if you accept that the related function is disabled. Touch "Yes," to disable the related function setting and then continue the menu setting as you desired.

maintenance & additional information

MAINTENANCE

Your camcorder is a product of superior design and craftsmanship and should be treated with care.

The suggestions below will help you fulfill any warranty obligations and allow you to enjoy this product for many years.

- For safekeeping of the camcorder, turn off the camcorder.
 - Remove the battery pack and AC power adaptor. ➔ pages 26~27
 - Remove the memory card. ➔ page 37
-

Cautions when storing

- **Do not leave the camcorder in a place where the temperature is very high for a long period of time:**
The temperature inside a closed vehicle or trunk can become very high in a hot weather. If you leave the camcorder in such a place, it could malfunction or the case could be damaged. Do not expose the camcorder to a direct sunlight or place it near a heater.
- **Do not store the camcorder in a place where the humidity is high or in a dusty place:**
Dust entering the camcorder could cause a malfunction. If humidity is high, the lens could become moldy, and the camcorder could become inoperative. It is recommended that you put the camcorder in a box together with a small silica bag when storing it in a closet, etc.
- **Do not store the camcorder in a place subject to strong magnetism or intense vibration:**
This could cause malfunctions.
- **Detach the battery pack from the camcorder and store it in a cool place:**
Leaving the battery pack attached or storing it at a high temperature could shorten its life.

Cleaning the camcorder

Before cleaning, turn off the camcorder and remove the battery pack and AC power adaptor.

- **To clean the exterior**
 - Wipe gently with a soft dry cloth. Do not apply excessive force when cleaning, gently rub the surface.
 - Do not use benzene or thinner to clean the camcorder. The coating of exterior could peel off or the case could deteriorate.
- **To fix the case the LCD screen**
Wipe gently with a soft dry cloth. Be careful not to damage the monitor.
- **To clean the lens**
Use an optional air blower to blow out dirt and other small objects. Do not wipe the lens with cloth or your fingers.
If necessary, wipe gently with lens with a paper.
 - Mold may form if the lens is left dirty.
 - If the lens looks dim, turn off the camcorder and leave it for about 1 hour.

ADDITIONAL INFORMATION

Storage media

- **Be sure to follow the guidelines below to prevent corruption or damage to your recorded data.**
 - Do not bend or drop the storage media, or subject it to strong pressure, jolts or vibrations.
 - Do not splash the storage media with water.
 - Do not use, replace, or store the storage media in locations that are exposed to a strong static electricity or electrical noise.
 - Do not turn off the camcorder power or remove the battery or AC power adaptor during recording, playback, or when accessing the storage media.
 - Do not bring the storage media near to objects that have a strong magnetic field or that emit strong electromagnetic waves.
 - Do not store the storage media in locations with high temperature or high humidity.
 - Do not touch the metal parts.
- **Copy the recorded files to your PC. Samsung shall not be responsible for any lost data. (It is recommended that you copy the data from your PC to other media for storage.)**
- **A malfunction may cause the storage media to fail to operate properly. Samsung will not provide any compensation for any lost contents.**
- **Refer to pages 38~39 for details.**

LCD screen

Before cleaning, turn off the camcorder and remove the battery pack and AC power adaptor.

- **To clean the exterior**
 - Do not push it too hard or knock it on anything.
 - Do not place the camcorder with the LCD screen facing the bottom.
- **To prolong the service life, avoid rubbing it with a coarse cloth.**
- **Be aware of the following phenomena for LCD screen use. They are not malfunctions.**
 - While using the camcorder, the surface around the LCD screen may heat up.
 - If you leave power on for a long time, the surface around the LCD screen becomes hot.

USING YOUR CAMCORDER ABROAD

- **Each country or region has its own electric and color systems.**
- **Before using your camcorder abroad, check the following items.**
- **Power sources**

The provided AC adaptor features automatic voltage selection in the AC range from 100 V to 240 V.

You can use your camcorder in any countries/regions using the AC power adaptor supplied with your camcorder within the AC 100 V to 240 V, 50/60 Hz range.

Use a commercially available AC plug adaptor, if necessary, depending on the design of the wall outlet.

- **Viewing videos recorded with HD (high definition) image quality**

In countries/regions where 720/60p is supported, you can view the images with the same HD (high definition) image quality as that of the recorded images. You need an **NTSC**-system-based and 720/60p compatible TV (or monitor) with an HDMI or Component cable connected.

- **Viewing videos recorded with SD (standard definition) image quality**

To view images recorded with SD (standard definition) image quality, you need an NTSC-system-based TV with Audio/Video input jacks. A component cable or Multi-AV cable connected.

- **On TV color systems**

Your camcorder is an **NTSC**-system-based camcorder.

If you want to view your recordings on a TV or to copy it to an external device, it must be an **NTSC**-system-based TV or an external device and have the appropriate Audio/Video jacks.

Otherwise, you may need to use a separate video format transcoder (NTSC-PAL format converter).

NTSC-compatible countries/regions

Bahamas, Canada, Central America, Japan, Korea, Mexico, Philippines, Taiwan, United States of America, etc.

PAL-compatible countries/regions

Australia, Austria, Belgium, Bulgaria, China, CIS, Czech Republic, Denmark, Egypt, Finland, France, Germany, Greece, Great Britain, Holland, Hong Kong, Hungary, India, Iran, Iraq, Kuwait, Libya, Malaysia, Mauritius, Norway, Romania, Saudi Arabia, Singapore, Slovak Republic, Spain, Sweden, Switzerland, Syria, Thailand, Tunisia, etc.



You can make recordings with your camcorder and view pictures on the LCD screen from anywhere in the world.

specifications

Model name	HMX-R10SN, HMX-R10BN	
System	Video signal Picture compression format Audio compression format Image device Lens Focal length	NTSC H.264 (MPEG-4.AVC) ACC (Advanced Audio Coding) 1/2.33" 9.15M Pixel CMOS F3.5 - F3.7, 5x optical zoom (8x Intelli) 76.4~382 mm (Only Lens) 47.7~382 mm (With Intelli Zoom)
LCD screen	Size/dot number LCD screen method	2.7" Wide Touch LCD TFT LCD
Connectors	Composite output Component output HDMI output Audio output USB output	1Vp-p (75 Ω terminated) Y: 1 Vp-p, 75 Ω , Pb/Pr, Cb/Cr: 0.350Vp-p, 75 Ω C type connector -7.5 dBs (600 Ω terminated) USB 2.0
General	Power source Power source type Power consumption (Recording) Operating temperature Storage temperature Storage media External dimensions (WxHxD) Weight Internal MIC	DC 5 V, Lithium Ion battery pack 3.6 V Lithium Ion battery pack, Power supply (100 V ~ 240 V) 50/60 Hz 3W (LCD on) 0 °~40 °C (32 °F~104 °F) -20 °C ~ 60 °C (-4 °F ~ 140 °F) a memory card (SD/SDHC) (Optional) Width 38.3 mm (1.50 inches), Height 56.8 mm (2.23 inches), Length 128.2 mm (5.04 inches) 229 g (0.50 lb, 8.07 oz) (Except for Lithium ion battery pack) Omni-directional stereo microphone

※ These technical specifications and design may be changed without notice.

warranty

SAMSUNG LIMITED WARRANTY

SAMSUNG Electronics America Inc. (SEA), warrants that this product is free from defective material and workmanship.

SEA further warrants that if product fails to operate properly within the specified warranty period and the failure is due to improper workmanship or defective material, SEA will repair or replace the product at its option.

All warranty repairs must be performed by a SEA authorized service center. The name and address of the location nearest you can be obtained by calling toll free: 1-800 SAMSUNG (1-800-726-7864).

Labor

90 days carry-in

Parts

1 year

On carry-in models, transportation to and from the service center is the customer's responsibility.

The original dated sales receipt must be retained by the customer and is the only acceptable proof of purchase.

It must be presented to the authorized service center.

EXCLUSIONS (WHAT IS NOT COVERED)

This warranty does not cover damage due to accident, fire, flood and/or other acts of God; misuse, incorrect line voltage, improper installation, improper or unauthorized repairs, commercial use, or damage that occurs in shipping.

Exterior and interior finish, lamps, and glass are not covered under this warranty.

Customer adjustments which are explained in the instruction manual are not covered under the terms of this warranty.

This warranty will automatically be voided for any unit found with a missing or altered serial number. This warranty is valid only on products purchased in the United States and Puerto Rico.

Some States do not allow the exclusions or limitations of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights which vary from State to State.



If you have any questions or comments relating to Samsung products, please contact the SAMSUNG customer care center Samsung Electronics America, inc.

1-800-SAMSUNG (726-7864)

www.samsung.com/us



RoHS compliant

Our product complies with "The Restriction Of the use of certain Hazardous Substances in electrical and electronic equipment", and we do not use the 6 hazardous materials- Cadmium(Cd), Lead (Pb), Mercury (Hg), Hexavalent Chromium (Cr +6), Poly Brominated Biphenyls (PBBs), Poly Brominated Diphenyl Ethers(PBDEs)- in our products.